
Remove one default antenna from the wireless device and start to assemble!


## **Wall mount**

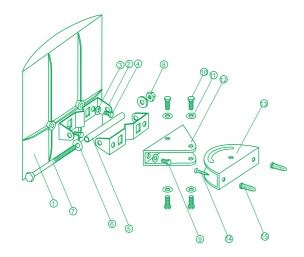

 
## **Installation Note:**

Required parts for wall mounting:

- 1. ANT-1400 antenna body with 2 screw holes
- 2. M-shaped metal fixing
- 3. spring washers 8mm
- 4. bolts M8 x 12
- 5. steel tubes
- 6.8mm washer
- 7. bolt M8 x 110
- 8. nut M8 with lock washer
- 9. bolts M8 x16 with lock washer, washers and nuts
- 10. bolts M6 x10 with washers
- 11.6mm washers
- 12. triangular stand
- 13. half-round metal stand
- 14. wall screws
- 15. plastic wall anchor

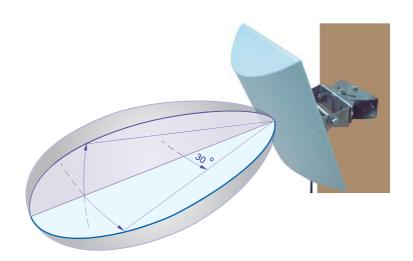





Vertical coverage

| Frequency band   | 2400-2500 MHz      |
|------------------|--------------------|
| Antenna gain     | 14 dBi             |
| VSWR             | 1.5 max            |
| Polarization     | Linear vertical    |
| HPBW / H-plane   | <b>30</b> Q        |
| HPBW / E-plane   | 30°                |
| Impedence        | 50 Ohms            |
| Dimensions LxWxH | 240x240x69 mm      |
| Weight           | 825g without joint |

## **Package Contents:**

- ANT24-1400 Antenna
- Extension Cable (50cm)
- Mounting Kit
- Surge protector
- Water-proof tape
- Quick Installation Guide

## D-Link ANT24-1400 Outdoor Directional Panel Antenna

