

DAP-2690

Version 3.11

Wireless N

# Dual Band PoE Access Point

## User Manual

Business Class Networking

# Table of Contents

<b>Product Overview.....</b>	<b>4</b>	VLAN Port List.....	35
Package Contents.....	4	VLAN Add/Edit.....	36
System Requirements.....	4	PVID Setting.....	37
Introduction .....	5	Intrusion.....	38
Features and Benefits.....	6	Schedule .....	39
Wireless Basics .....	7	Internal RADIUS Server .....	40
<b>Installation .....</b>	<b>9</b>	ARP Spoofing Prevention .....	41
Installation Considerations .....	9	Bandwidth Optimization .....	42
Four Operational Modes .....	10	AP Array.....	44
Connect to your Network.....	11	AP Array Scan .....	44
<b>Configuration.....</b>	<b>13</b>	Configuration Settings.....	45
Wireless Settings.....	15	Auto-RF.....	49
Access Point Mode .....	15	Load Balance .....	50
WDS with AP Mode .....	17	Captive Portal.....	51
WDS Mode .....	19	Authentication Settings-Web Redirection Only ..	51
Wireless Client Mode.....	21	Authentication Settings- Username/Password....	52
WPA-Personal Authentication.....	23	Authentication Settings- Passcode .....	53
WPA-Enterprise Authentication.....	24	Authentication Settings- Remote RADIUS.....	54
802.1X authentication.....	25	Authentication Settings- LDAP .....	55
LAN .....	26	AAuthentication Settings- POP3.....	56
IPv6 .....	27	Login Page Upload .....	57
Advanced Settings.....	28	IP Filter Settings.....	58
Performance .....	28	MAC Bypass.....	59
Wireless Resource Control.....	30	DHCP Server .....	60
Multi-SSID.....	32	Dynamic Pool Settings.....	60
VLAN Settings .....	34	Static Pool Setting .....	62

## Table of Contents

Current IP Mapping List.....	63	Configuration File .....	81
Filters.....	64	Time and Date.....	82
Wireless MAC ACL .....	64	Configuration.....	83
WLAN Partition .....	65	Save and Activate .....	83
Traffic Control.....	66	Discard Changes .....	83
Uplink/Downlink Setting .....	66	System .....	84
QoS.....	67	System Settings.....	84
Traffic Manager.....	68	Help .....	85
Status .....	69	Using the Console Port.....	86
Device Information .....	69	<b>Troubleshooting .....</b>	<b>89</b>
Client Information .....	70	<b>Technical Specifications .....</b>	<b>92</b>
WDS Information .....	71	<b>Antenna Pattern .....</b>	<b>97</b>
Channel Analyze .....	72	<b>Central WiFiManager .....</b>	<b>98</b>
Stats .....	73		
Ethernet.....	73		
Wireless Traffic Stats.....	74		
Log .....	75		
View Log.....	75		
Log Settings.....	76		
Maintenance .....	77		
Administrator Settings.....	77		
Limit Administrator .....	77		
System Name Settings .....	77		
Login Settings .....	78		
Console Settings .....	78		
SNMP Settings .....	79		
Ping Control Setting .....	79		
Central WiFiManager Settings.....	79		
Firmware and SSL Certification Upload.....	80		

# Package Contents

- DAP-2690 802.11n Power over Ethernet (PoE) Access Point
- CD with manual and warranty
- Ethernet Cable
- Mounting Plate
- Mounting Hardware
- Console Cable
- Install Guide

NOTE no PSU supplied. To power the units use an D-Link PoE switch or the D-Link DPE-101GI PoE injector.

**Warning:** Using a power adapter with different specifications than the one included with the DAP-2690 will cause damage and void the warranty for this product. If any of the above items are missing, please contact your reseller.

# System Requirements

<b>Network Requirements</b>	<ul style="list-style-type: none"><li>• IEEE 802.11n/g wireless clients (AP/bridge modes)</li><li>• IEEE 802.11n/g wireless router or access point (client mode)</li></ul>
<b>Web-based Configuration Utility Requirements</b>	<p><b>Computer with the following:</b></p> <ul style="list-style-type: none"><li>• Windows®, Macintosh, or Linux-based operating system</li></ul> <p><b>Browser Requirements:</b></p> <ul style="list-style-type: none"><li>• Internet Explorer Version 7.0, Chrome 12, Safari 4, or Firefox 12 and above (for web-based configuration)</li></ul>



# Introduction

D-Link, an industry pioneer in wireless networking, introduces a solution for businesses seeking to deploy next generation draft 802.11n LANs. D-Link unveils its new Wireless N Dual Band PoE Access Point (DAP-2690), designed specifically for business-class environments such as large or enterprise corporations to provide secure and manageable dual band wireless LAN options for network administrators.

## **Versatile Access Point**

The Wireless N Dual Band PoE Access Point allows network administrators to deploy a highly manageable and extremely robust dual band wireless network. All three dual band antennas are detachable and can provide optimal wireless coverage in either 2.4GHz (802.11g and 802.11n) or 5GHz (802.11a and 802.11n) bands. Enclosed in a plenum-rated metal chassis, the Wireless N Dual Band PoE Access Point adheres to strict fire codes for placement in air passageways. For advanced installations, this new high-speed Access Point has integrated 802.3af Power over Ethernet (PoE) support, allowing installation of this device in areas where power outlets are not readily available.

## **Enhanced Performance**

The Wireless N Dual Band PoE Access Point delivers reliable wireless performance with maximum wireless signal rates of up to 300Mbps in either the 2.4GHz or 5GHz wireless band. This, coupled with support for Wi-Fi Multimedia™ (WMM) Quality of Service features, makes it an ideal access point for audio, video, and voice applications. Additionally, the DAP-2690 supports load balance features to ensure maximum performance.

## **Security**

To help maintain a secure wireless network, the Wireless N Dual Band PoE Access Point provides the latest in wireless security technologies by supporting both Personal and Enterprise versions of WPA and WPA2 (802.11i) with support for RADIUS server backend. To further protect your wireless network, MAC Address Filtering, Wireless LAN segmentation, Disable SSID Broadcast, Rogue AP Detection, and Wireless Broadcast Scheduling are also included.

The Wireless N Dual Band PoE Access Point includes support for up to 16 VLANs for implementing multiple SSIDs to further help segment users on the network. The DAP-2690 also includes a wireless client isolation mechanism, which limits direct client-to-client communication.

# Features and Benefits

- Four different operation modes - Capable of operating in one of four different operation modes to meet your wireless networking needs: Access Point, WDS with AP, WDS, or Wireless Client.
- Faster wireless networking with the 802.11n standard to provide a maximum wireless signal rate of up to 300 Mbps\*.
- Compatible with the 802.11b standard to provide a wireless data rate of up to 11 Mbps, allowing you to migrate your system to the 802.11n and 802.11g standards on your own schedule without sacrificing connectivity.
- Compatible with the 802.11g standard to provide a wireless data rate of up to 54 Mbps in the 2.4 GHz frequency range.
- Compatible with the 802.11a standard to provide a wireless data rate of up to 54 Mbps in the 5 GHz frequency range.
- Better security with WPA - The DAP-2690 can securely connect wireless clients on the network using WPA (Wi-Fi Protected Access) to provide a much higher level of security for your data and communications than its previous versions.
- Central WiFiManager management software - The real-time display of the network's topology and AP's information makes network configuration and management quick and simple.
- SNMP for management - The DAP-2690 is not just fast, but also supports SNMP v.3 for better network management. Superior wireless AP manager software is bundled with the DAP-2690 for network configuration and firmware upgrade. Systems administrators can also set up the DAP-2690 easily with the Web-based configuration.
- Utilizes OFDM technology (Orthogonal Frequency Division Multiplexing).
- Supports 802.3af Power over Ethernet.
- Includes one 10/100/1000 Ethernet port.
- Operates in the 2.4~2.5 GHz or 5.15~5.85 GHz\*\* frequency ranges.
- Web-based interface for managing and configuring.

\*Maximum wireless signal rate derived from IEEE Standard 802.11g, 802.11a and 802.11n specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental conditions will adversely affect wireless signal range.

\*\*Please note that operating frequency ranges vary depending on the regulations of individual countries and jurisdictions. The DAP-2690 isn't supported in the 5.25~5.35 GHz and 5.47 ~ 5.725 GHz frequency ranges in some regions.

# Wireless Basics

D-Link wireless products are based on industry standards to provide high-speed wireless connectivity that is easy to use within your home, business or public access wireless networks. D-Link wireless products provides you with access to the data you want, whenever and wherever you want it. Enjoy the freedom that wireless networking can bring to you.

WLAN use is not only increasing in both home and office environments, but in public areas as well, such as airports, coffee shops and universities. Innovative ways to utilize WLAN technology are allowing people to work and communicate more efficiently. Increased mobility and the absence of cabling and other types of fixed infrastructure have proven to be beneficial to many users.

Wireless adapter cards used on laptop and desktop systems support the same protocols as Ethernet adapter cards, allowing wireless users to use the same applications as those used on a wired network.

*People use WLAN technology for many different purposes:*

**Mobility** - Productivity increases when people can have access to data in any location within the operating range of their WLAN. Management decisions based on real-time information can significantly improve the efficiency of a worker.

**Low implementation costs** - WLANs are easy to set up, manage, change and relocate. Networks that frequently change can benefit from WLAN's ease of implementation. WLANs can operate in locations where installation of wiring may be impractical.

**Installation and network expansion** - By avoiding the complications of troublesome cables, a WLAN system can be fast and easy during installation, especially since it can eliminate the need to pull cable through walls and ceilings. Wireless technology provides more versatility by extending the network beyond the home or office.

**Inexpensive solution** - Wireless network devices are as competitively priced as conventional Ethernet network devices. The DAP-2690 saves money by providing users with multi-functionality configurable in four different modes.

**Scalability** - Configurations can be easily changed and range from Peer-to-Peer networks, suitable for a small number of users to larger Infrastructure networks to accommodate hundreds or thousands of users, depending on the number of wireless devices deployed.

### Standards-Based Technology

The DAP-2690 Wireless Access Point utilizes the 802.11a, 802.11b, 802.11g, and 802.11n standards.

The IEEE 802.11n standard is an extension of the 802.11a, 802.11b, and 802.11g standards that came before it. It increases the maximum wireless signal rate up to 300 Mbps\* within both the 2.4 GHz and the 5 GHz bands, utilizing OFDM technology.

This means that in most environments - within the specified range of this device - you will be able to transfer large files quickly, or even watch a movie in MPEG format over your network without noticeable delays. This technology works by transmitting high-speed digital data over a radio wave utilizing OFDM (Orthogonal Frequency Division Multiplexing) technology. OFDM works by splitting the radio signal into multiple smaller sub-signals that are then simultaneously transmitted at different frequencies to the receiver. OFDM reduces the amount of crosstalk (interference) in signal transmissions.

The D-Link DAP-2690 will automatically sense the best possible connection speed to ensure the greatest possible speed and range.

**Note:** *802.11n offers the most advanced network security features available today, including WPA.*

\*Maximum wireless signal rate derived from IEEE Standard 802.11g, 802.11a and 802.11n specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental conditions will adversely affect wireless signal range.

# Installation

## Installation Considerations

The D-Link wireless device lets you access your network using a wireless connection from virtually anywhere within the operating range of your wireless network. Keep in mind, however, that the number, thickness and location of walls, ceilings, or other objects that the wireless signals must pass through, may limit the range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing wireless range is to follow these basic guidelines:

1. Keep the number of walls and ceilings between the D-Link device and other network devices to a minimum - each wall or ceiling can reduce your adapter's range from 3-90 feet (1-30 meters.) Position your devices so that the number of walls or ceilings is minimized.
2. Be aware of the direct line between network devices. A wall that is 1.5 feet thick (.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle it looks over 42 feet (14 meters) thick! Position devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
3. Building Materials make a difference. A solid metal door or aluminum studs may have a negative effect on range. Try to position access points, wireless routers, and computers so that the signal passes through drywall or open doorways. Materials and objects such as glass, steel, metal, walls with insulation, water (fish tanks), mirrors, file cabinets, brick, and concrete will degrade your wireless signal.
4. Keep your product away (at least 3-6 feet or 1-2 meters) from electrical devices or appliances that generate RF noise.
5. If you are using 2.4GHz cordless phones or X-10 (wireless products such as ceiling fans, lights, and home security systems), your wireless connection may degrade dramatically or drop completely. Make sure your 2.4GHz phone base is as far away from your wireless devices as possible. The base transmits a signal even if the phone is not in use.

# Four Operational Modes

<b>Operation Mode</b> (Only supports 1 mode at a time)	<b>Function</b>
Access Point (AP)	Create a wireless LAN
WDS with AP	Wirelessly connect multiple networks while still functioning as a wireless AP
WDS	Wirelessly connect multiple networks
Wireless Client	AP acts as a wireless network adapter for your Ethernet enabled device

# Connect to your Network

To power the access point, you can use one of the following 2 methods:

**Method 1** - Use if you have a PoE switch.

**Method 2** - Use if you do not have a PoE switch and do not have a power outlet near the location of the access point.


## Method 1

1. Connect one end of your Ethernet cable into the LAN (PoE) port on the DAP-2690 and then connect the other end to your PoE switch.



### Method 2

1. Connect one end of an Ethernet cable into the **Data In** port on the PoE base unit and the other end into one port on your switch, router, or computer.
2. Connect one end of an Ethernet cable into the **P+Data Out** port on the PoE base unit and the other end into the **LAN (PoE)** port on the DAP-2690 access point.
3. Use the supplied power adapter. Connect the power adapter to the **Power In** receptor on the PoE adapter.
4. Connect the power cable to the power adapter and then connect the other end into a power outlet.
5. Purchase separately a DPE-101GI PoE injector if you need to connect the Access Point without a PoE Switch.

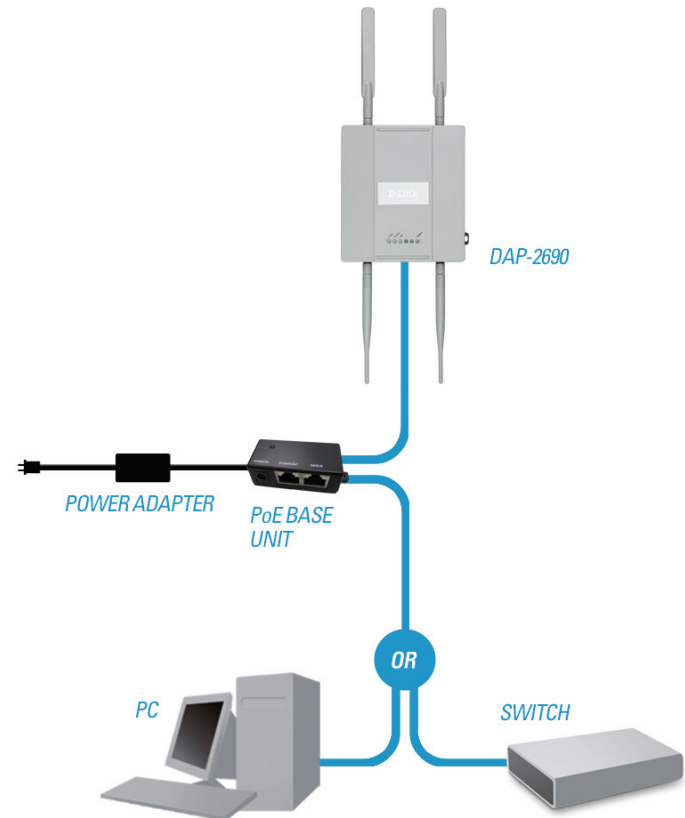



# Configuration


To configure the DAP-2690, use a computer that is connected to the DAP-2690 with an Ethernet cable.

**Step 1** - Disable the **Access the Internet using a proxy server** function. To disable this function, go to **Control Panel > Internet Options > Connections > LAN Settings** and uncheck the enable box.

**Step 2** - Open your web browser.

**Step 3** - Type the IP address of the DAP-2690 in the address field (**http://192.168.0.50**) and press **Enter**. Make sure that the IP addresses of the DAP-2690 and your computer are in the same subnet.

**Note:** If you have changed the default IP address assigned to the DAP-2690, make sure to enter the correct IP address.

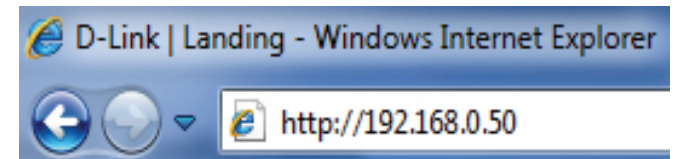

**Step 4** - Enter admin for the User Name and then click **Login**. By default the password is blank.

**Note:** If you have changed the password, make sure to enter the correct password.

A screenshot of the D-Link DAP-2690 web interface. The top header is dark blue with the "D-Link" logo on the left and "DAP-2690" on the right. Below the header is a light blue box containing a "LOGIN" section. The "LOGIN" section has a title bar and the text "Login to the Access Point:". Below this text are two input fields: "User Name" with the value "admin" and "Password" which is empty. To the right of the "Password" field is a "Login" button.


## Section 3 - Configuration

 After successfully logging into the DAP-2690 the following window will appear:


When making changes on most of the configuration windows in this section, use either the **Apply** button or the **Save** button to save your configuration changes.




Click the **Apply** button to configure changes.



Click the **Save** button to configure changes.

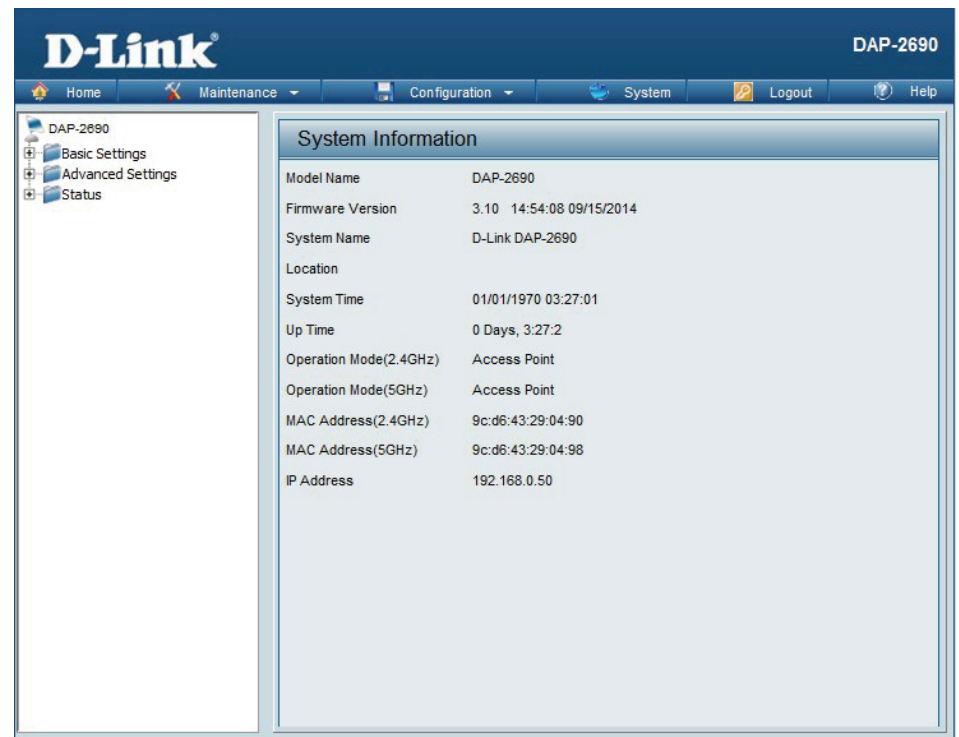

Alternatively, click the **Save and Activate** option on the Configuration drop-down menu at the top of each DAP-2690 window. This will cause the DAP-2690 to save and reboot.

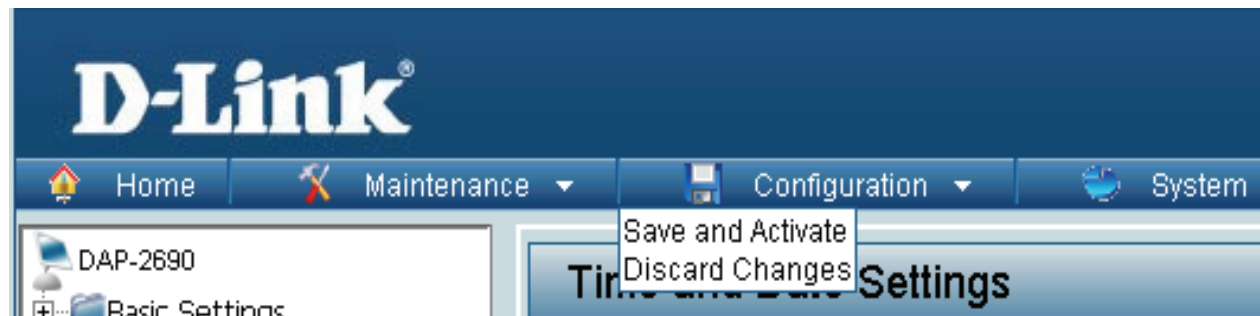

# Wireless Settings

## Access Point Mode

In Access Point mode, the DAP-2690 functions as a wireless AP. After configuring the desired settings, click the **Save** button.

**Wireless Band:** Select either **2.4 GHz** or **5 GHz** from the drop-down menu.

**Mode:** Select **Access Point** from the drop-down menu. The other three choices are **WDS with AP**, **WDS**, and **Wireless Client**.

**Network Name (SSID):** Service Set Identifier (SSID) is the name designated for a specific wireless local area network (WLAN). The SSID's default setting is **dlink**. The SSID can easily be changed to connect to an existing wireless network or to establish a new wireless network. The SSID can be up to 32 characters and is case-sensitive.


**SSID Visibility:** **Enable** or **Disable** SSID visibility. Enabling this feature broadcasts the SSID across the network, thus making it visible to all network users.

**Auto Channel Selection:** Enabling this feature automatically selects the channel that provides the best wireless performance. **Enable** is set by default. The channel selection process only occurs when the AP is booting up.

**Channel:** All devices on the network must share the same channel. To change the channel, first toggle the Auto Channel Selection setting to **Disable**, and then use the drop-down menu to make the desired selection.

**Note:** The wireless adapters will automatically scan and match the wireless settings.)

**Channel Width:** Allows selection of the channel width you would like to operate in. **20 MHz** and **Auto 20/40 MHz** allow both 802.11n and non-802.11n wireless devices on your network when the wireless mode is Mixed 802.11 b/g/n in 2.4G and Mixed 802.11 a/n in 5G. When the channel width is set to **Auto 20/40 MHz**, then 802.11n wireless devices are allowed to transmit data using 40 MHz.

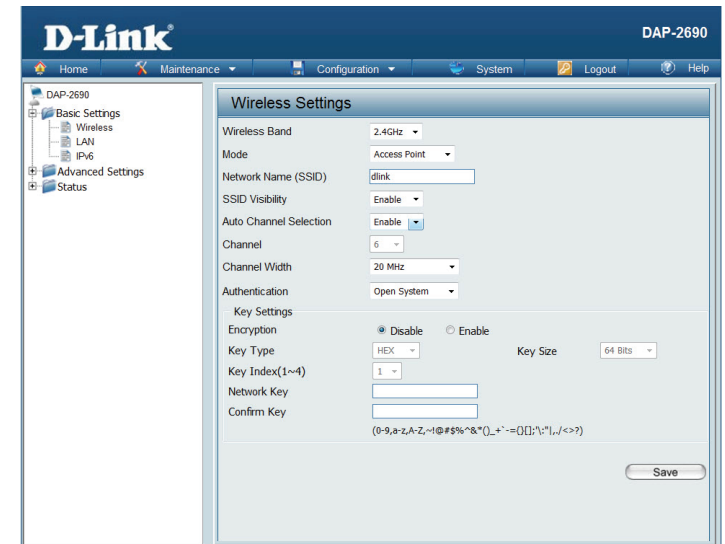

**Authentication:** Select **Open System** to communicate the key across the network.

Select **Shared Key** to limit communication to only those devices that share the same WEP settings. If multi-SSID is enabled, this option is not available.

Select **WPA-Personal** to secure your network using a password and dynamic key changes. No RADIUS server is required.

Select **WPA-Enterprise** to secure your network with the inclusion of a RADIUS server.

Select **802.1X** if your network is using port-based Network Access Control.

For more information about the different types of Authentication offered on the DAP-2690 and the respective settings of each, please go to the first page of the “Authentication” explanations, which begins on page 23.

# WDS with AP Mode

In WDS with AP mode, the DAP-2690 wirelessly connects multiple networks while still functioning as a wireless AP. After completing the desired settings, click the **Save** button to let your changes take effect.

**Wireless Band:** Select either **2.4 GHz** or **5 GHz** from the drop-down menu.

**Mode:** Select **WDS with AP** mode from the drop-down menu.

**Network Name (SSID):** Service Set Identifier (SSID) is the name designated for a specific wireless local area network (WLAN). The SSID's factory default setting is **dlink**. The SSID can easily be changed to connect to an existing wireless network or to establish a new wireless network. The SSID can be up to 32 characters and is case-sensitive.

**SSID Visibility:** **Enable** or **Disable** SSID visibility. Enabling this feature broadcasts the SSID across the network, thus making it visible to all network users.

**Auto Channel Selection:** Enabling this feature automatically selects the channel that provides the best wireless performance. **Enable** is set by default. The channel selection process only occurs when the AP is booting up.

**Channel:** All devices on the network must share the same channel. To change the channel, first toggle the *Auto Channel Selection* setting to **Disable**, and then use the drop-down menu to make the desired selection. **Note:** *The wireless adapters will automatically scan and match the wireless settings.*

**Channel Width:** Allows selection of the channel width you would like to operate in. **20 MHz** and **Auto 20/40 MHz** allow both 802.11n and non-802.11n wireless devices on your network when the wireless mode is Mixed 802.11 b/g/n in 2.4G and Mixed 802.11 a/n in 5G. When the channel width is set to **Auto 20/40 MHz**, then 802.11n wireless devices are allowed to transmit data using 40 MHz.

**D-Link** DAP-2690

Home Maintenance Configuration System Logout Help

**Wireless Settings**

Wireless Band: 2.4GHz

Mode: WDS with AP

Network Name (SSID): dlink

SSID Visibility: Enable

Auto Channel Selection: Disable

Channel: 6

Channel Width: 20 MHz

WDS

Remote AP MAC Address

1. 2. 3. 4.

5. 6. 7. 8.

Site Survey

Scan

CH	RSSI	BSSID	Security	SSID

Authentication: Open System

Key Settings

Encryption: ☒ Disable ☐ Enable

Key Type: HEX Key Size: 64 Bits

Key Index(1~4): 1

Network Key:

Confirm Key:

(0-9,a-z,A-Z,~!@#\$%^&\*()\_+`-={}[];'":'./,<>?)

Save

**Remote AP MAC Address:** Allows selection of the channel width you would like to operate in. **20 MHz** and **Auto 20/40 MHz** allow both 802.11n and non-802.11n wireless devices on your network when the wireless mode is Mixed 802.11 b/g/n in 2.4G and Mixed 802.11 a/n in 5G. 802.11n wireless devices are allowed to transmit data using 40 MHz when the channel width is **Auto 20/40 MHz**.

**Site Survey:** Manually enter the MAC addresses of the APs on your network that will serve as bridges to wirelessly connect multiple networks. You may also click the **Scan** button to search for available wireless networks, then click on the available network that you want to connect to.

**Authentication:** Use the drop-down menu to choose **Open System**, **Shared Key**, or **WPA-Personal**.

Select **Open System** to communicate the key across the network.

Select **Shared Key** to limit communication to only those devices that share the same WEP settings. If multi-SSID is enabled, this option is not available.

Select **WPA-Personal** to secure your network using a password and dynamic key changes. No RADIUS server is required.

For more information about the different types of Authentication offered on the DAP-2690 and the respective settings of each, please go to the first page of the "Authentication" explanations, which begins on page 23.

# WDS Mode

In WDS mode, the DAP-2690 wirelessly connects multiple networks, without functioning as a wireless AP. After completing the desired settings, click the **Save** button to let your changes take effect.

**Wireless Band:** Select either **2.4 GHz** or **5 GHz** from the drop-down menu.

**Mode:** **WDS** is selected from the drop-down menu.

**Network Name** Service Set Identifier (SSID) is the name designated for a (SSID): specific wireless local area network (WLAN). The SSID's factory default setting is **dlink**. The SSID can be easily changed to connect to an existing wireless network or to establish a new wireless network.

**SSID Visibility:** **Enable** or **Disable** SSID visibility. Enabling this feature broadcasts the SSID across the network, thus making it visible to all network users.

**Auto Channel Selection:** Enabling this feature automatically selects the channel that will provide the best wireless performance. This feature is not supported in WDS mode.

**Channel:** All devices on the network must share the same channel. To change the channel, use the drop-down menu to make the desired selection.

**Channel Width:** Allows selection of the channel width you would like to operate in. **20 MHz** and **Auto 20/40 MHz** allow both 802.11n and non-802.11n wireless devices on your network when the wireless mode is Mixed 802.11 b/g/n in 2.4G and Mixed 802.11 a/n in 5G. 802.11n wireless devices are allowed to transmit data using 40 MHz when the channel width is **Auto 20/40 MHz**.

The screenshot shows the D-Link DAP-2690 configuration interface. The top navigation bar includes Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view with Basic Settings, Wireless, LAN, IPv6, Advanced Settings, and Status. The main content area is titled 'Wireless Settings' and contains the following fields:

- Wireless Band:** 2.4GHz
- Mode:** WDS
- Network Name (SSID):** dlink
- SSID Visibility:** Enable
- Auto Channel Selection:** Disable
- Channel:** 6
- Channel Width:** 20 MHz
- WDS Remote AP MAC Address:** A table with 8 input fields numbered 1 through 8.
- Site Survey:** A button labeled 'Scan' and a table with columns CH, RSSI, BSSID, Security, and SSID.
- Authentication:** Open System
- Key Settings:**
  - Encryption:** Disable (selected) or Enable
  - Key Type:** HEX
  - Key Index(1~4):** 1
  - Key Size:** 64 Bits
  - Network Key:** [Input field]
  - Confirm Key:** [Input field]

A 'Save' button is located at the bottom right of the configuration area.

**Remote AP MAC Address:** Enter the MAC addresses of the APs on your network that will serve as bridges to wirelessly connect multiple networks.

**Site Survey:** Click the **Scan** button to search for available wireless networks, then click on the available network that you want to connect with.

**Authentication:** Use the drop-down menu to choose **Open System**, **Shared Key**, or **WPA-Personal**.

Select **Open System** to communicate the key across the network.

Select **Shared Key** to limit communication to only those devices that share the same WEP settings.

Select **WPA-Personal** to secure your network using a password and dynamic key changes. No RADIUS server is required.



# Wireless Client Mode

In Wireless Client mode, the DAP-2690 functions as a wireless client on a wireless network in which an AP already exists. After completing the desired settings, click the **Save** button to let your changes take effect.

**Wireless Band:** Select either **2.4 GHz** or **5 GHz** from the drop-down menu.

**Mode:** **Wireless Client** is selected from the drop-down menu.

**Network Name** Service Set Identifier (SSID) is the name designated for a (SSID): specific wireless local area network (WLAN). The SSID's factory default setting is **dlink**. The SSID can be easily changed to connect to an existing wireless network.

**SSID Visibility:** This option is unavailable in wireless client mode.

**Auto Channel Selection:** Enabling this feature automatically selects the channel that will provide the best wireless performance. This feature is not supported in Wireless Client mode.

**Channel:** The channel used will be displayed, and follow the root AP.

**Channel Width:** This option is unavailable in wireless client mode.

**Captive Profile:** Disable in Wireless Client mode.

**Site Survey:** Click the **Scan** button to search for available wireless networks, then click on the available network that you want to connect with.

**D-Link** DAP-2690

Home Maintenance Configuration System Logout Help

**Wireless Settings**

Wireless Band: 2.4GHz

Mode: Wireless Client

Network Name (SSID): dlink

SSID Visibility: Enable

Auto Channel Selection: Enable

Channel: 6

Channel Width: Auto 20/40 MHz

Site Survey

Scan

CH	RSSI	BSSID	Security	SSID

Authentication: Open System

Key Settings: Disable

Encryption: Disable

Key Type: HEX

Key Index(1~4): 1

Network Key:

Confirm Key:

(0-9,a-z,A-Z,~!@#%&^&\*()\_+~-={}[];'\|,./<>?)

Wireless MAC Clone

Enable:

MAC Source: Auto

MAC Address: : : : : : Scan

MAC Address

Save

**Authentication:** Use the drop-down menu to choose **Open System** or **WPA Personal**.

Select **Open System** to communicate the key across the network.

Select **WPA-Personal** to secure your network using a password and dynamic key changes. No RADIUS server is required.

For more information about the different types of Authentication offered on the DAP-2690 and the respective settings of each, please go to the first page of the Authentication explanations which begins on page 23.

### Wireless MAC Clone

**Enable:** Click the box to enable the Wireless MAC Clone feature. Enabling this option allows the user to manually assign the source MAC address to packets forwarded by the DAP-2690. If disabled, the packet's source MAC address field will be automatically selected as the DAP-2690's MAC address.

**MAC Source:** Use the drop-down menu to select either **Auto** or **Manual**.

**MAC Address:** If you selected **Manual** for the MAC Source above, you can either click the **Scan** button to search for all available devices connected to your DAP-2690's Ethernet port or manually enter a MAC address in the space provided.

## WPA-Personal Authentication

**WPA Mode:** When **WPA-Personal** is selected for Authentication type, you must also select a WPA mode from the drop-down menu: **AUTO (WPA or WPA2)**, **WPA2 Only**, or **WPA Only**. WPA and WPA2 use different algorithms. **AUTO (WPA or WPA2)** allows you to use both WPA and WPA2.

**Cipher Type:** When you select WPA-Personal, you must also select **AUTO**, **AES**, or **TKIP** from the drop-down menu.

**Group Key Update Interval:** Select the interval during which the group key will be valid. The default value of **1800** is recommended.

**PassPhrase:** When you select WPA-Personal, please enter a PassPhrase in the corresponding field.

### Confirm

**PassPhrase:** Retype the Passphrase entered above in the corresponding field.

The screenshot shows the 'Wireless Settings' configuration window. The 'Authentication' dropdown is set to 'WPA-Personal'. Below it, the 'PassPhrase Settings' section is expanded, showing 'WPA Mode' set to 'AUTO (WPA or WPA2)', 'Cipher Type' set to 'Auto', and 'Group Key Update Interval' set to '3600 (Seconds)'. The 'Manual' radio button is selected for key management. The 'Activated From' field is set to 'Sun 00:00'. The 'Time Interval' is set to '1 (1~168)hour(s)'. There are empty text boxes for 'PassPhrase' and 'Confirm PassPhrase'. A notice at the bottom states: 'notice: 8~63 in ASCII or 64 in Hex. (0-9,a-z,A-Z,~!@#\$%^&\*()\_+`-={}|;'\":'./,<>?)'. A 'Save' button is at the bottom right.

## WPA-Enterprise Authentication

**WPA Mode:** When **WPA-Enterprise** is selected, you must also select a WPA mode from the drop-down menu: **AUTO (WPA or WPA2)**, **WPA2 Only**, or **WPA Only**. WPA and WPA2 use different algorithms. **AUTO (WPA or WPA2)** allows you to use both WPA and WPA2.

**Cipher Type:** When WPA-Enterprise is selected, you must also select a cipher type from the drop-down menu: **Auto**, **AES**, or **TKIP**.

**Group Key Update Interval:** Select the interval during which the group key will be valid. The recommended value is **1800**, as a lower interval may reduce data transfer rates.

**Network Access Protection:** Enable or disable Microsoft Network Access Protection. Enabling this will make the DAP-2690 a NAP enforcement point if you are running the Network Policy Server (NPS) service in Windows Server 2008.

**RADIUS Server:** Enter the IP address of the RADIUS server. Click External if the RADIUS server is on your network or Internal if you are using the RADIUS server on the DAP-2690.

**RADIUS Port:** Enter the RADIUS port (**1812** is the default).

**RADIUS Secret:** Enter the RADIUS secret.

**Accounting Mode:** Select if you want to use a different server for accounting.

**Accounting Server:** Enter the IP address of the Accounting server.

**Accounting Port:** Enter the Accounting port (**1813** is the default).

**Accounting Secret:** Enter the Accounting secret.

The screenshot shows the 'Wireless Settings' configuration page. The 'Authentication' dropdown is set to 'WPA-Enterprise'. Under 'RADIUS Server Settings', 'WPA Mode' is set to 'AUTO (WPA or WPA2)', 'Cipher Type' is 'Auto', and 'Group Key Update Interval' is '3600' seconds. The 'Network Access Protection' section has 'Network Access Protection' set to 'Disable'. The 'RADIUS Server Mode' is set to 'External'. The 'Primary RADIUS Server Setting' shows 'RADIUS Server' as an empty field, 'RADIUS Port' as '1812', and 'RADIUS Secret' as an empty field with a password strength indicator. The 'Backup RADIUS Server Setting (Optional)' also shows empty fields for 'RADIUS Server', 'RADIUS Port' (1812), and 'RADIUS Secret'. The 'Primary Accounting Server Setting' has 'Accounting Mode' set to 'Disable', 'Accounting Server' as an empty field, 'Accounting Port' as '1813', and 'Accounting Secret' as an empty field. The 'Backup Accounting Server Setting (Optional)' also shows empty fields for 'Accounting Server', 'Accounting Port' (1813), and 'Accounting Secret'. A 'Save' button is at the bottom right.

**Note:** You can input the secondary RADIUS server and accounting server settings if you have a backup RADIUS and accounting server.

## 802.1X authentication

**Key Update Interval:** Select the interval (in seconds) during which the key will be valid.

**RADIUS Server:** Enter the IP address of the RADIUS server. Click **External** if the RADIUS server is on your network or **Internal** if you are using the RADIUS server on the DAP-2690.

**RADIUS Port:** Enter the RADIUS port (**1812** is the default).

**RADIUS Secret:** Enter the RADIUS secret.

**Accounting Mode:** Select if you want to use a different server for accounting.

**Accounting Server:** Enter the IP address of the Accounting server.

**Accounting Port:** Enter the Accounting port (**1813** is the default).

**Accounting Secret:** Enter the Accounting secret.

**Note:** You can input the secondary RADIUS server and accounting server settings if you have a backup RADIUS and accounting server.

The screenshot shows the 'Wireless Settings' configuration page. The 'Authentication' dropdown is set to '802.1X'. Below this, the 'RADIUS Server Settings' section is expanded, showing a 'Key Update Interval' of 300 seconds. The 'RADIUS Server Mode' is set to 'External'. The 'Primary RADIUS Server Setting' section includes fields for 'RADIUS Server' (empty), 'RADIUS Port' (1812), and 'RADIUS Secret' (empty). The 'Backup RADIUS Server Setting (Optional)' section also includes fields for 'RADIUS Server' (empty), 'RADIUS Port' (1812), and 'RADIUS Secret' (empty). The 'Primary Accounting Server Setting' section includes 'Accounting Mode' (Disable), 'Accounting Server' (empty), 'Accounting Port' (1813), and 'Accounting Secret' (empty). The 'Backup Accounting Server Setting (Optional)' section also includes fields for 'Accounting Server' (empty), 'Accounting Port' (1813), and 'Accounting Secret' (empty). A 'Save' button is located at the bottom right.

# LAN

LAN is short for Local Area Network. This is considered your internal network. These are the IP settings of the LAN interface for the DAP-2690. These settings may be referred to as private settings. You may change the LAN IP address if needed. The LAN IP address is private to your internal network and cannot be seen on the Internet. After completing the desired LAN settings, click the **Save** button to let your changes take effect.

**Get IP From:** Select **Static IP (Manual)** if you do not have a DHCP server on your network, or if you wish to assign a static IP address to the DAP-2690. When **Dynamic IP (DHCP)** is selected, the other fields here will be grayed out. Please allow about 2 minutes for the DHCP client to be functional once this selection is made.


**IP Address:** The default IP address is **192.168.0.50**. Assign a static IP address that is within the IP address range of your network.

**Subnet Mask:** Enter the subnet mask. All devices in the network must share the same subnet mask.

**Default** Enter the IP address of the gateway in your network. If

**Gateway:** there is a router/gateway in your network, please enter its IP address.

**DNS:** Enter a DNS server IP address of your choice. In most cases, enter the LAN IP of your router.

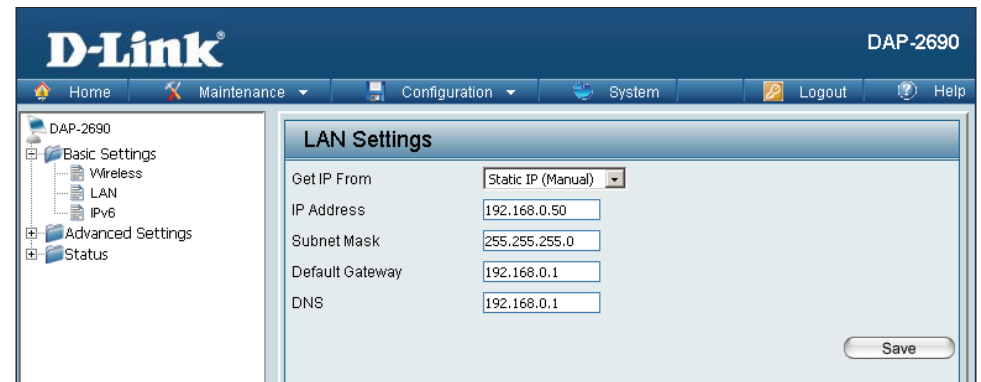

The screenshot shows the D-Link DAP-2690 web interface. The top navigation bar includes links for Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view with 'Basic Settings' (containing Wireless, LAN, and IPv6) and 'Advanced Settings' (containing Status). The main content area is titled 'LAN Settings'. It features a 'Get IP From' dropdown menu set to 'Static IP (Manual)'. Below this are four text input fields: 'IP Address' (192.168.0.50), 'Subnet Mask' (255.255.255.0), 'Default Gateway' (192.168.0.1), and 'DNS' (192.168.0.1). A 'Save' button is located at the bottom right of the form.

# IPv6

The IPv6 function allows you access DAP-2690 using an IPv6 address.


**Enable IPv6:** Check this box to enable IPv6.

**Get IP From:** Select either **Static** to enter your own IP address or **Auto** to be automatically assigned by a DHCP server or IPv6 gateway.

**IP Address:** Assign an IPv6 IP address.

**Prefix:** The Prefix is used to determine what subnet an IP address belongs to. It must be 0~128..

**Default Gateway:** Enter the default gateway address. This is usually the IP address of your router.

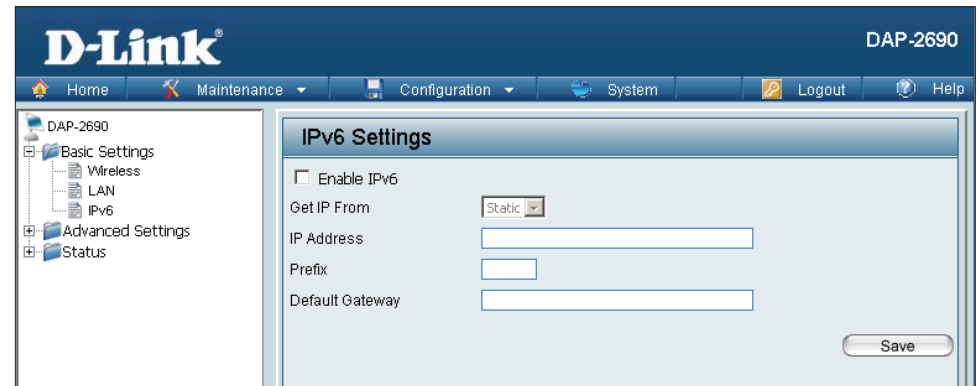

The screenshot shows the D-Link DAP-2690 web interface. The top navigation bar includes links for Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view with Basic Settings (Wireless, LAN, IPv6), Advanced Settings, and Status. The main content area is titled 'IPv6 Settings' and contains the following fields:

- ☐ Enable IPv6
- Get IP From: Static (dropdown menu)
- IP Address: [text input field]
- Prefix: [text input field]
- Default Gateway: [text input field]
- Save (button)

**Note:** If IPv6 is enabled, AP Array, QoS, and Traffic Manager will all be disabled. Also, AP Client mode will change to AP mode.



# Advanced Settings

## Performance

The Performance Settings window offers a number of user-controlled settings designed to optimize the performance of the DAP-2690. After completing the desired settings, click the **Save** button to let your changes take effect.


**Wireless Band:** Select either 2.4GHz or 5GHz.

**Wireless:** Use the drop-down menu to turn the wireless function **On** or **Off**.

**Wireless Mode:** The different combination of clients that can be supported include **Mixed 802.11n, 802.11g and 802.11b**, **Mixed 802.11g and 802.11b**, and **802.11n Only** in the 2.4 GHz band and **Mixed 802.11n and 802.11a**, **802.11a only**, and **802.11n Only** in the 5 GHz band. Please note that when backwards compatibility is enabled for legacy (802.11a/g/b) clients, degradation of 802.11n wireless performance is expected.

**Data Rate:** Indicate the base transfer rate of wireless adapters on the wireless LAN. The AP will adjust the base transfer rate depending on the base rate of the connected device. If there are obstacles or interference, the AP will step down the rate. This option is enabled in Mixed 802.11g and 802.11b mode (for 2.4 GHz) and 802.11a only mode (for 5 GHz). The choices available are **Best (Up to 54)**, **54**, **48**, **36**, **24**, **18**, **12**, **9**, and **6** for 5 GHz and **Best (Up to 54)**, **54**, **48**, **36**, **24**, **18**, **12**, **9**, **6**, **11**, **5.5**, **2** and **1** for 2.4 GHz.

**Beacon Interval** Beacons are packets sent by an access point to synchronize a wireless network. Specify a value in milliseconds. The default (**100**) is (**40-500**): recommended. Setting a higher beacon interval can help to save the power of wireless clients, while setting a lower one can help a wireless client connect to an access point faster.

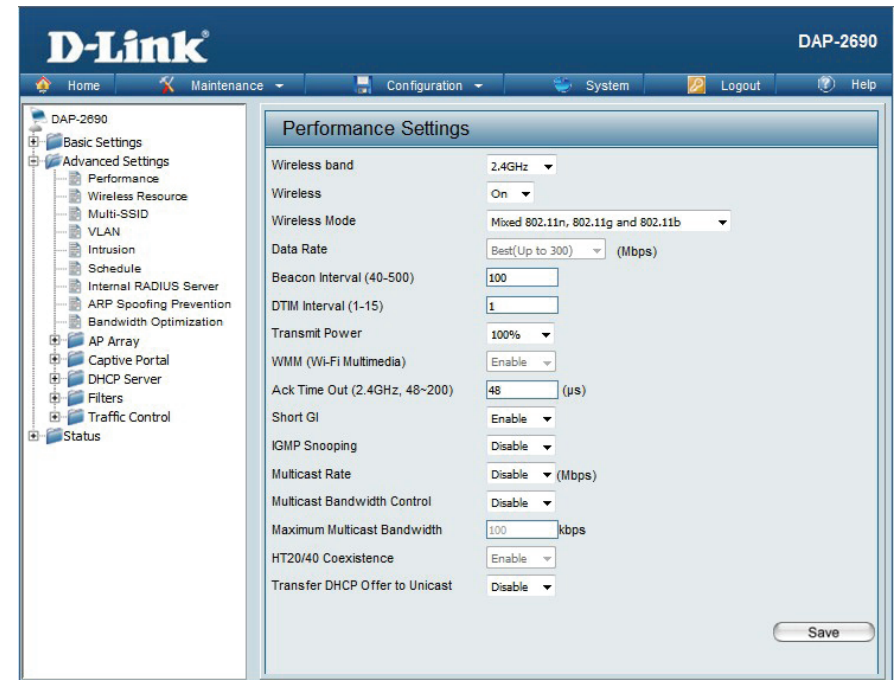

\*Maximum wireless signal rate derived from IEEE Standard 802.11g, 802.11a and 802.11n specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental conditions will adversely affect wireless signal range.



**DTIM Interval (1-15):** Select a Delivery Traffic Indication Message setting between **1** and **15**. **1** is the default setting. DTIM is a countdown informing clients of the next window for listening to broadcast and multicast messages.

**Transmit Power:** This setting determines the power level of the wireless transmission. Transmitting power can be adjusted to eliminate overlapping of wireless area coverage between two access points where interference is a major concern. For example, if wireless coverage is intended for half of the area, then select 50% as the option. Use the drop-down menu to select **100%**, **50%**, **25%**, or **12.5%**.

**WMM (Wi-Fi Multimedia):** WMM stands for Wi-Fi Multimedia. Enabling this feature will improve the user experience for audio and video applications over a Wi-Fi network.

**Ack Time Out (2.4 GHZ) or Ack Time Out (5 GHZ):** To effectively optimize throughput over long distance links enter a value for Acknowledgement Time Out between **25** and **200** microseconds for 5 GHz or from **48** to **200** microseconds in the 2.4 GHz in the field provided.

**Short GI:** Select **Enable** or **Disable**. Enabling a short guard interval can increase throughput. However, be aware that it can also increase the error rate in some installations due to increased sensitivity to radio-frequency installations.

**IGMP Snooping:** Select **Enable** or **Disable**. Internet Group Management Protocol allows the AP to recognize IGMP queries and reports sent between routers and an IGMP host (wireless STA). When IGMP snooping is enabled, the AP will forward multicast packets to an IGMP host based on IGMP messages passing through the AP.

**Multicast Rate:** Adjust the multicast packet data rate here. The multicast rate is supported in **AP mode**, (2.4 GHz and 5 GHz) and **WDS with AP mode**, including Multi-SSIDs.

**Multicast Bandwidth Control :** Adjust the multicast packet data rate here. The multicast rate is supported in AP mode, and WDS with AP mode, including Multi-SSIDs

**Maximum Multicast Bandwidth :** Set the multicast packets maximum bandwidth pass through rate from the Ethernet interface to the Access Point.

**HT20/40 Coexistence :** Enable this option to reduce interference from other wireless networks in your area. If the channel width is operating at 40MHz and there is another wireless network's channel over-lapping and causing interference, the Access Point will automatically change to 20MHz.

**Transfer DHCP Offer to Unicast :** Enable to transfer the DHCP Offer to Unicast from LAN to WLAN, suggest to enable this function if stations number is larger than 30.

# Wireless Resource Control

The Wireless Resource Control window is used to configure the wireless connection settings so that the device can detect the better wireless connection in your environment.

**Wireless band:** Select **2.4GHz** or **5GHz**.

**Band Steering:** Use the drop-down menu to **Enable** the 5G Preferred function. When the wireless clients support both 2.4GHz and 5GHz and the 2.4GHz signal is not strong enough, the device will use 5G as higher priority.

**Band Steering Age:** Enter the time in seconds to specify the interval of updating information.

**Band Steering Difference:** The 5G preferred difference value is equal to the number of 5GHz wireless client connections minus the number of 2.4GHz wireless client connections. If the number of 5GHz wireless client connections minus the number of 2.4GHz wireless client connections exceed this value, the extra 5GHz wireless client connections will be forced to connect to the 2.4GHz band and not the 5GHz band.

**Band Steering Refuse Number:** Enter the maximum 5G connection attempts allowed before the 5G preferred function will be disabled for the wireless station connection.

**Connection Limit:** Select **Enable** or **Disable**. This is an option for load balancing. This determines whether to limit the number of users accessing this device. The exact number is entered in the User Limit field below. This feature allows the user to share the wireless network traffic and the client using multiple APs. If this function is enabled and when the number of users exceeds this value, or the network utilization of this AP exceeds the percentage that has been specified, the DAP-2690 will not allow clients to associate with the AP.

**User Limit:** Set the maximum amount of users that are allowed access (zero to 64 users) to the device using the specified wireless band. The default setting is 20.

Wireless Resource Control	
Wireless band	2.4GHz ▼
Band Steering	Disable ▼
Band Steering Age	180 (s)
Band Steering Difference	2
Band Steering Refuse Number	3
Connection Limit	Disable ▼
User Limit (0 - 64)	20
11n Preferred	Disable ▼
Network Utilization	100% ▼
Aging out	Disable ▼
RSSI Threshold	100% ▼
Data Rate Threshold	54 ▼
ACL RSSI	Disable ▼
ACL RSSI Threshold	60% ▼

Save

**11n Preferred:** Use the drop-down menu to **Enable** the 11n Preferred function. The wireless clients with 802.11n protocol will have higher priority to connect to the device.

**Network Utilization:** Set the maximum utilization of this access point for service. The DAP-2690 will not allow any new clients to associate with the AP if the utilization exceeds the value the user specifies. Select a utilization percentage between 100%, 80%, 60%, 40%, 20%, or 0%. When this network utilization threshold is reached, the device will pause one minute to allow network congestion to dissipate.

**Aging out:** Use the drop-down menu to select the criteria of disconnecting the wireless clients. Available options are **RSSI** and **Data Rate**.

**RSSI Threshold:** When **RSSI** is selected in the **Aging out** drop-down menu, select the percentage of RSSI here. When the RSSI of wireless clients is lower than the specified percentage, the device disconnects the wireless clients.

**Data Rate Threshold:** When **Data Rate** is selected in the **Aging out** drop-down menu, select the threshold of data rate here. When the data rate of wireless clients is lower than the specified number, the device disconnects the wireless clients.

**ACL RSSI:** Use the drop-down menu to **Enable** the function. When enabled, the device denies the connection request from the wireless clients with the RSSI lower than the specified threshold below.

**ACL RSSI Threshold:** Set the ACL RSSI Threshold.

# Multi-SSID

The device supports up to eight multiple Service Set Identifiers. You can set the Primary SSID in the **Basic > Wireless** section. The SSID's factory default setting is **dlink**. The SSID can be easily changed to connect to an existing wireless network or to establish a new wireless network. When the information for the new SSID is finished, click the **Add** button. Click the **Save** button to let your changes take effect.

**Enable Multi-SSID:** Check to enable support for multiple SSIDs.

**Enable Priority:** Check to enable the priority feature.

**Band:** This read-only value is the current band setting.

**Index:** You can select up to seven multi-SSIDs. With the Primary SSID, you have a total of eight multi-SSIDs.

**SSID:** Service Set Identifier (SSID) is the name designated for a specific wireless local area network (WLAN). The SSID's factory default setting is **dlink**. The SSID can be easily changed to connect to an existing wireless network.

**SSID Visibility:** **Enable** or **Disable** SSID visibility. Enabling this feature broadcasts the SSID across the network, thus making it visible to all network users.

**Security:** The Multi-SSID security can be **Open System**, **WPA-Personal**, **WPA-Enterprise**, or **802.1X**. For a detailed description of the Open System parameters please go to page 23. For a detailed description of the WPA-Personal parameters please go to page 24. For a detailed description of the WPA-Enterprise parameters please go to page 25. For a detailed description of the 802.1X parameters please go to page 26.

Index	SSID	Band	Encryption	Delete
Primary SSID	dlink	2.4 GHz	None	

**Priority:** When the Enable Priority check box is checked at the top of this window, this drop-down menu is used to select a priority between **0** and **7**.

**WMM (Wi-Fi Multimedia):** Select **Enable** to provide basic Quality of Service features.


# VLAN Settings

The DAP-2690 supports VLANs. VLANs can be created with a Name and VID. Mgmt (TCP stack), LAN, Primary/Multiple SSID, and WDS connection can be assigned to VLANs as they are physical ports. Any packet which enters the DAP-2690 without a VLAN tag will have a VLAN tag inserted with a PVID. Once you have made the desired settings, click the **Save** button to let your changes take effect.

The VLAN List tab displays the current VLANs.

**VLAN Status:** Click the **Enable** button. Next, go to the **Add/Edit** VLAN tab to add or modify an item on the VLAN List tab.

**VLAN Mode:** The current VLAN mode is displayed.

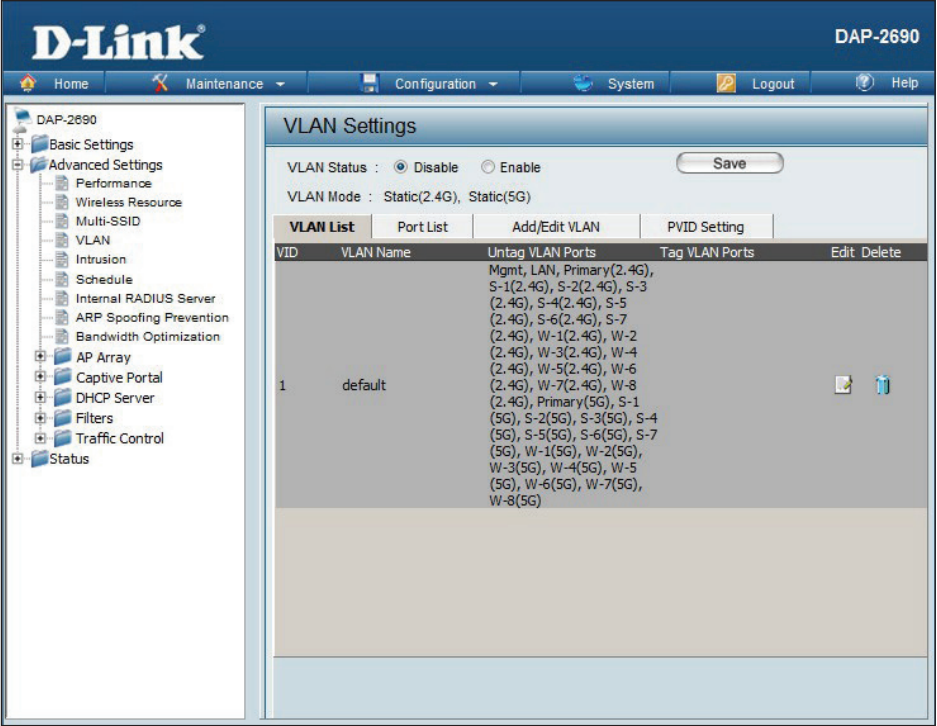

## VLAN Port List

The Port List tab displays the current ports. If you want to configure the guest and internal networks on a Virtual LAN (VLAN), the switch and DHCP server you are using must also support VLANs. As a prerequisite step, configure a port on the switch for handling VLAN tagged packets as described in the IEEE 802.1Q standard. Once you have made the desired settings, click the **Save** button to let your changes take effect.

**VLAN Status:** Click the **Enable** radio button. Next, click the **Add/Edit VLAN** tab to add or modify an item on the VLAN List tab.

**VLAN Mode:** The current VLAN mode is displayed.

**Port Name:** The name of the port is displayed in this column.

**Tag VID:** The Tagged VID is displayed in this column.

**Untag VID:** The Untagged VID is displayed in this column.

**PVID:** The Port VLAN Identifier is displayed in this column.

**D-Link DAP-2690**

Home Maintenance Configuration System Logout Help

**VLAN Settings**

VLAN Status : ☒ Disable ☐ Enable Save

VLAN Mode : Static(2.4G), Static(5G)

VLAN List	Port List	Add/Edit VLAN	PVID Setting
Port Name	Tag VID	Untag VID	PVID
Mgmt		1	1
LAN		1	1
Primary(2.4G)		1	1
Primary(5G)		1	1
S-1(2.4G)		1	1
S-2(2.4G)		1	1
S-3(2.4G)		1	1
S-4(2.4G)		1	1
S-5(2.4G)		1	1
S-6(2.4G)		1	1
S-7(2.4G)		1	1
W-1(2.4G)		1	1
W-2(2.4G)		1	1
W-3(2.4G)		1	1
W-4(2.4G)		1	1
W-5(2.4G)		1	1
W-6(2.4G)		1	1
W-7(2.4G)		1	1
W-8(2.4G)		1	1
S-1(5G)		1	1
S-2(5G)		1	1
S-3(5G)		1	1
S-4(5G)		1	1
S-5(5G)		1	1
S-6(5G)		1	1
S-7(5G)		1	1
W-1(5G)		1	1
W-2(5G)		1	1
W-3(5G)		1	1
W-4(5G)		1	1
W-5(5G)		1	1
W-6(5G)		1	1
W-7(5G)		1	1
W-8(5G)		1	1

# VLAN Add/Edit


The Add/Edit VLAN tab is used to configure VLANs. Once you have made the desired settings, click the **Save** button to let your changes take effect.

**VLAN Status:** Click the **Enable** radio button.

**VLAN Mode:** The current VLAN mode is displayed.

**VLAN ID (VID):** Provide a number between **1** and **4094** for the Internal VLAN.

**VLAN Name:** Enter the VLAN to add or modify.

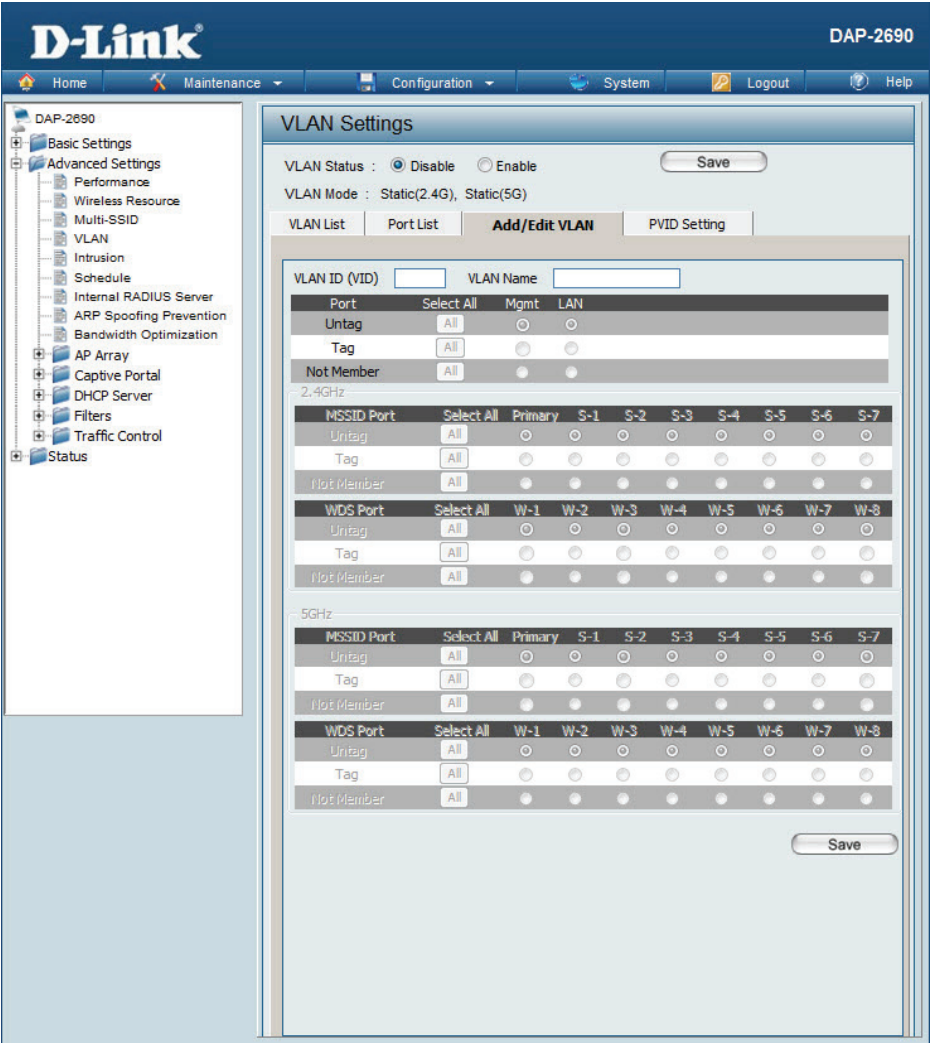




# PVID Setting

The PVID Setting tab is used to enable/disable the Port VLAN Identifier Auto Assign Status as well as to configure various types of PVID settings. Once you have made the desired settings, click the **Save** button to let your changes take effect.

**VLAN Status:** Click the **Enable** radio button.

**VLAN Mode:** The current VLAN mode is displayed.

**PVID Auto Assign** Use the radio button to toggle PVID auto assign status to Enable.

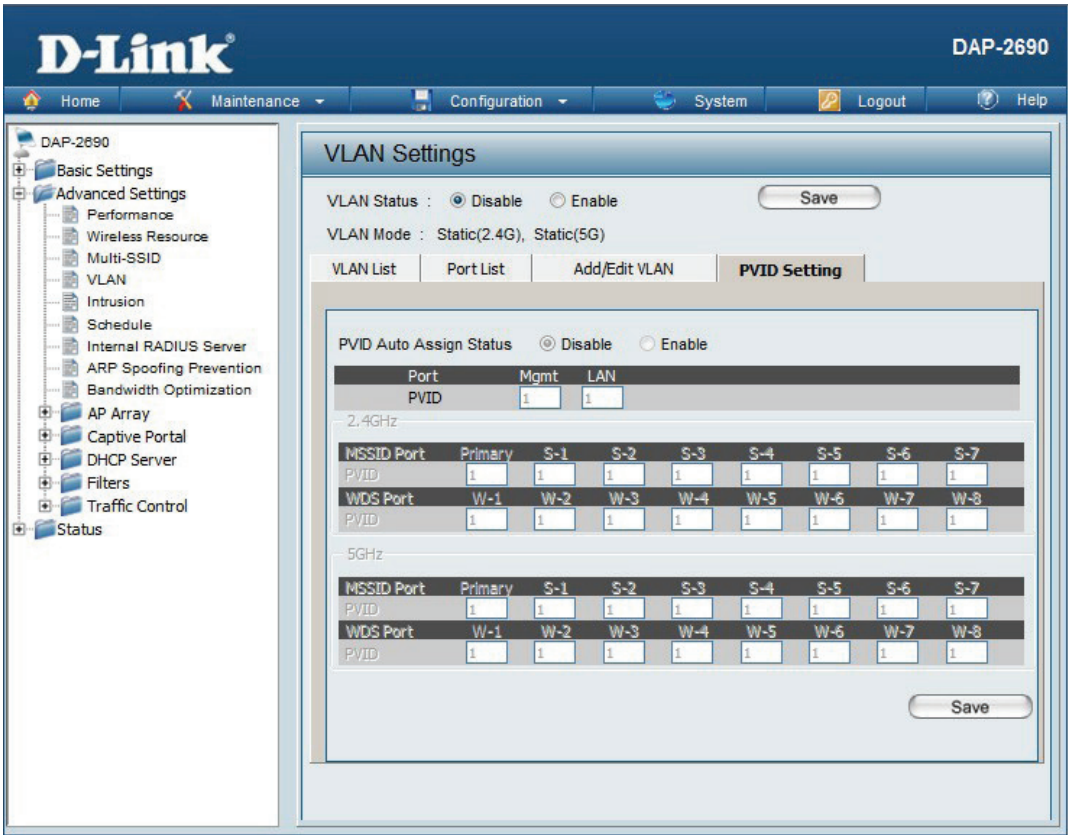


# Intrusion

The Wireless Intrusion Protection window is used to set APs as All, Valid, Neighborhood, Rogue, and New. Once you have made the desired settings, click the **Save** button to let your changes take effect.

**Wireless Band:** Select **2.4GHz** or **5GHz**.

**Detect:** Click this button to initiate a scan of the network.

**AP List:** The choices include **All**, **Valid**, **Neighbor**, **Rogue**, and **New**.

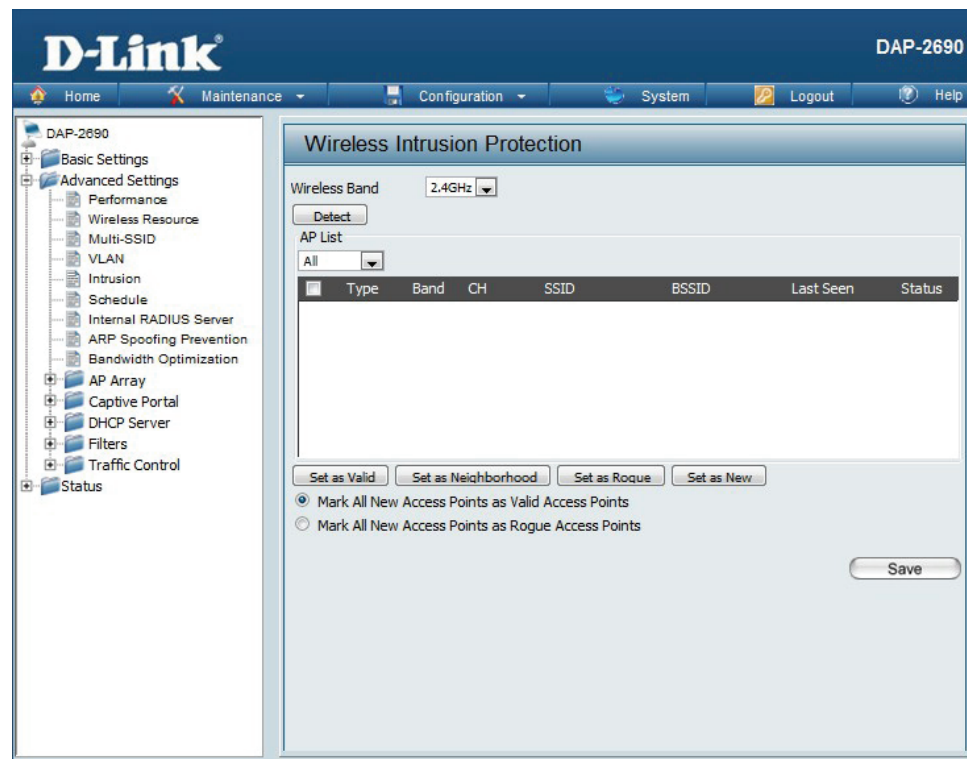

# Schedule

The Wireless Schedule Settings window is used to add and modify scheduling rules on the device. When the information for the new schedule rule is finished, click the **Add** button. To discard the new schedule rule settings, click the **Clear** button. Click the **Save** button to let your changes take effect.

**Wireless Schedule:** Use the drop-down menu to **Enable** the device's scheduling feature.

**Name:** Enter a name for the new scheduling rule in the field provided.

**Index:** Use the drop-down menu to select the desired SSID.

**SSID:** This read-only field indicates the current SSID in use. To create a new SSID, go to the Wireless Settings window (**Basic Settings > Wireless**).

**Day(s):** Toggle the radio button between **All Week** and **Select Day(s)**. If the second option is selected, check the specific days you want the rule to be effective on.

**All Day(s):** Check this box to have settings apply 24 hours a day. If the settings are not to apply 24 hours a day, enter the desired starting and ending times in the next two fields.

**Start Time:** Enter the beginning hour and minute, using a 24-hour clock.

**End Time:** Enter the ending hour and minute, using a 24-hour clock.

**D-Link** DAP-2690

Home Maintenance Configuration System Logout Help

**Wireless Schedule Settings**

Wireless Schedule: **Disable**

**Add Schedule Rule**

Name:

Index: **Primary SSID 2.4G**

SSID: **dlink**

Day(s): ☐ All Week ☒ Select Day(s)

☐ Sun ☐ Mon ☐ Tue ☐ Wed ☐ Thu ☐ Fri ☐ Sat

All Day(s): ☐

Start Time:  :  (hour:minute, 24 hour time)

End Time:  :  (hour:minute, 24 hour time) ☐ Overnight

**Schedule Rule List**

Name	SSID Index	SSID	Day(s)	Time Frame	Wireless Edit	DEL
+: To the end time of the next day overnight.						

# Internal RADIUS Server

The DAP-2690 features a built-in RADIUS server. Once you have finished adding a RADIUS account, click the **Save** button to let your changes take effect. The newly-created account will appear in this RADIUS Account List. The radio buttons allow the user to enable or disable the RADIUS account. Click the icon in the delete column to remove the RADIUS account. We suggest you limit the number of accounts below 30.

**User Name:** Enter a name to authenticate user access to the internal RADIUS server.

**Password:** Enter a password to authenticate user access to the internal RADIUS server. The length of your password should be 8~64.

**Status:** Select **Enable** or **Disable** from the drop-down menu.

The screenshot displays the D-Link DAP-2690 web management interface. The top navigation bar includes links for Home, Maintenance, Configuration, System, Logout, and Help. A left-hand sidebar lists various configuration categories: Basic Settings (Wireless, LAN, IPv6), Advanced Settings (Performance, Wireless Resource, Multi-SSID, VLAN, Intrusion, Schedule, Internal RADIUS Server, ARP Spoofing Prevention, Bandwidth Optimization), AP Array, Captive Portal, DHCP Server, Filters, Traffic Control, and Status. The 'Internal RADIUS Server' option is selected. The main content area is titled 'Internal RADIUS Server' and contains two sections. The first section, 'Add RADIUS Account', has input fields for 'User Name' and 'Password', and a 'Status' dropdown menu currently set to 'Enable'. The second section, 'RADIUS Account list', features a table with columns for 'User Name', 'Enable', 'Disable', and 'Delete'. The table is currently empty. A 'Save' button is located at the bottom right of the configuration area.

# ARP Spoofing Prevention

The ARP Spoofing Prevention feature allows users to add IP/MAC address mapping to prevent arp spoofing attack.

**ARP Spoofing Prevention:** This check box allows you to enable the arp spoofing prevention function.

**Gateway IP Address:** Enter a gateway IP address.

**Gateway MAC Address:** Enter a gateway MAC address.

The screenshot shows the D-Link DAP-2690 web interface. The top navigation bar includes links for Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar displays a tree view of configuration options, with 'ARP Spoofing Prevention' selected under 'Advanced Settings'. The main content area is titled 'ARP Spoofing Prevention Settings'. It features a 'Disable' dropdown menu for 'ARP Spoofing Prevention'. Below this is the 'Add Gateway Address' section, which includes input fields for 'Gateway IP Address' and 'Gateway MAC Address' (formatted as six boxes separated by colons), along with 'Add' and 'Clear' buttons. The 'Gateway Address List' section shows 'Total Entries: 0' and a 'Delete All' button. A table with headers 'Gateway IP Address', 'Gateway MAC Address', 'Edit', and 'Delete' is present but empty. A 'Save' button is located at the bottom right of the settings area.

# Bandwidth Optimization

The Bandwidth Optimization window allows the user to manage the bandwidth of the device and arrange the bandwidth for various wireless clients. When the Bandwidth Optimization rule is finished, click the Add button. To discard the Add Bandwidth Optimization Rule settings, click the Clear button. Click the Save button to let your changes take effect.

- Enable Bandwidth Optimization:** Use the drop-down menu to Enable the Bandwidth Optimization function.
- Downlink Bandwidth:** Enter the downlink bandwidth of the device in Mbits per second.
- Uplink Bandwidth:** Enter the uplink bandwidth of the device in Mbits per second.
- Allocate average BW for each station:** AP will distribute average bandwidth for each client.
- Allocate maximum BW for each station:** Specify the maximum bandwidth for each connected client. Reserve certain bandwidth for future clients.
- Allocate different BW for a/b/g/n stations:** The weight of 11b/g/n and 11a/n client are 10%/20%/70% ; 20%/80%. AP will distribute different bandwidth for 11a/b/g/n clients.
- Allocate specific BW for SSID:** All clients share the total bandwidth.
- Rule Type:** Use the drop-down menu to select the type that is applied to the rule. Available options are: Allocate average BW for each station, Allocate maximum BW for each station, Allocate different BW for 1a/b/g/n stations, and Allocte specific BW for SSID.
- Use the drop-down menu to toggle the wireless

**D-Link** DAP-2690

Home Maintenance Configuration System Logout Help

**Bandwidth Optimization**

Enable Bandwidth Optimization: **Disable**

Downlink Bandwidth: **80** Mbits/sec

Uplink Bandwidth: **80** Mbits/sec

**Add Bandwidth Optimization Rule**

Rule Type: **Allocate average BW for each station**

Band: **2.4 GHz**

SSID Index: **Primary SSID**

Downlink Speed: **Kbits/sec**

Uplink Speed: **Kbits/sec**

**Bandwidth Optimization Rules**

Band	Type	SSID Index	Downlink Speed	Uplink Speed	Edit	Del

**Save**

**Band:** band between 2.4GHz and 5GHz.

**SSID Index:** Use the drop-down menu to select the SSID for the specified wireless band.

**Downlink Speed:** Enter the limitation of the downloading speed in either Kbits/sec or Mbits/sec for the rule.

**Uplink Speed:** Enter the limitation of the uploading speed in either Kbits/sec or Mbits/sec for the rule.



# AP Array

## AP Array Scan

The AP Array window is used to create up to 32 APs on a local network to be organized into a single group in order to increase ease of management. Click the Save button to let your changes take effect. Central WiFiManager and AP Array are mutually exclusive functions.

**Enable AP Array:** Select the check box to enable the AP array function. The three modes that are available are Master, Backup Master, and Slave. APs in the same array will use the same configuration. The configuration will sync the Master AP to the Slave AP and the Backup Master AP when a Slave AP and a Backup Master AP join the AP array.

**AP Array Name:** Enter an AP array name for the group here.

**AP Array Password:** Enter an AP array password for the group here. This password must be the same on all the APs in the group.

**Scan AP Array List:** Click this button to initiate a scan of all the available APs currently on the network.

**Connection Status:** Display the AP array connection status.

**AP Array List:** This table displays the current AP array status for the following parameters: Array Name, Master IP, MAC, Master, Backup Master, Slave, and Total.

**Current Members:** This table displays all the current array members. The DAP-2690 AP array feature supports up to eight AP array members.

**D-Link** DAP-2690

Home Maintenance Configuration System Logout Help

**AP Array Scan** Version:2.0

☐ Enable AP Array

☐ Master ☐ Backup Master ☒ Slave

AP Array Name:

AP Array Password:

Scan AP Array List:

Connection Status:

AP Array List

Array Name	Master IP	MAC	Master	Backup Master	Slave	Total

Current Members

Index	Role	IP Address	MAC Address	Location



## Configuration Settings

In the AP array configuration settings windows, users can specify which settings all the APs in the group will inherit from the master AP. Make the required selection in this window and click the Save button to accept the changes made.

- Enable AP Array Configuration:** Select to Enable or Disable the AP array configuration feature here.
- Wireless Basic Settings:** Select this option to specify the basic wireless settings that the APs in the group will inherit.
- Wireless Advanced Settings:** Select this option to specify the advanced wireless settings that the APs in the group will inherit.
- Multiple SSID & VLAN:** Select this option to specify the multiple SSIDs and VLAN settings that the APs in the group will inherit.
- Advanced Functions:** Select this option to specify the other advanced settings that the APs in the group will inherit.
- Administration Settings:** Select this option to specify the administrative settings that the APs in the group will inherit.

The screenshot shows the 'AP Array Configuration' window. At the top, there is a section for 'Enable AP Array Configuration' with a dropdown menu set to 'Enable' and a 'Clear all' button. Below this are five expandable sections, each with a checkbox: 'Wireless Basic Settings', 'Wireless Advanced Settings', 'Multiple SSID & VLAN', 'Advanced Functions', and 'Administration Settings'. A 'Save' button is located at the bottom right of the window.

### Wireless Basic Settings

**Network Name (SSID):** Select this option to use the same SSID.

**SSID Visibility:** Select this option to enable SSID visibility.

**Auto Channel Selection:** Select this option to use auto channel selection.

**Channel Width:** Select this option to use the same channel width.

**Security:** Select this option to use the same wireless security.

**Captive Profile:** Select this option to use the same captive profile settings.

**Band:** Select this option to use the same wireless band.

Wireless Basic Settings <input checked="" type="checkbox"/>			
Network Name (SSID)	<input checked="" type="checkbox"/>	SSID Visibility	<input checked="" type="checkbox"/>
Auto Channel Selection	<input checked="" type="checkbox"/>	Channel Width	<input checked="" type="checkbox"/>
Security	<input checked="" type="checkbox"/>	Captive Profile	<input checked="" type="checkbox"/>
Band	<input checked="" type="checkbox"/>		

### Wireless Advanced Settings

**Wireless:** Select this option to use the same wireless settings.

**Wireless Mode:** Select this option to use the same wireless mode.

**Data Rate:** Select this option to use the same data rate.

**Beacon Interval:** Select this option to use the same beacon interval.

**DTIM Interval:** Select this option to use the same DTIM interval.

**Transmit Power:** Select this option to use the same transmit power.

**WMM (Wi-Fi Multimedia):** Select this option to use the same WMM settings.

**Ack Time Out:** Select this option to use the same ACK timeout value.

**Wireless ACL:** Select this option to use the same wireless ACL settings.

Wireless Advanced Settings <input checked="" type="checkbox"/>			
Wireless	<input checked="" type="checkbox"/>	Wireless Mode	<input checked="" type="checkbox"/>
Data Rate	<input checked="" type="checkbox"/>	Beacon Interval	<input checked="" type="checkbox"/>
DTIM Interval	<input checked="" type="checkbox"/>	Transmit Power	<input checked="" type="checkbox"/>
WMM (Wi-Fi Multimedia)	<input checked="" type="checkbox"/>	Ack Time Out	<input checked="" type="checkbox"/>
Wireless ACL	<input checked="" type="checkbox"/>	Short GI	<input checked="" type="checkbox"/>
Link Integrity	<input checked="" type="checkbox"/>	Connection Limit	<input checked="" type="checkbox"/>
IGMP Snooping	<input checked="" type="checkbox"/>		

**Short GI:** Select this option to use the same short GI settings.

**Link Integrity:** Select this option to use the same link integrity settings.

**Connection Limit:** Select this option to use the same connection limit value.

**IGMP Snooping::** Select this option to use the same IGMP snooping settings.

### Multiple SSID & VLAN

**SSID:** Select this option to use the same multi-SSIDs.

**SSID Visibility:** Select this option to use the same SSID visible.

**Security:** Select this option to use the same wireless security settings.

Multiple SSID & VLAN <input checked="" type="checkbox"/>			
SSID	<input checked="" type="checkbox"/>	SSID Visibility	<input checked="" type="checkbox"/>
Security	<input checked="" type="checkbox"/>	WMM	<input checked="" type="checkbox"/>
Captive Profile	<input checked="" type="checkbox"/>	VLAN	<input checked="" type="checkbox"/>

**WMM:** Select this option to use the same WMM settings.

**Captive Profile:** Select this option to use the same captive profile settings.

**VLAN:** Select this option to use the same VLAN settings.

### Advanced Functions

**Schedule Settings:** Select this option to use the same schedule settings.

**QoS Settings:** Select this option to use the same Quality of Service settings.

**Log Settings:** Select this option to use the same log settings.

**Time and Date Settings:** Select this option to use the same time and date settings.

Advanced Functions <input checked="" type="checkbox"/>			
Schedule Settings	<input checked="" type="checkbox"/>	QoS Settings	<input checked="" type="checkbox"/>
Log Settings	<input checked="" type="checkbox"/>	Time and Date Settings	<input checked="" type="checkbox"/>
ARP Spoofing Prevention	<input checked="" type="checkbox"/>	Bandwidth Optimization	<input checked="" type="checkbox"/>
Captive Portal	<input checked="" type="checkbox"/>	Auto RF	<input checked="" type="checkbox"/>
Load Balance	<input checked="" type="checkbox"/>	DHCP server Settings	<input checked="" type="checkbox"/>

**ARP Spoofing Prevention:** Select this option to use the same ARP spoofing prevention settings.

**Bandwidth Optimization:** Select this option to use the same bandwidth optimization settings.

**Captive Portal:** Select this option to use the same captive portal settings.

**Auto RF:** Select this option to use the same auto-RF settings.

**Load Balance:** Select this option to use the same load balancing settings.

**DHCP Server Settings:** Select this option to use the same DHCP server settings.

Administration Settings

**System Name Settings:** Select this option to use the same system name.

**SNMP Settings:** Select this option to use the same SNMP settings.

**Login Settings:** Select this option to use the same login settings.

**Console Settings:** Select this option to use the same console settings.

**Limit Administrator:** Select this option to use the same limit administrator settings.

**Ping Control Setting:** Select this option to use the same ping control settings.

Administration Settings <input checked="" type="checkbox"/>			
System Name Settings	<input checked="" type="checkbox"/>	SNMP Settings	<input checked="" type="checkbox"/>
Login Settings	<input checked="" type="checkbox"/>	Console Settings	<input checked="" type="checkbox"/>
Limit Administrator	<input checked="" type="checkbox"/>	Ping Control Setting	<input checked="" type="checkbox"/>

## Auto-RF

In this windows, users can view and configure the automatic radio frequency settings as well as configure the the auto-initiate period and threshold values. Click the Save button to accept the changes made.

**Enable: Auto-RF:** Select to Enable or Disable the auto-RF feature here.

**Initiate Auto-RF:** Click the Auto-RF Optimize button to initiate the auto-RF optimization feature.

**Auto-Initiate:** Select the Enable or Disable the auto-initiate feature here.

**Auto-Initiate Period:** After enabling the auto-initiate option, the auto-initiate period value can be entered here. This value must be between 1 and 24 hours.

**RSSI Threshold:** Select the RSSI threshold value here. This value is listed in the drop-down menu in increments of 10% from 10% to 100%.

**RF Report Frequency:** Enter the RF report frequency value here.

Auto-RF

Enable Auto-RF

Disable

Initiate Auto-RF

Auto-RF Optimize

Auto-Initiate

Disable

Auto-Initiate Period

24

(hours)

RSSI Threshold

40%

RF Report Frequency

10

(Seconds)

Save

# Load Balance

In this window, users can view and configure the AP array's load balancing settings. Click the Save button to accept the changes made.

**Enable Load Balance:** Select to Enable or Disable the load balance feature here.

**Active Threshold:** Enter the active threshold value here.

Load Balance

Enable Load Balance

Disable

Active Threshold

0

Save

# Captive Portal

## Authentication Settings-Web Redirection Only

The Captive Portal is a built-in web authentication server. When a station connects to an AP, the web browser will be redirected to a web authentication page. In this window, user can view and configure the Captive Portal settings. After selecting Web Redirection Only as the Authentication Type, we can configure the redirection website URL that will be applied to each wireless client in this network.

**Session timeout(1-1440) :** Enter the session timeout value here. This value can be from 1 to 1440 minutes. By default, this value is 60 minutes.

**Band :** Select 2.4GHz or 5GHz.

**SSID Index :** Select the SSID for this Authentication

**Authentication Type :** Select the captive portal encryption type here. Options to choose from are Web Redirection, Username/Password, Passcode, Remote RADIUS, LDAP and POP3. In this section we'll discuss the Web Redirection option.

**Web Redirection State :** Default setting is Enable when select Web Redirection Only

**URL Path :** Select whether to use either HTTP or HTTPS here. After selecting either http:// or https://, enter the URL of the website that will be used in the space provided.

**D-Link** DAP-2690

Home Maintenance Configuration System Logout Help

**Captive Portal Authentication**

Session Timeout (1-1440) 60 Minute(s)

Band 2.4GHz

SSID Index Primary SSID

Authentication Type Web Redirection Only

**Web Redirection Interface Settings**

Web Redirection State Enable

URL Path http://

Save

Band	SSID Index	Captive Profile	Edit	Delete

## Authentication Settings- Username/Password

The Captive Portal is a built-in web authentication server. When a station connects to an AP, the web browser will be redirected to a web authentication page. In this window, user can view and configure the Captive Portal settings. After selecting Username/Password as the Authentication Type, we can configure the Username/Password authentication that will be applied to each wireless client in this network.

**Session timeout(1-1440) :** Enter the session timeout value here. This value can be from 1 to 1440 minutes. By default, this value is 60 minutes.

**Band :** Select 2.4GHz or 5GHz.

**SSID Index :** Select the SSID for this Authentication

**Authentication Type :** Select the captive portal encryption type here. Options to choose from are Web Redirection, Username/Password, Passcode, Remote RADIUS, LDAP and POP3. In this section we'll discuss the Username/Password option.

**Web Redirection State :** Default is Disable or select Enable to enable the website redirection feature.

**URL Path :** Select whether to use either HTTP or HTTPS here. After selecting either http:// or https://, enter the URL of the website that will be used in the space provided.

**Username:** Enter the username for the new account here.

**Password:** Enter the password for the new account here.

The screenshot displays the D-Link DAP-2690 web interface. The top navigation bar includes links for Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view of configuration options, with 'Captive Portal' expanded under 'AP Array'. The main content area is titled 'Captive Portal Authentication' and contains the following settings:

- Session Timeout (1-1440):** 60 Minute(s)
- Band:** 2.4GHz
- SSID Index:** Primary SSID
- Authentication Type:** Username/Password
- Web Redirection Interface Settings:**
  - Web Redirection State:** Disable
  - URL Path:** http://
- Username/Password Settings:**
  - Username:** [Text Input Field]
  - Password:** [Text Input Field]
  - Add** and **Clear** buttons.

Below the settings, there is a table with columns for Username, Edit, and Delete. The table is currently empty. At the bottom right, there is a **Save** button. At the very bottom, there is another table with columns for Band, SSID Index, Captive Profile, Edit, and Delete, which is also empty.



## Authentication Settings- Passcode

The Captive Portal is a built-in web authentication server. When a station connects to an AP, the web browser will be redirected to a web authentication page. In this window, user can view and configure the Captive Portal settings. After selecting Passcode as the Authentication Type, we can configure the Passcode authentication that will be applied to each wireless client in this network.

**Session timeout(1-1440) :** Enter the session timeout value here. This value can be from 1 to 1440 minutes. By default, this value is 60 minutes.

**Band :** Select 2.4GHz or 5GHz.

**SSID Index :** Select the SSID for this Authentication

**Authentication Type :** Select the captive portal encryption type here. Options to choose from are Web Redirection, Username/Password, Passcode, Remote RADIUS, LDAP and POP3. In this section we'll discuss the Passcode option.

**Web Redirection State :** Default is Disable or select Enable to enable the website redirection feature.

**URL Path :** Select whether to use either HTTP or HTTPS here. After selecting either http:// or https://, enter the URL of the website that will be used in the space provided.

**Passcode Quantity:** Enter the number of ticket that will be used here.

**Duration:** Enter the duration value, in hours, for this passcode.

**Last Active Day:** Select the last active date for this passcode here. Year, Month and Day selections can be made.

**User Limit:** Enter the maximum amount of users that can use this passcode at the same time

The screenshot shows the D-Link DAP-2690 web interface. The left sidebar contains a tree view with categories: Basic Settings, Advanced Settings (Performance, Wireless Resource, Multi-SSID, VLAN, Intrusion, Schedule, Internal RADIUS Server, ARP Spoofing Prevention, Bandwidth Optimization), AP Array, Captive Portal (Authentication Settings, Login Page Upload, IP Filter Settings, MAC Bypass), DHCP Server, Filters, Traffic Control, and Status. The main content area is titled 'Captive Portal Authentication'. It includes the following settings:

- Session Timeout (1-1440):** 60 Minute(s)
- Band:** 2.4GHz
- SSID Index:** Primary SSID
- Authentication Type:** Passcode
- Web Redirection Interface Settings:**
  - Web Redirection State:** Disable
  - URL Path:** http://
- Passcode Settings:**
  - Passcode Quantity:** [Empty field]
  - Duration:** [Empty field] Hour
  - Last Active Time:** Year 2015, Month Jan, Day 1, Hour 1:00
  - User Limit:** [Empty field]
  - Buttons:** Add, Clear
- Table 1: Passcode List**

Passcode	Duration	Last Active Time	User Limit	Delete
[Empty table body]				
- Buttons:** Delete All, Save
- Table 2: Captive Profile List**

Band	SSID Index	Captive Profile	Edit	Delete
[Empty table body]				

## Authentication Settings- Remote RADIUS

The Captive Portal is a built-in web authentication server. When a station connects to an AP, the web browser will be redirected to a web authentication page. In this window, user can view and configure the Captive Portal settings. After selecting Remote RADIUS as the Authentication Type, we can configure the Remote RADIUS authentication that will be applied to each wireless client in this network.

**Session timeout(1-1440) :** Enter the session timeout value here. This value can be from 1 to 1440 minutes. By default, this value is 60 minutes.

**Band :** Select 2.4GHz or 5GHz.

**SSID Index :** Select the SSID for this Authentication

**Authentication Type :** Select the captive portal encryption type here. Options to choose from are Web Redirection, Username/Password, Passcode, Remote RADIUS, LDAP and POP3. In this section we'll discuss the Remote RADIUS option.

**Web Redirection State :** Default is Disable or select Enable to enable the website redirection feature.

**URL Path :** Select whether to use either HTTP or HTTPS here. After selecting either http:// or https://, enter the URL of the website that will be used in the space provided.

**Radius Server:** Enter the RADIUS server's IP address here

**Radius Port:** Enter the RADIUS server's port number here

**Radius Secret:** Enter the RADIUS server's shared secret here

**Remote Radius Type:** Select the remote RADIUS server type here. Currently, only SPAP will be used.

The screenshot shows the D-Link DAP-2690 web interface. The left sidebar contains a tree view with categories like Basic Settings, Advanced Settings, Performance, Wireless Resource, Multi-SSID, VLAN, Intrusion, Schedule, Internal RADIUS Server, ARP Spoofing Prevention, Bandwidth Optimization, AP Array, Captive Portal, Authentication Settings, Login Page Upload, IP Filter Settings, MAC Bypass, DHCP Server, Filters, Traffic Control, and Status. The main content area is titled 'Captive Portal Authentication' and includes the following settings:

- Session Timeout (1-1440):** 60 Minute(s)
- Band:** 2.4GHz
- SSID Index:** Primary SSID
- Authentication Type:** Remote RADIUS
- Web Redirection Interface Settings:**
  - Web Redirection State:** Disable
  - URL Path:** http://
- Remote RADIUS Settings:**
  - Radius Server:** [Empty field]
  - Radius Port:** 1812
  - Radius Secret:** [Empty field]
  - Remote RADIUS Type:** SPAP
- Secondary radius Server Settings:**
  - Radius Server:** [Empty field]
  - Radius Port:** 1812
  - Radius Secret:** [Empty field]
  - Remote RADIUS Type:** SPAP
- Third radius Server Settings:**
  - Radius Server:** [Empty field]
  - Radius Port:** 1812
  - Radius Secret:** [Empty field]
  - Remote RADIUS Type:** SPAP

At the bottom right of the settings area is a 'Save' button. Below the settings is a table with columns: Band, SSID Index, Captive Profile, Edit, and Delete. The table is currently empty.

## Authentication Settings- LDAP

The Captive Portal is a built-in web authentication server. When a station connects to an AP, the web browser will be redirected to a web authentication page. In this window, user can view and configure the Captive Portal settings. After selecting LDAP as the Authentication Type, we can configure the LDAP authentication that will be applied to each wireless client in this network.

**Session timeout(1-1440) :** Enter the session timeout value here. This value can be from 1 to 1440 minutes. By default, this value is 60 minutes.

**Band :** Select 2.4GHz or 5GHz.

**SSID Index :** Select the SSID for this Authentication

**Authentication Type :** Select the captive portal encryption type here. Options to choose from are Web Redirection, Username/Password, Passcode, Remote RADIUS, LDAP and POP3. In this section we'll discuss the LDAP option.

**Web Redirection State :** Default is Disable or select Enable to enable the website redirection feature.

**URL Path :** Select whether to use either HTTP or HTTPS here. After selecting either http:// or https://, enter the URL of the website that will be used in the space provided.

**Server:** Enter the LDAP server's IP address or domain name here.

**Port:** Enter the LDAP server's port number here.

**Authenticate Mode:** Select the authentication mode here. Options to choose from are Simple and TLS.

**Username:** Enter the LDAP server account's username here.

**Password:** Enter the LDAP server account's password here.

**Base DN:** Enter the administrator's domain name here

**Account Attribute:** Enter the LDAP account attribute string here. This string will be used to search for clients.

**Identity:** Enter the identity's full path string here. Alternatively, select the Auto Copy checkbox to automatically add the generic full path of the web page in the identity field.

The screenshot shows the D-Link DAP-2690 web interface. The left sidebar contains a navigation tree with categories like Basic Settings, Advanced Settings, Performance, Wireless Resource, Multi-SSID, VLAN, Intrusion, Schedule, Internal RADIUS Server, ARP Spoofing Prevention, Bandwidth Optimization, AP Array, Captive Portal, Authentication Settings, Login Page Upload, IP Filter Settings, MAC Bypass, DHCP Server, Filters, Traffic Control, and Status. The main content area is titled 'Captive Portal Authentication' and contains the following settings:

- Session Timeout (1-1440):** 60 Minute(s)
- Band:** 2.4GHz
- SSID Index:** Primary SSID
- Authentication Type:** LDAP
- Web Redirection Interface Settings:**
  - Web Redirection State:** Disable
  - URL Path:** http://
- LDAP Settings:**
  - Server:** [Empty text field]
  - Port:** 389
  - Authenticate Mode:** Simple
  - Username:** [Empty text field]
  - Password:** [Empty text field]
  - Base DN:** [Empty text field] (ou=,dc=)
  - Account Attribute:** [Empty text field] (ex.cn)
  - Identity:** [Empty text field] ☐ Auto Copy

At the bottom right of the settings area is a 'Save' button. Below the settings is a table with the following headers: Band, SSID Index, Captive Profile, Edit, and Delete. The table is currently empty.

## AAuthentication Settings- POP3

The Captive Portal is a built-in web authentication server. When a station connects to an AP, the web browser will be redirected to a web authentication page. In this window, user can view and configure the Captive Portal settings. After selecting POP3 as the Authentication Type, we can configure the POP3 authentication that will be applied to each wireless client in this network.

**Session timeout(1-1440) :** Enter the session timeout value here. This value can be from 1 to 1440 minutes. By default, this value is 60 minutes.

**Band :** Select 2.4GHz or 5GHz.

**SSID Index :** Select the SSID for this Authentication

**Authentication Type :** Select the captive portal encryption type here. Options to choose from are Web Redirection, Username/Password, Passcode, Remote RADIUS, LDAP and POP3. In this section we'll discuss the POP3 option.

**Web Redirection State :** Default is Disable or select Enable to enable the website redirection feature.

**URL Path :** Select whether to use either HTTP or HTTPS here. After selecting either http:// or https://, enter the URL of the website that will be used in the space provided.

**Server:** Enter the POP3 server's IP address or domain name here.

**Port:** Enter the POP server's port number here.

**Connection Type:** Select the connection type here. Options to choose from are None and SSL/TLS.

The screenshot displays the D-Link DAP-2690 web management interface. The left sidebar shows a tree view with categories like Basic Settings, Advanced Settings, and AP Array. The 'Captive Portal' option is selected under the 'AP Array' category. The main content area is titled 'Captive Portal Authentication' and contains the following settings:

- Session Timeout (1-1440):** 60 Minute(s)
- Band:** 2.4GHz
- SSID Index:** Primary SSID
- Authentication Type:** POP3
- Web Redirection Interface Settings:**
  - Web Redirection State:** Disable
  - URL Path:** http://
- POP3 Settings:**
  - Server:** (empty text box)
  - Port:** 110
  - Connection Type:** None


A 'Save' button is located at the bottom right of the settings area. Below the settings, there is a table with columns: Band, SSID Index, Captive Profile, Edit, and Delete. The table is currently empty.

## Login Page Upload

In this window, users can upload a custom login web page that will be used by the captive portal feature. Click the **Browse** button to navigate to the login style, located on the managing computer and then click the **Upload** button to initiate the upload.

**Upload Login Style From Local Hard Drive:** In this field the path to the login style file, that will be uploaded, will be displayed. Alternatively, the path can be manually entered here.

**Login Page Style List :** Select the wireless band and login style that will be used in each SSID here. Click Download button to download the template file for login page and Click Del button to delete the template file.

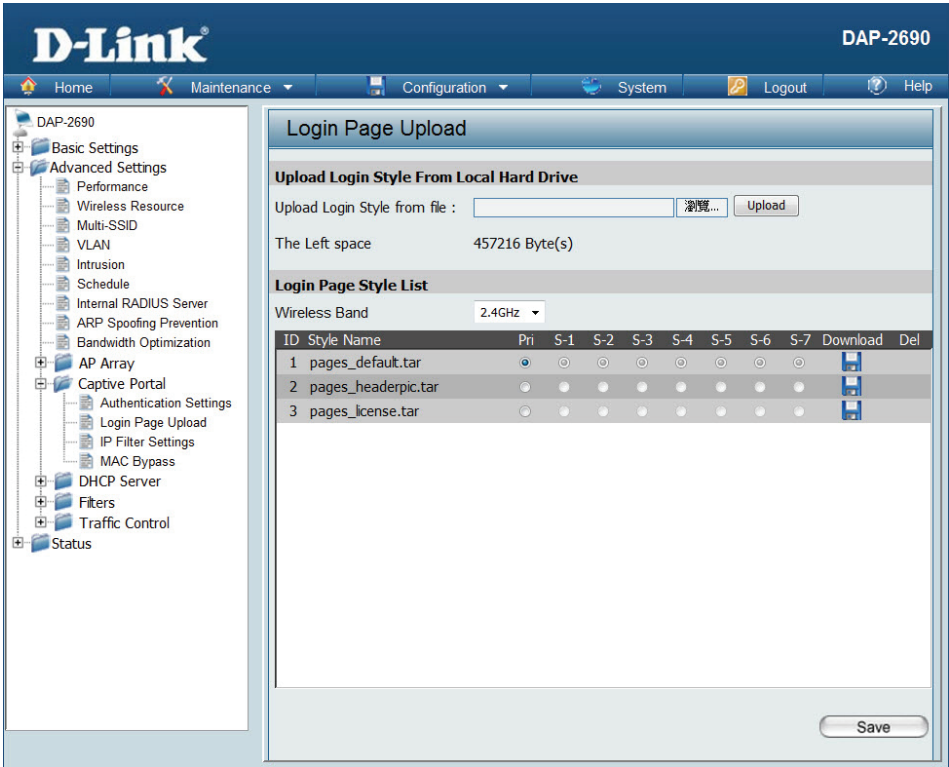

## IP Filter Settings

Enter the IP address or network address that will be used in the IP filter rule. For example, an IP address like 192.168.70.66 or a network address like 192.168.70.0. This IP address or network will be inaccessible to wireless clients in this network.

**Wireless Band :** Wireless Band : Select 2.4GHz or 5GHz.

**IP Address:** IP Address: Enter the IP address or network address

**Subnet Mask:** Subnet Mask: Enter the subnet mask of the IP address or networks address

**Upload IP Filter File:** Upload IP Filter File: To upload a IP filter list file, click Browse and navigate to the IP filter list file saved on the computer, and then click Upload.

**Download IP Filter File:** Download IP Filter File: To download IP Filter list file, click Download and to save the IP Filter list.

The screenshot shows the D-Link DAP-2690 web interface. The top navigation bar includes Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar lists various settings categories: Basic Settings, Advanced Settings (Performance, Wireless Resource, Multi-SSID, VLAN, Intrusion, Schedule, Internal RADIUS Server, ARP Spoofing Prevention, Bandwidth Optimization), AP Array, Captive Portal (Authentication Settings, Login Page Upload, IP Filter Settings, MAC Bypass), DHCP Server, Filters, Traffic Control, and Status. The main content area is titled 'IP Filter Settings'. It features a 'Wireless Band' dropdown set to '2.4GHz', an 'SSID Index' dropdown set to 'Primary SSID', and input fields for 'IP Address' and 'Subnet Mask' with an 'Add' button below them. Below these fields is a table with columns 'ID', 'IP Address', 'Subnet Mask', and 'Delete'. At the bottom, there are sections for 'Upload IP Filter File' (with a file input field, a browse icon, and an 'Upload' button) and 'Download IP Filter File' (with a 'Download' button and a 'Save' button at the very bottom right).



## MAC Bypass

The DAP-2660 features a wireless MAC Bypass. Once a user is finished with these settings, click the Save button to let the changes take effect.

**Wireless Band:** Select the wireless band for MAC Bypass.

**SSID Index:** Select the SSID for MAC Bypass.

**MAC Address:** Enter each MAC address that you wish to include in your bypass list, and click Add.

**MAC Address List:** When a MAC address is entered, it appears in this list.  
Highlight a MAC address and click the Delete icon to remove it from this list.

**Upload File:** To upload a MAC bypass list file, click Browse and navigate to the MAC bypass list file saved on the computer, and then click Upload.

**Load MAC File to Local Hard Driver:** To download MAC bypass list file, click Download and to save the MAC bypass list.

**D-Link** DAP-2690

Home Maintenance Configuration System Logout Help

**MAC Bypass Settings**

Wireless Band: 2.4GHz

SSID Index: Primary SSID

MAC Address: [ ] : [ ] : [ ] : [ ] : [ ] : [ ] **Add**

ID	MAC Address	Delete

**Upload MAC File**

Upload File : [ ] **Browse...** **Upload**

**Download MAC File**

Load MAC File to Local Hard Driver : **Download**

**Save**

# DHCP Server

## Dynamic Pool Settings

The DHCP address pool defines the range of the IP address that can be assigned to stations in the network. A Dynamic Pool allows wireless stations to receive an available IP with lease time control. Once a user is finished, click the **Save** button to let the changes take effect.

**Function** Dynamic Host Configuration Protocol (DHCP) assigns dynamic IP addresses to devices on the network. This protocol simplifies network management and allows new wireless devices to receive IP addresses automatically without the need to manually assign new IP addresses. Select **Enable** to allow the DAP-2690 to function as a DHCP server.

**IP Assigned From:** Input the first IP address available for assignment on your network.

**The Range of Pool (1-254):** Enter the number of IP addresses available for assignment. IP addresses are increments of the IP address specified in the "IP Assigned From" field.

**Subnet Mask:** All devices in the network must have the same subnet mask to communicate. Enter the submask for the network here.

**Gateway:** Enter the IP address of the gateway on the network.

**WINS:** Specify the Windows Internet Naming Service (WINS) server address for the wireless network. WINS is a system that determines the IP address of a network computer that has a dynamically assigned IP address.

**DNS:** Enter the IP address of the Domain Name System (DNS) server. The DNS server translates domain names such as www.dlink.com into IP addresses.

The screenshot shows the D-Link DAP-2690 web interface. The top navigation bar includes Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view with categories like Basic Settings, Advanced Settings, and Status. The main content area is titled "Dynamic Pool Settings" and contains the following fields:

- DHCP Server Control:** Function Enable/Disable (set to Disable).
- Dynamic Pool Settings:**
  - IP Assigned From: 192.168.0.20
  - The Range of Pool (1-254): 235
  - Subnet Mask: 255.255.255.0
  - Gateway: (empty)
  - WINS: (empty)
  - DNS: (empty)
  - Domain Name: dlink-ap
  - Lease Time (60 - 31536000 sec): 604800

A "Save" button is located at the bottom right of the settings area.



**Domain Name:** Enter the domain name of the network, if applicable. (An example of a domain name is **www.dlink.com**.)

**Lease Time:** The lease time is the period of time before the DHCP server will assign new IP addresses.

## Static Pool Setting

The DHCP address pool defines the range of IP addresses that can be assigned to stations on the network. A static pool allows specific wireless stations to receive a fixed IP without time control. Once a user is finished, click the **Save** button to let the changes take effect.

**Function Enable/Disable:** Dynamic Host Configuration Protocol (DHCP) assigns IP addresses to wireless devices on the network. This protocol simplifies network management and allows new wireless devices to receive IP addresses automatically without the need to manually assign IP addresses. Select **Enable** to allow the DAP-2690 to function as a DHCP server.

**Host Name:** Enter the name of the host computer in this text box.

**Assigned IP:** Use the Static Pool Settings to assign the same IP address to a device every time you start up. The IP addresses assigned in the Static Pool list must NOT be in the same IP range as the Dynamic Pool. After you have assigned a static IP address to a device via its MAC address, click **Save**; the device will appear in the Assigned Static Pool at the bottom of the window. You can edit or delete the device in this list.

**Assigned MAC Address:** Enter the MAC address of the device requesting association here.

**Subnet Mask:** Define the subnet mask of the IP address specified in the "IP Assigned From" field.

**Gateway:** Specify the Gateway address for the wireless network.

**WINS:** Specify the Windows Internet Naming Service (WINS) server address for the wireless network. WINS is a system that determines the IP address of a network computer with a dynamically assigned IP address, if applicable.

**DNS:** Enter the Domain Name System (DNS) server address for the wireless network. The DNS server translates domain names such as www.dlink.com into IP addresses.

**Domain Name:** Specify the domain name for the network.

**D-Link** DAP-2690

Home Maintenance Configuration System Logout Help

**Static Pool Settings**

**DHCP Server Control**  
Function Enable/Disable: **Disable**

**Static Pool Setting**

Host Name:

Assigned IP:

Assigned MAC Address:  :  :  :  :  :

Subnet Mask:

Gateway:

WINS:

DNS:

Domain Name:

**Save**

Host Name	MAC Address	IP Address	Edit	Delete

## Current IP Mapping List

This window displays information about the current assigned DHCP dynamic and static IP address pools. This information is available when you enable DHCP server on the AP and assign dynamic and static IP address pools.

**Current DHCP Dynamic Pools:** These are IP address pools the DHCP server has assigned using the dynamic pool setting.

**Binding MAC Address:** The MAC address of a device on the network that is assigned an IP address from the DHCP dynamic pool.


**Assigned IP Address:** The current corresponding DHCP-assigned IP address of the device.

**Lease Time:** The length of time that the dynamic IP address will be valid.

**Current DHCP Static Pools:** These are the IP address pools of the DHCP server assigned through the static pool settings.

**Binding MAC Address:** The MAC address of a device on the network that is within the DHCP static IP address pool.

**Assigned IP Address:** The current corresponding DHCP-assigned static IP address of the device.

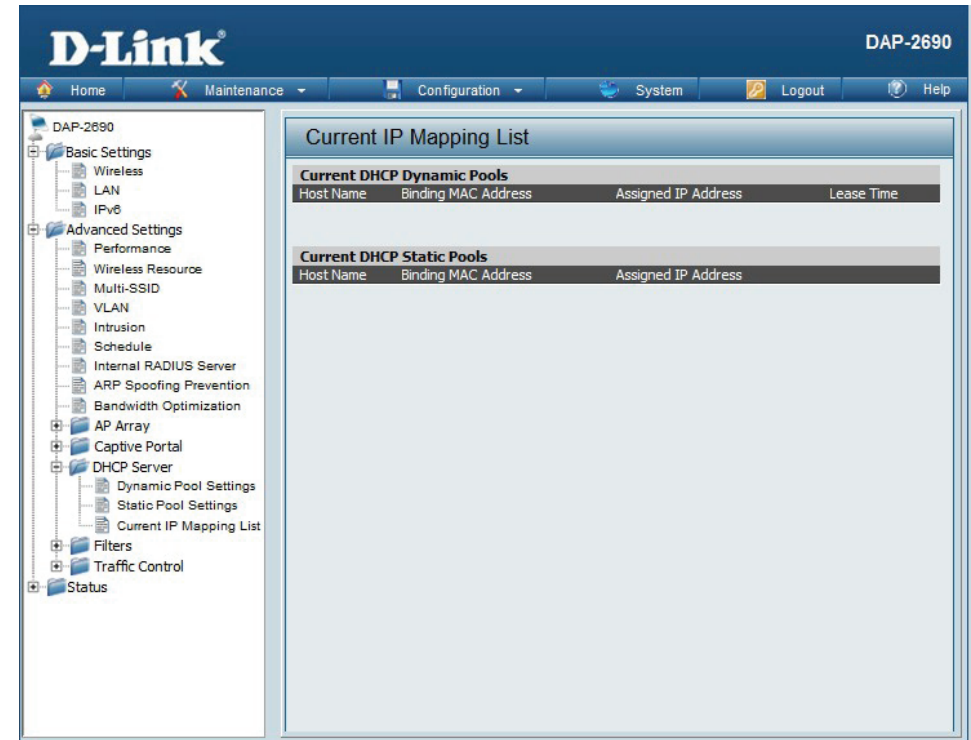

# Filters

## Wireless MAC ACL

The DAP-2690 features a wireless MAC Access Control List filter. Once a user is finished with these settings, click the **Save** button to let the changes take effect.

**Wireless Band:** Select the wireless band for Wireless MAC ACL.

**Access Control List:** Select **Disable** to disable the filters function.  
Select **Accept** to accept only those devices with MAC addresses in the *Access Control List*. All other devices not on the list will be rejected.  
Select **Reject** to reject the devices with MAC addresses on the *Access Control List*. All other devices not on the list will be accepted.

**SSID Index:** Select the SSID for Wireless MAC ACL.

**MAC Address:** Enter each MAC address that you wish to include in your filter list, and click **Add**.

**MAC Address List:** When a MAC address is entered, it appears in this list. Highlight a MAC address and click the **Delete** icon to remove it from this list.

**Current Client Information:** This table displays information about all the current connected stations.

**Upload File :** To upload a ACL list file, click **Browse** and navigate to the ACL list file, saved on the computer, and then click **Upload**.

**Load ACL File to Local Hard Driver :** To download ACL list file, click **Download** and to save the ACL list.

The screenshot displays the D-Link DAP-2690 web management interface. The top navigation bar includes links for Home, Maintenance, Configuration, System, Logout, and Help. A left-hand sidebar contains a tree view of configuration options: Basic Settings, Advanced Settings (expanded), Performance, Wireless Resource, Multi-SSID, VLAN, Intrusion, Schedule, Internal RADIUS Server, ARP Spoofing Prevention, Bandwidth Optimization, AP Array, Captive Portal, DHCP Server, Filters (expanded), Wireless MAC ACL (selected), WLAN Partition, Traffic Control, and Status.

The main content area is titled "Wireless MAC ACL Settings". It contains the following configuration fields:

- Wireless Band: 5GHz
- Access Control List: Disable
- SSID Index: Primary SSID
- MAC Address: A field with six segments (each with a dropdown arrow) and an "Add" button.

Below these fields is a table with columns: ID, MAC Address, and Delete. The table is currently empty.

Under the table is a section titled "Current Client Information". It contains a table with columns: MAC Address, SSID, Band, Authentication, Signal, and Add. This table is also empty.

At the bottom, there are two sections:

- Upload ACL File:** Includes a "Upload File:" label, a text input field, a "浏览..." (Browse) button, and an "Upload" button.
- Download ACL File:** Includes a "Load ACL File to Local Hard Driver:" label and a "Download" button.

A "Save" button is located at the bottom right of the interface.

## WLAN Partition


The DAP-2690 features a wireless partition. Once a user is finished with these settings, click the **Save** button to let the changes take effect.

**Wireless Band:** Displays the current wireless band.

**Link Integrity:** Select **Enable** or **Disable**. If the Ethernet connection between the LAN and the AP is disconnected, enabling this feature will cause the wireless segment associated with the AP to be disassociated from the AP.

**Ethernet to WLAN Access:** The default is **Enable**. When disabled, all data from the Ethernet to associated wireless devices will be blocked. Wireless devices can still send data to the Ethernet.

**Internal Station Connection:** The default value is **Enable**, which allows stations to intercommunicate by connecting to a target AP. When disabled, wireless stations cannot exchange data on the same Multi-SSID. In Guest mode, wireless stations cannot exchange data with any station on your network.

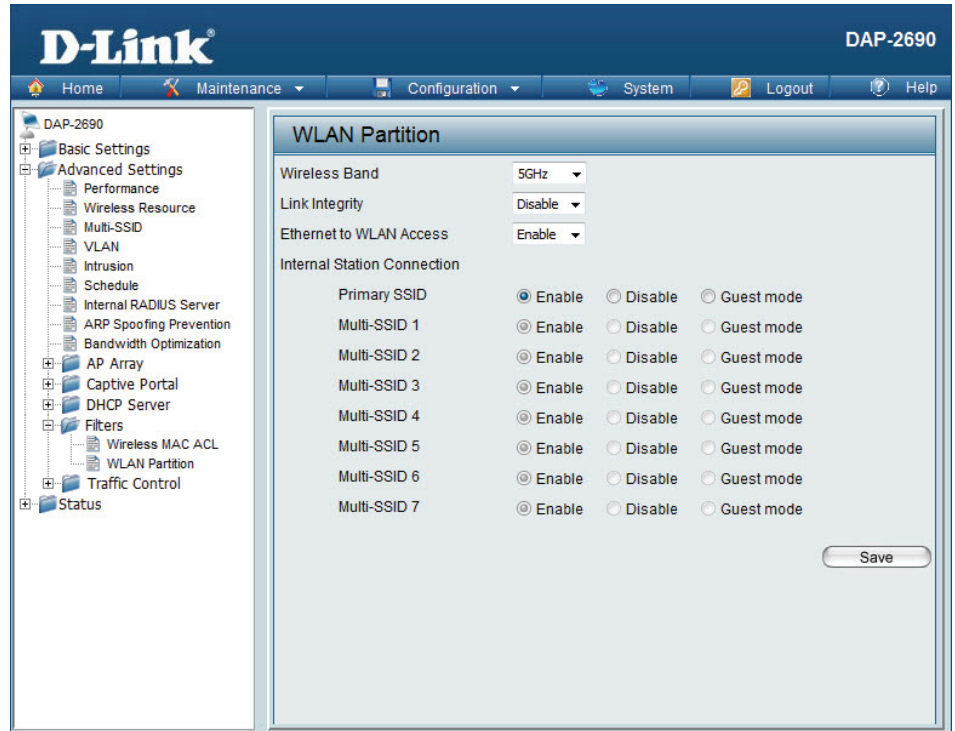

# Traffic Control

## Uplink/Downlink Setting

The uplink/downlink setting allows users to customize the downlink and uplink interfaces including specifying downlink/uplink bandwidth rates in Mbits per second. These values are also used in the QoS and Traffic Manager windows. Once the desired uplink and downlink settings are finished, click the **Save** button to let your changes take effect.

**Downlink Bandwidth:** The downlink bandwidth in Mbits per second.

**Uplink Bandwidth:** The uplink bandwidth in Mbits per second.

**D-Link** DAP-2690

Home Maintenance Configuration System Logout Help

**Uplink and Downlink Setting**

Ethernet ☐ Downlink ☐ Uplink

**2.4GHz** 5GHz

**Downlink Interface**

☐ Primary-ssid ☐ Multi-ssid1 ☐ Multi-ssid2 ☐ Multi-ssid3  
☐ Multi-ssid4 ☐ Multi-ssid5 ☐ Multi-ssid6 ☐ Multi-ssid7  
☐ WDS1 ☐ WDS2 ☐ WDS3 ☐ WDS4  
☐ WDS5 ☐ WDS6 ☐ WDS7 ☐ WDS8

**Uplink Interface**

☐ Primary-ssid ☐ Multi-ssid1 ☐ Multi-ssid2 ☐ Multi-ssid3  
☐ Multi-ssid4 ☐ Multi-ssid5 ☐ Multi-ssid6 ☐ Multi-ssid7  
☐ WDS1 ☐ WDS2 ☐ WDS3 ☐ WDS4  
☐ WDS5 ☐ WDS6 ☐ WDS7 ☐ WDS8

Downlink Bandwidth(1~300) 100 Mbits/sec  
 Uplink Bandwidth(1~300) 100 Mbits/sec

Save

## QoS

Quality of Service (QoS) enhances the experience of using a network by prioritizing the traffic of different applications. The DAP-2690 supports four priority levels. Once the desired QoS settings are finished, click the **Save** button to let your changes take effect.

**Enable QoS:** Check this box to allow QoS to prioritize traffic. Use the drop-down menus to select the four levels of priority. Click the **Save** button when you are finished.

**Downlink Bandwidth:** The downlink bandwidth in Mbits per second. This value is entered in the Uplink/Downlink Setting window.

**Uplink Bandwidth:** The uplink bandwidth in Mbits per second. This value is entered in the Uplink/Downlink Setting window.

**D-Link DAP-2690 QoS Configuration**

Enable QoS ☐

**Advanced QoS**

Downlink Bandwidth	100	Mbits/sec
Uplink Bandwidth	100	Mbits/sec
ACK/DHCP/ICMP/DNS Priority	Highest Priority	Limit: 100 % Port: 53,67,68,546,547
Web Traffic Priority	Third Priority	Limit: 100 % Port: 80,443,3128,8080
Mail Traffic Priority	Second Priority	Limit: 100 % Port: 25,110,465,995
Ftp Traffic Priority	Low Priority	Limit: 100 % Port: 20,21
User Defined-1 Priority	Highest Priority	Limit: 100 % Port: 0 - 0
User Defined-2 Priority	Second Priority	Limit: 100 % Port: 0 - 0
User Defined-3 Priority	Third Priority	Limit: 100 % Port: 0 - 0
User Defined-4 Priority	Low Priority	Limit: 100 % Port: 0 - 0
Other Traffic Priority	Low Priority	Limit: 100 %

Save



## Traffic Manager

The traffic manager feature allows users to create traffic management rules that specify how to deal with listed client traffic and specify downlink/uplink speed for new traffic manager rules. Click the **Save** button to let your changes take effect.

**Traffic Manager:** Use the drop-down menu to **Enable** the traffic manager feature.

**Unlisted Client Traffic:** Select **Deny** or **Forward** to determine how to deal with unlisted client traffic.

**Downlink Bandwidth:** The downlink bandwidth in Mbits per second. This value is entered in the Uplink/Downlink Setting window.

**Uplink Bandwidth:** The uplink bandwidth in Mbits per second. This value is entered in the Uplink/Downlink Setting window.

**D-Link** DAP-2690

Home Maintenance Configuration System Logout Help

DAP-2690

- Basic Settings
- Advanced Settings
  - Performance
  - Wireless Resource
  - Multi-SSID
  - VLAN
  - Intrusion
  - Schedule
  - Internal RADIUS Server
  - ARP Spoofing Prevention
  - Bandwidth Optimization
  - AP Array
  - Captive Portal
  - DHCP Server
  - Filters
  - Traffic Control
    - Uplink/Downlink Settings
    - QoS
    - Traffic Manager**
- Status

### Traffic Manager

Traffic Manager Disable

Unlisted Clients Traffic ☐ Deny ☒ Forward

Downlink Bandwidth  Mbits/sec

Uplink Bandwidth  Mbits/sec

#### Add Traffic Manager Rule

Name

Client IP(optional)

Client MAC(optional)

Downlink Speed  Mbits/sec

Uplink Speed  Mbits/sec

#### Traffic Manager Rules

Name	Client IP	Client MAC	Downlink Speed	Uplink Speed	Edit	Del
<input type="button" value="Save"/>						



# Status

## Device Information

**Device Information:** This read-only window displays the configuration settings of the DAP-2690, including the firmware version and the device's MAC address.

DAP-2690

- Basic Settings
- Advanced Settings
- Status
  - Device Information
  - Client Information
  - WDS Information
  - Channel Analyze
- Statistics
- Log

D-LinkDAP-2690

HomeMaintenanceConfigurationSystemLogoutHelp

Device Information

Firmware Version:3.10

Ethernet MAC Address:9c:d6:43:29:04:90

Wireless MAC Address(2.4GHz): Primary: 9c:d6:43:29:04:90  
SSID 1~7: 9c:d6:43:29:04:91 ~ 9c:d6:43:29:04:97

Wireless MAC Address(5GHz): Primary: 9c:d6:43:29:04:98  
SSID 1~7: 9c:d6:43:29:04:99 ~ 9c:d6:43:29:04:9f

Ethernet

IP Address192.168.0.50

Subnet Mask255.255.255.0

GatewayN/A

DNS

Wireless (2.4GHz)

Network Name (SSID)dlink

Channel1

Data RateAuto

SecurityNone

Wireless (5GHz)

Network Name (SSID)dlink

Channel64

Data RateAuto

SecurityNone

AP Array

AP Arrayd-link

RoleSlave

Location

Device Status

CPU Utilization6%

Memory Utilization20%

Central WiFiManager

Connection StatusDisconnect

Server IP

Service Port

Live Port

Group ID

# Client Information

**Client Information:** This window displays the wireless client information for clients currently connected to the DAP-2690.

The following information is available for each client communicating with the DAP-2690.

**SSID:** Displays the SSID of the client.

**MAC:** Displays the MAC address of the client.

**Band:** Displays the wireless band that the client is connected to.

**Authentication:** Displays the type of authentication being used.

**RSSI:** Displays the client's signal strength (received signal strength indicator).

## Power Saving

**Mode:** Displays the status of the power saving feature.

The screenshot shows the D-Link DAP-2690 web interface. The top navigation bar includes Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view with options: Basic Settings, Advanced Settings, Status, Device Information, Client Information, WDS Information, Channel Analyze, Statistics, and Log. The main content area is titled 'Client Information' and displays two tables. The first table, 'Station association (2.4GHz): 1', has columns for SSID, MAC, Band, Authentication, RSSI, and Power Saving Mode, with one row showing 'Primary SSID', '28:10:7B:14:4A:36', 'N', 'OPEN', '59%', and 'Off'. The second table, 'Station association(5GHz): 0', has the same columns but is currently empty.

SSID	MAC	Band	Authentication	RSSI	Power Saving Mode
Primary SSID	28:10:7B:14:4A:36	N	OPEN	59%	Off


SSID	MAC	Band	Authentication	RSSI	Power Saving Mode
------	-----	------	----------------	------	-------------------

# WDS Information

**WDS** This window displays the Wireless Distribution System **Information:** information for clients currently connected to the DAP-2690.

The following information is available for each client communicating with the DAP-2690.

- Name:** Displays the name of the client.
- MAC:** Displays the MAC address of the client.
- Authentication:** Displays the type of authentication being used.
- Signal:** Displays the WDS link signal strength.
- Status:** Displays the status of the power saving feature.

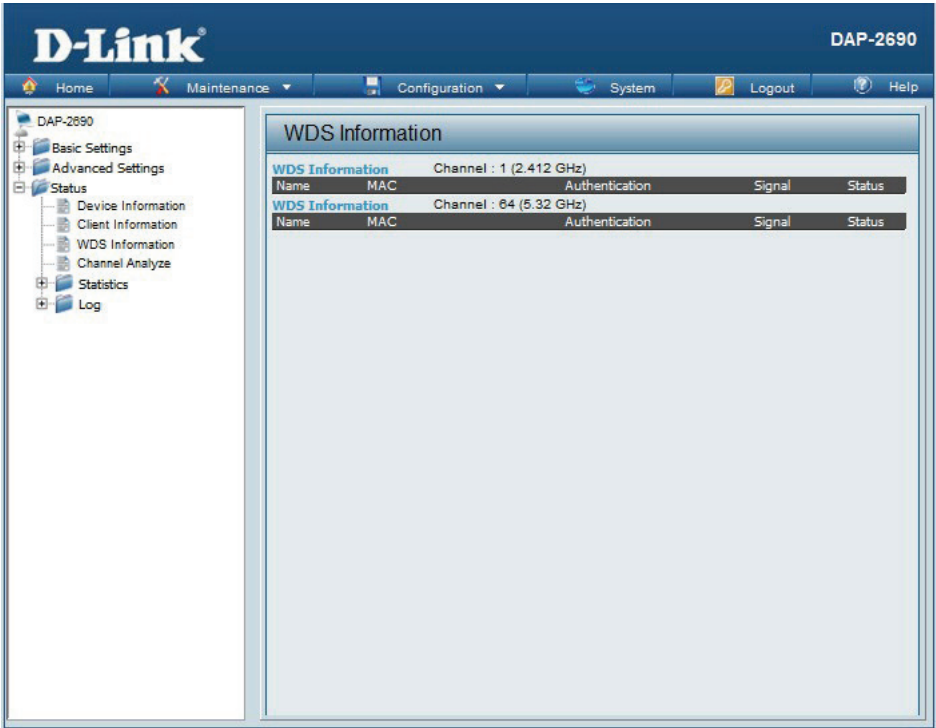


# Channel Analyze

**Wireless Band:** Select either **2.4Ghz** or **5GHz**.

**Detect:** Click the **Detect** button to scan.


**AP List:** This will list the transmitting channels and quality.

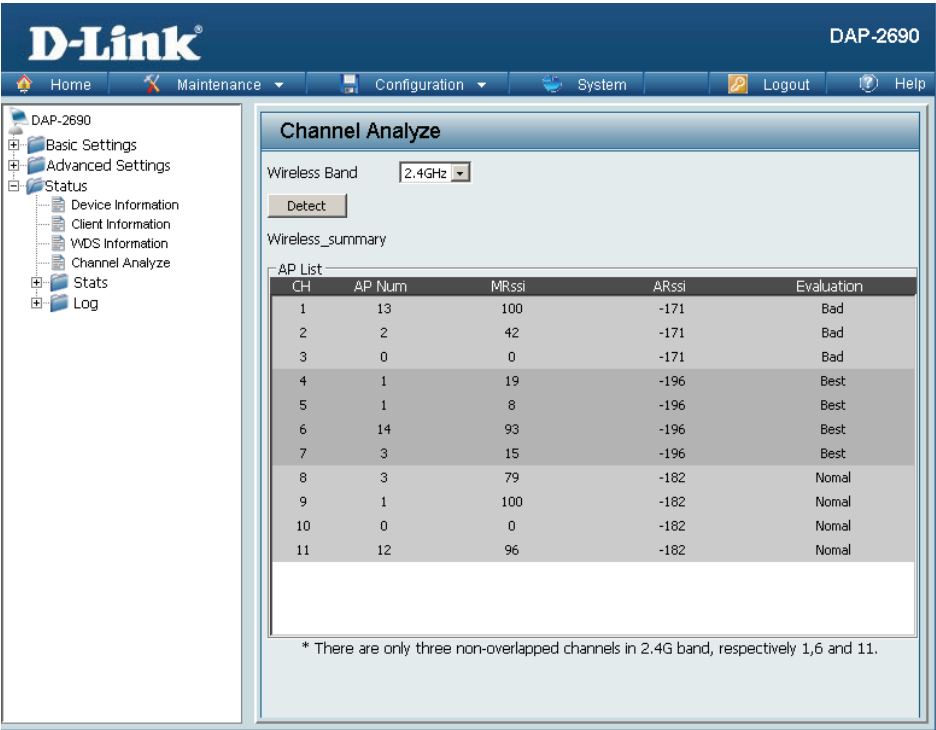

# Stats


## Ethernet

**Ethernet Traffic** This window displays transmitted and received **Statistics:** count statistics for packets and bytes.

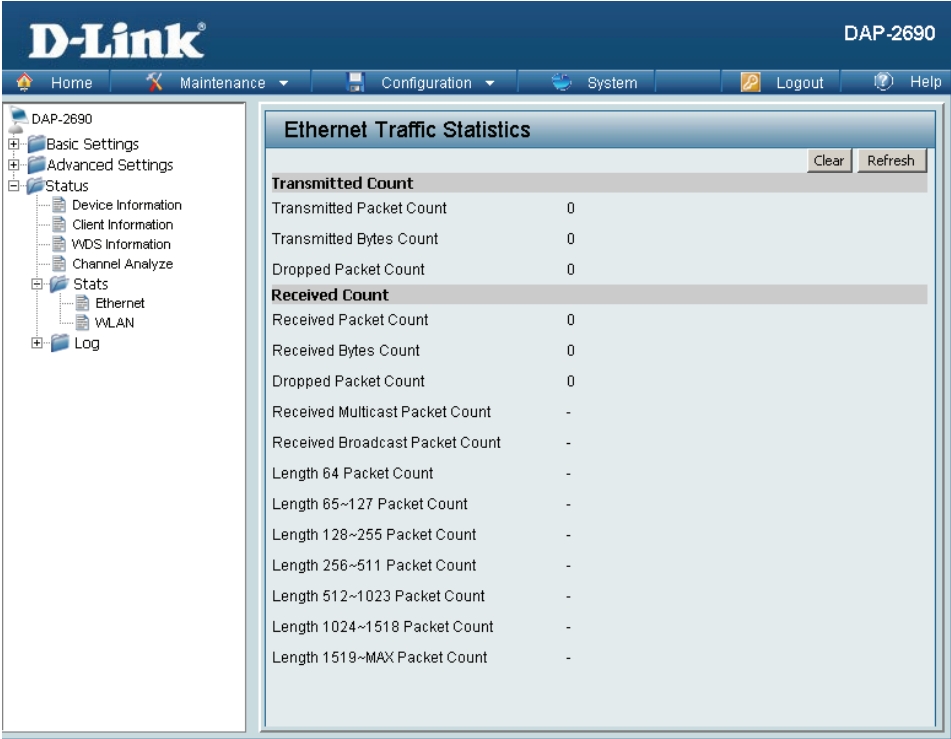

# Wireless Traffic Stats


**WLAN Traffic** This window displays wireless network statistics for data  
**Statistics:** throughput, transmitted and received frames, and frame errors.

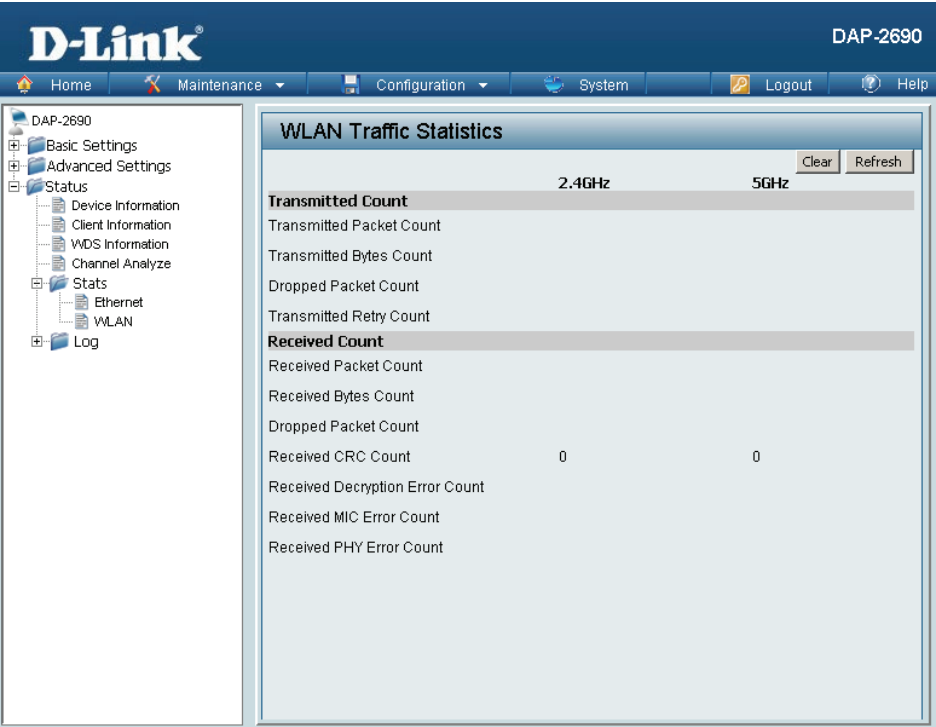

# Log

## View Log

**View Log:** The AP's embedded memory displays system and network messages including a time stamp and message type. The log information includes but is not limited to the following items: cold start AP, upgrading firmware, client associate and disassociate with AP, and web login. The web page holds up to 500 logs.

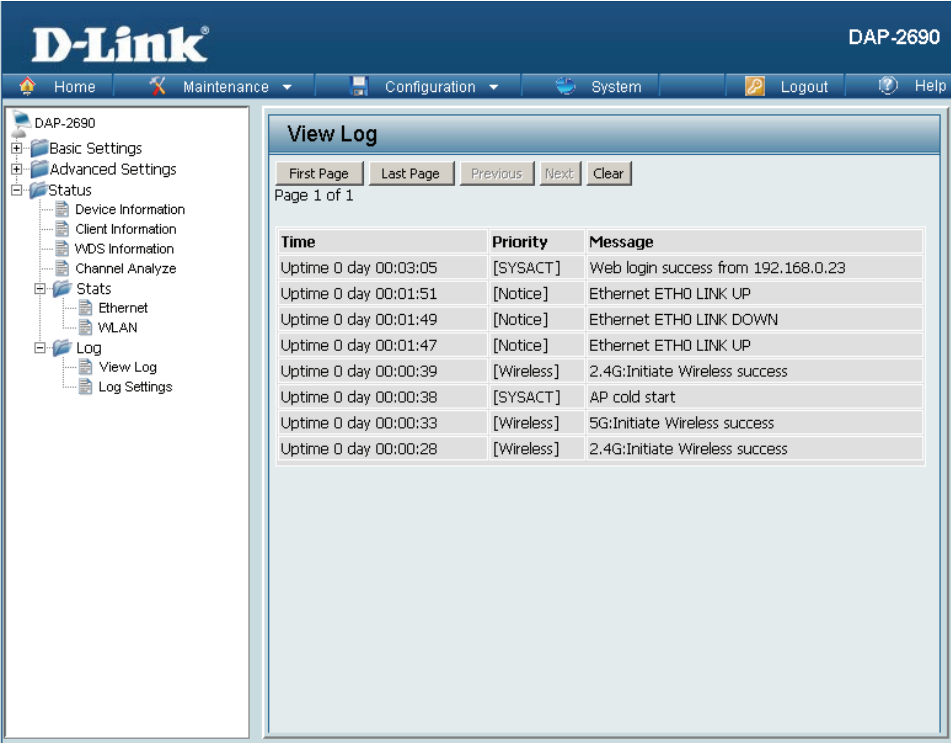

## Log Settings

**Log Server/IP Address:** Enter the IP address of the server you would like to send the DAP-2690 log to.

**Log Type:** Check the box for the type of activity you want to log. There are three types: System Activity, Wireless Activity, and Notice.

**Email Notification:** Check the box to enable Simple Mail Transfer Protocol.

**From Email Address:** Enter the e-mail address of the e-mail/SMTP sender.

**To Email Address:** Enter the e-mail address of the e-mail/SMTP recipient.

**Email Server Address:** Enter the IP address of the e-mail/SMTP server.

**SMTP Port:** Enter the desired SMTP port number. The default value is 25.

**User Name:** Enter a user name for the SMTP server.

**Password:** Enter a password for the SMTP server.

**Confirm Password:** Confirm the password for the SMTP server by retyping it.

**Schedule:** Use the drop-down menu to set the e-mail log schedule.

The screenshot shows the D-Link DAP-2690 web interface. The top navigation bar includes links for Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view with categories like Basic Settings, Advanced Settings, Status, Device Information, Client Information, WDS Information, Channel Analyze, Stats, Ethernet, WLAN, Log, View Log, and Log Settings. The main content area is titled 'Log Settings' and contains three sections: 'Log Settings', 'Email Notification', and 'Email Log Schedule'. The 'Log Settings' section has a text input for 'Log Server / IP Address' and three checked checkboxes for 'Log Type': 'System Activity', 'Wireless Activity', and 'Notice'. The 'Email Notification' section has an 'Email Notification' checkbox (unchecked), an 'Outgoing mail server (SMTP)' dropdown set to 'Internal', and three 'Enable' checkboxes for 'Authentication', 'SSL/TLS', and 'Email Notification'. Below these are text inputs for 'From Email Address', 'To Email Address', 'Email Server Address', 'SMTP Port', 'User Name', 'Password', and 'Confirm Password'. The 'Email Log Schedule' section has a 'Schedule' dropdown set to '0' and the text 'hours or when Log is full'. A 'Save' button is located at the bottom right of the form.



# Maintenance

## Administrator Settings

Check one or more of the six main categories to display the various hidden administrator parameters and settings displayed on the next six windows.

### Limit Administrator

**Limit Administrator** Check the box and then enter the specific VLAN ID that the **VLAN ID:** administrator will be allowed to log in from.

**Limit Administrator IP:** Check to enable the Limit Administrator IP address.

**IP Range:** Enter the IP address range that the administrator will be allowed to log in from and then click the **Add** button.

### System Name Settings

**System Name:** The name of the device. The default name is **D-Link DAP-2690**.

**Location:** The physical location of the device, e.g. "office".

The screenshot shows the D-Link DAP-2690 web interface. The top navigation bar includes Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows the navigation menu with DAP-2690, Basic Settings, Advanced Settings, and Status. The main content area is titled 'Administration Settings' and contains several sections:


- Limit Administrator** (checked): Includes checkboxes for 'Limit Administrator VLAN ID' and 'Limit Administrator IP', both of which are enabled. The 'IP Range' section has 'From' and 'To' input fields and an 'Add' button. Below this is a table with columns 'Item', 'From', 'To', and 'Delete'.
- System Name Settings** (checked): Includes 'System Name' (D-Link DAP-2690) and 'Location' (empty) input fields.
- Login Settings** (checked): Includes 'Login Name' (admin), 'New Password', and 'Confirm Password' input fields, along with an 'Apply New Password' checkbox.
- Console Settings** (checked): Includes 'Status' (checked), 'Console Protocol' (Telnet selected, SSH unselected), and 'Timeout' (3 Mins).
- SNMP Settings** (checked): Includes 'Status' (checked), 'Public Community String' (public), 'Private Community String' (private), 'Trap Status' (unchecked), and 'Trap Server IP' (empty).
- Ping Control Setting** (checked): Includes 'Status' (checked).
- Central WiFiManager Setting** (checked): Includes 'Enable Central WiFiManager' (Disable).

### Login Settings

**User Name:** Enter a user name. The default is **admin**.

**New Password:** When changing your password, enter the new password here. The password is case-sensitive. "A" is a different character than "a." The length should be between 0 and 12 characters.

**Confirm Password:** Enter the new password a second time for confirmation purposes.

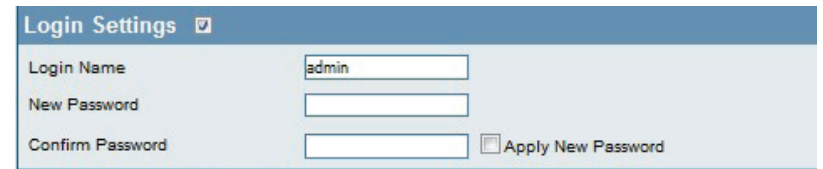


The screenshot shows the 'Login Settings' section with a blue header bar containing the title and a checkmark icon. Below the header, there are three input fields: 'Login Name' with the value 'admin', 'New Password', and 'Confirm Password'. To the right of the 'Confirm Password' field is a checkbox labeled 'Apply New Password'.

### Console Settings

**Status:** Status is enabled by default. Uncheck the box to disable the console port.

**Console Protocol:** Select the type of protocol you would like to use: **Telnet** or **SSH**.

**Timeout:** Set to **1 Min**, **3 Mins**, **5 Mins**, **10 Mins**, **15 Mins** or **Never**.

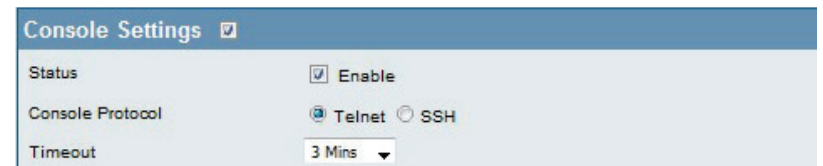

The screenshot shows the 'Console Settings' section with a blue header bar containing the title and a checkmark icon. Below the header, there are three settings: 'Status' with a checked checkbox and the label 'Enable', 'Console Protocol' with radio buttons for 'Telnet' (selected) and 'SSH', and 'Timeout' with a dropdown menu showing '3 Mins'.

## SNMP Settings

**Status:** Check the box to enable the SNMP functions. This is enabled by default.

### Public Community

**String:** Enter the public SNMP community string.

### Private Community

**String:** Enter the private SNMP community string.

**Trap Status:** Check the box to enable the trap status.

**Trap Server IP:** Enter the trap server IP address. This is the IP address of the SNMP manager to receive traps sent from the wireless access point.

SNMP Settings

Status

☐ Enable

Public Community String

public

Private Community String

private

Trap Status

☐ Enable

Trap Server IP

Ping Control Setting

Status

☒ Enable

Save

## Ping Control Setting

**Status:** Check the box to enable Ping control. Ping works by sending ICMP“echo request”packets to the target host and listening for ICMP echo response replies. The default is enabled.

## Central WiFiManager Settings

**Enable Central WiFiManager :** Select to enable or disable the Central WiFiManager.

Central WiFiManager Setting

Enable Central WiFiManager

Disable

# Firmware and SSL Certification Upload

**Upload Firmware From Local Hard Drive:** The current firmware version is displayed above the file location field. After downloading the most recent version of firmware for the DAP-2690 from <http://dlink.com/support> to your local computer, use the **Browse** button to locate the firmware file on your computer. Click **Upload** to update the firmware version. Please don't turn the power off while upgrading.

**Language Pack Upgrade:** Click **Browse** to locate the language pack upgrade on your local computer. After selecting and opening the file, click **Upload** to upload the file to the DAP-2690.

**Upload SSL Certification From Local Hard Drive:** Click **Browse** to locate the SSL Certification file on your local computer. After selecting and opening the file, click **Upload** to upload the file to the DAP-2690.


The screenshot displays the D-Link DAP-2690 web management interface. The top navigation bar includes links for Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view with DAP-2690, Basic Settings, Advanced Settings, and Status. The main content area is titled "Firmware and SSL Certification Upload" and contains three sections:

- Update Firmware From Local Hard Drive:** Shows "Firmware Version 2.00" and a form with a text input field, a "Browse..." button, and an "Upload" button.
- Update SSL Certification From Local Hard Drive:** Contains a form with a text input field, a "Browse..." button, and an "Upload" button.
- Upload Key From File:** Contains a form with a text input field, a "Browse..." button, and an "Upload" button.

# Configuration File

**Upload File:** Click the **Browse** button to locate a previously saved configuration file on your local computer. After selecting the file, click **Upload** to apply the configuration settings to the DAP-2690.

**Download Configuration File:** Click **Download** to save the current DAP-2690 configuration to your local computer. Note that if you save one configuration with the administrator's password now, after resetting your DAP-2690, and then updating to this saved configuration file, the password will be gone.

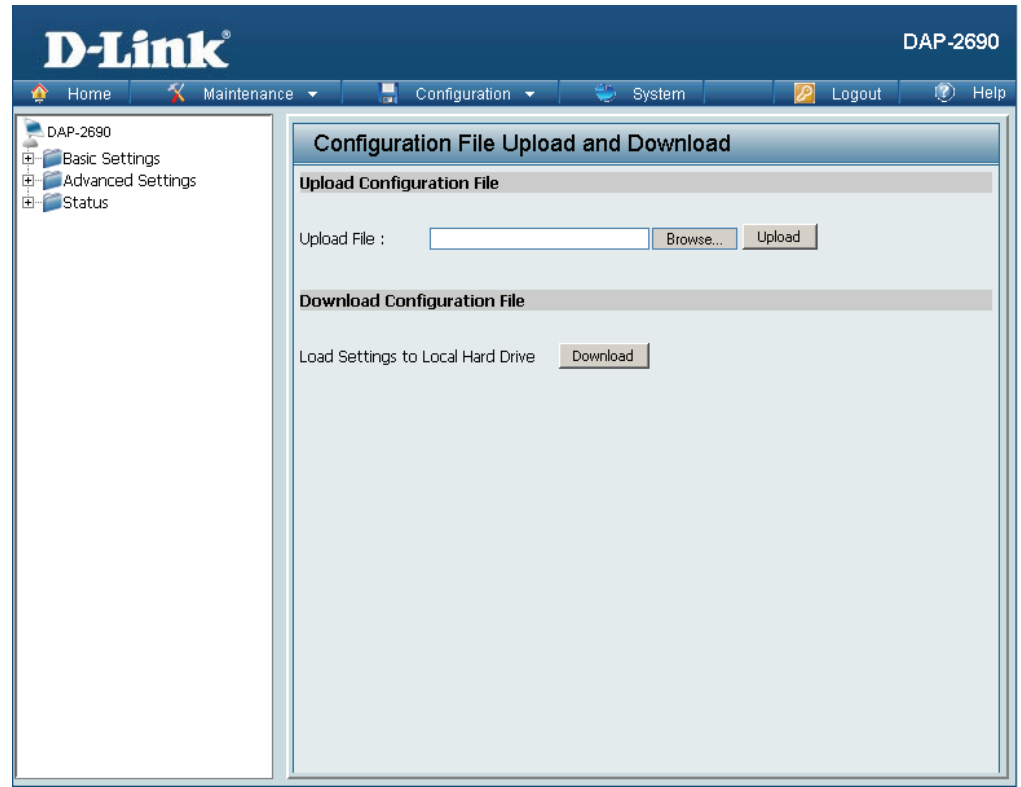

# Time and Date

**Current Time:** Displays the current time and date settings.

**Enable NTP Server:** Check to enable the AP to get system time from an NTP server from the Internet.

**NTP Server:** Enter the NTP server IP address.

**Time Zone:** Use the drop-down menu to select your correct Time Zone.

## Enable Daylight

**Saving:** Check the box to enable Daylight Saving Time.

**Daylight Saving Dates:** Use the drop-down menu to select the correct Daylight Saving offset.

**Set the Date and Time Manually:** A user can either manually set the time for the AP here, or click the **Copy Your Computer's Time Settings** button to copy the time from the computer in use (Make sure that the computer's time is set correctly).


The screenshot shows the D-Link DAP-2690 web interface. The top navigation bar includes links for Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view with DAP-2690, Basic Settings, Advanced Settings, and Status. The main content area is titled "Time and Date Settings" and contains three sections:

- Time Configuration:** Displays the "Current Time" as 01/01/1970 00:31:38.
- Automatic Time Configuration:**
  - Enable NTP Server:** A checkbox that is currently unchecked.
  - NTP Server:** A text input field.
  - Time Zone:** A dropdown menu showing "(GMT+08:00) Ulaan Bataar".
  - Enable Daylight Saving:** A checkbox that is currently unchecked.
  - Daylight Saving Dates:** A table with columns for DST Start, Month, Week, Day of Week, and Current Time.
 

DST Start	Month	Week	Day of Week	Current Time
DST Start	Jan	1st	Sun	12 am
DST End	Jan	1st	Sun	12 am
- Set the Date and Time Manually:**
  - Date And Time:** A form with dropdowns for Year (2012), Month (Aug), Day (22), Hour (10), Minute (5), and Second (48).
  - Copy Your Computer's Time Settings:** A button to copy the time from the computer.
  - Save:** A button at the bottom right of the section.


# Configuration

## Save and Activate

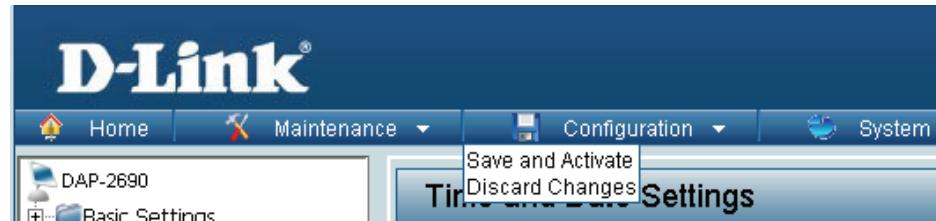


The drop-down Configuration menu allows users to save the current changes and reboot the DAP-2690 by clicking "Save and Activate".

If the "Save and Activate" option is selected, the following window will appear to display how many seconds remain before the save settings and reboot system action is completed.

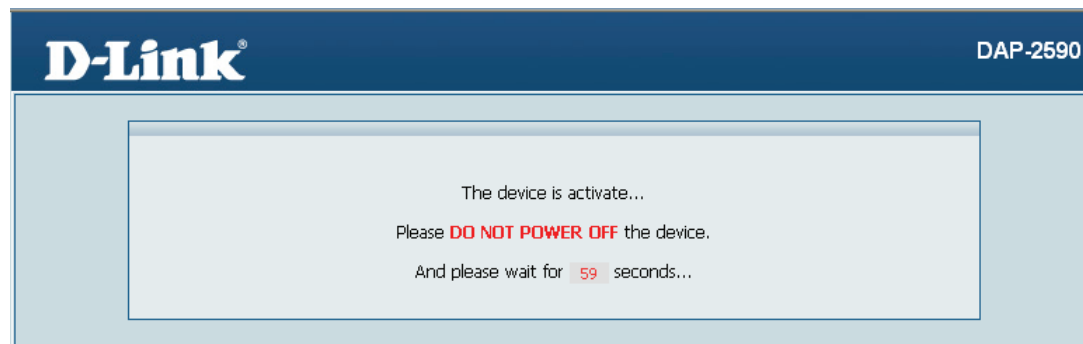

## Discard Changes

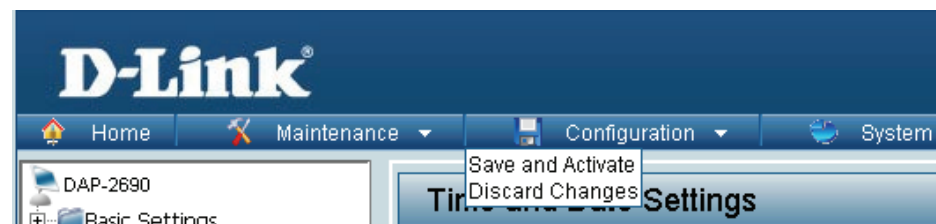

The drop-down Configuration menu allows users to drop the latest changes by clicking "Discard Changes."

# System System Settings

**Restart the Device:** Click **Restart** to restart the DAP-2690.

**Restore to Factory Default Settings:** Click **Restore** to restore the DAP-2690 back to factory default settings.

**Clear Language Pack:** Click **Clear** to remove the DAP-2690 language pack.





# Help

**Help:** Scroll down the Help page for topics and explanations.

Basic Settings

Wireless Settings

Allow you to change the wireless settings to fit an existing wireless network or to customize your wireless network.

Wireless Band

Operating frequency band. Choose 2.4GHz for visibility to legacy devices and for longer range. Choose 5GHz for least interference; interference can hurt performance. This AP will operate two bands at a time.

Mode

Select a function mode to configure your wireless network. Function modes include Access Point, WDS (Wireless Distribution System) with AP, WDS and Wireless Client. Function modes are designed to support various wireless network topology and applications.

Network Name (SSID)

Also known as the Service Set Identifier, this is the name designated for a specific wireless local area network (WLAN). The factory default setting is "dlink". The SSID can be easily changed to connect to an existing wireless network or to establish a new wireless network.

SSID Visibility

Indicate whether or not the SSID of your wireless network will be broadcasted. The default value of SSID Visibility is set to "Enable," which allow wireless clients to detect the wireless network. By changing this setting to "Disable," wireless clients can no longer detect the wireless network and can only connect if they have the correct SSID entered.

Auto Channel Selection

If you check Auto Channel Scan, everytime when AP is booting up, the AP will automatically find the best channel to use. This is enabled by default.

Channel

Indicate the channel setting for the DAP-2690. By default, the AP is set to Auto Channel Scan. The Channel can be changed to fit the channel setting for an existing wireless network or to customize the wireless network.


D-Link DAP-2690 User Manual

85

# Using the Console Port

You can connect to the DAP-2690 console port to configure device settings via the command line.

1. Connect one end of the provided serial console cable to the console port on the DAP-2690, and the other to an available serial port on the PC you will use to connect to the device.
2. Run HyperTerminal on the PC:
  - Go to the Start Menu
  - Select All Programs
  - Select Accessories
  - Select Communications
  - Select HyperTerminal

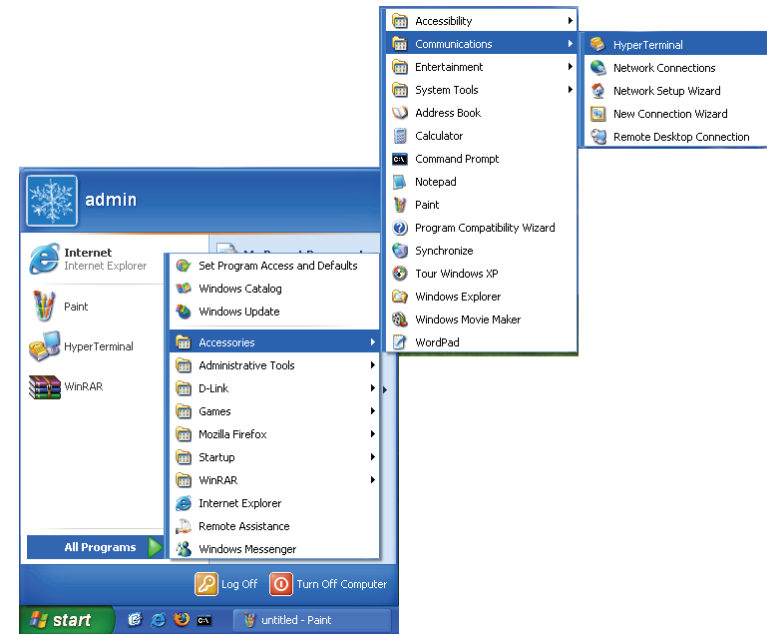


3. Enter a New Connection name:



4. Select the appropriate COM port:



5. Configure the Port Settings:

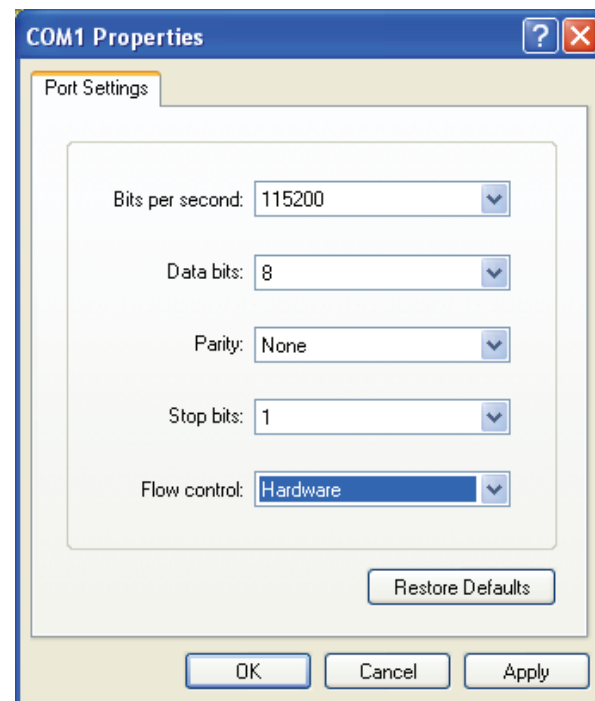


**Note:** Your terminal emulation must be set to 115200 bits per second.

## Section 4 - Using the Console Port

### 6. Enter the Login Name and Password:

Once logged in, you will be able to run configuration commands from the command line prompt.

You can type in a letter and press tab to see the available commands.

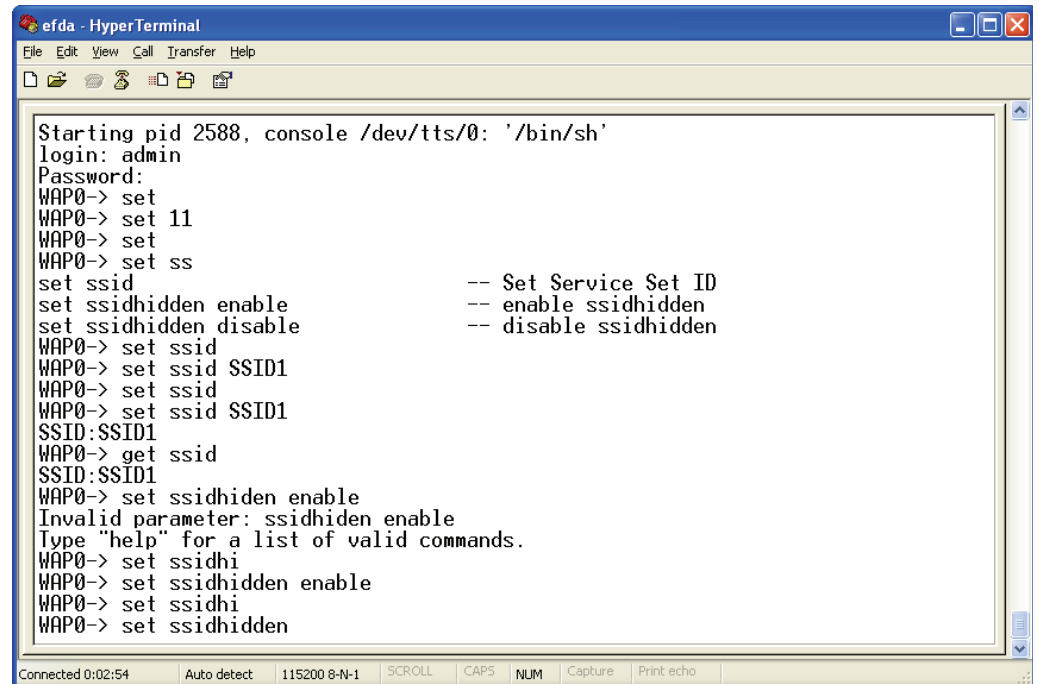

```
efda - HyperTerminal
File Edit View Call Transfer Help

Starting pid 2588, console /dev/tts/0: '/bin/sh'
login: admin
Password:
WAP0-> set
WAP0-> set 11
WAP0-> set
WAP0-> set ss
set ssid -- Set Service Set ID
set ssidhidden enable -- enable ssidhidden
set ssidhidden disable -- disable ssidhidden
WAP0-> set ssid
WAP0-> set ssid SSID1
WAP0-> set ssid
WAP0-> set ssid SSID1
SSID:SSID1
WAP0-> get ssid
SSID:SSID1
WAP0-> set ssidhidden enable
Invalid parameter: ssidhidden enable
Type "help" for a list of valid commands.
WAP0-> set ssidhi
WAP0-> set ssidhidden enable
WAP0-> set ssidhi
WAP0-> set ssidhidden

Connected 0:02:54 Auto detect 115200 8-N-1 SCROLL CAPS NUM Capture Print echo
```

# Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the DAP-2690 Wireless Access Point. We will cover various aspects of the network setup, especially the network adapters. Please read the following if you are having any technical difficulties.

**Note:** *It is recommended that you use an Ethernet connection to configure the DAP-2690.*


1. The computer used to configure the DAP-2690 cannot access the Configuration menu.

- Check if the LAN LED on the DAP-2690 is ON. If the LED is not ON, check if the cable for the Ethernet connection is securely inserted.
- Check if the Ethernet adapter is working properly. Please see item 3 of this Troubleshooting section to check that the drivers for the network adapters are loaded properly.
- Check if the IP address is in the same range and subnet as the DAP-2690.

**Note:** *The default IP address of the DAP-2690 is 192.168.0.50. All the computers on the network must have a unique IP address in the same range, e.g. 192.168.0.x. Any computers that have identical IP addresses will not be visible on the network. They must all have the same subnet mask, e.g. 255.255.255.0.*

- Perform a Ping test to make sure that the DAP-2690 is responding. Go to **Start > Run**, type **cmd**, and then press **Enter**. At the DOS prompt, type **ping 192.168.0.50**. A successful ping will show four replies.

**Note:** *If you have changed the default IP address, make sure to ping the correct IP address assigned to the DAP-2690.*

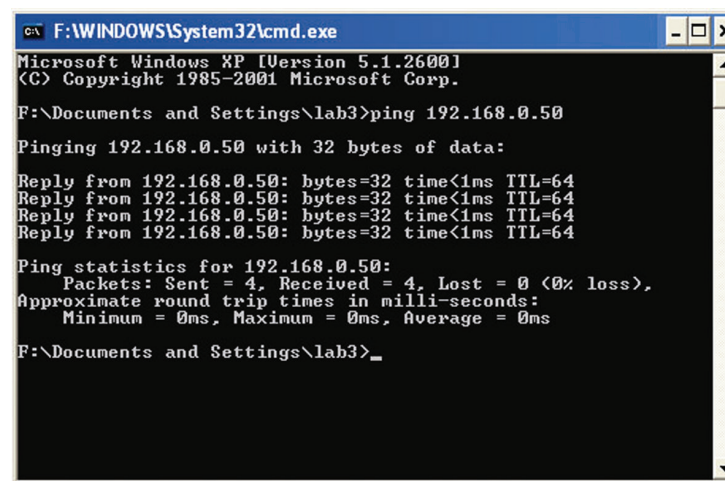

```

C:\F:\WINDOWS\System32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

F:\Documents and Settings\lab3>ping 192.168.0.50

Pinging 192.168.0.50 with 32 bytes of data:


Reply from 192.168.0.50: bytes=32 time<1ms TTL=64
Reply from 192.168.0.50: bytes=32 time<1ms TTL=64
Reply from 192.168.0.50: bytes=32 time<1ms TTL=64
Reply from 192.168.0.50: bytes=32 time<1ms TTL=64

Ping statistics for 192.168.0.50:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms

F:\Documents and Settings\lab3>
```

### 2. The wireless client cannot access the Internet within Infrastructure mode.

Make sure the wireless client is associated and joined with the correct access point. To check this connection, right-click on the *Local Area Connection* icon in the taskbar and select **View Available Wireless Networks**. The *Connect to Wireless Network* screen will appear. Please make sure you have selected the correct available network, as shown in the illustrations below.

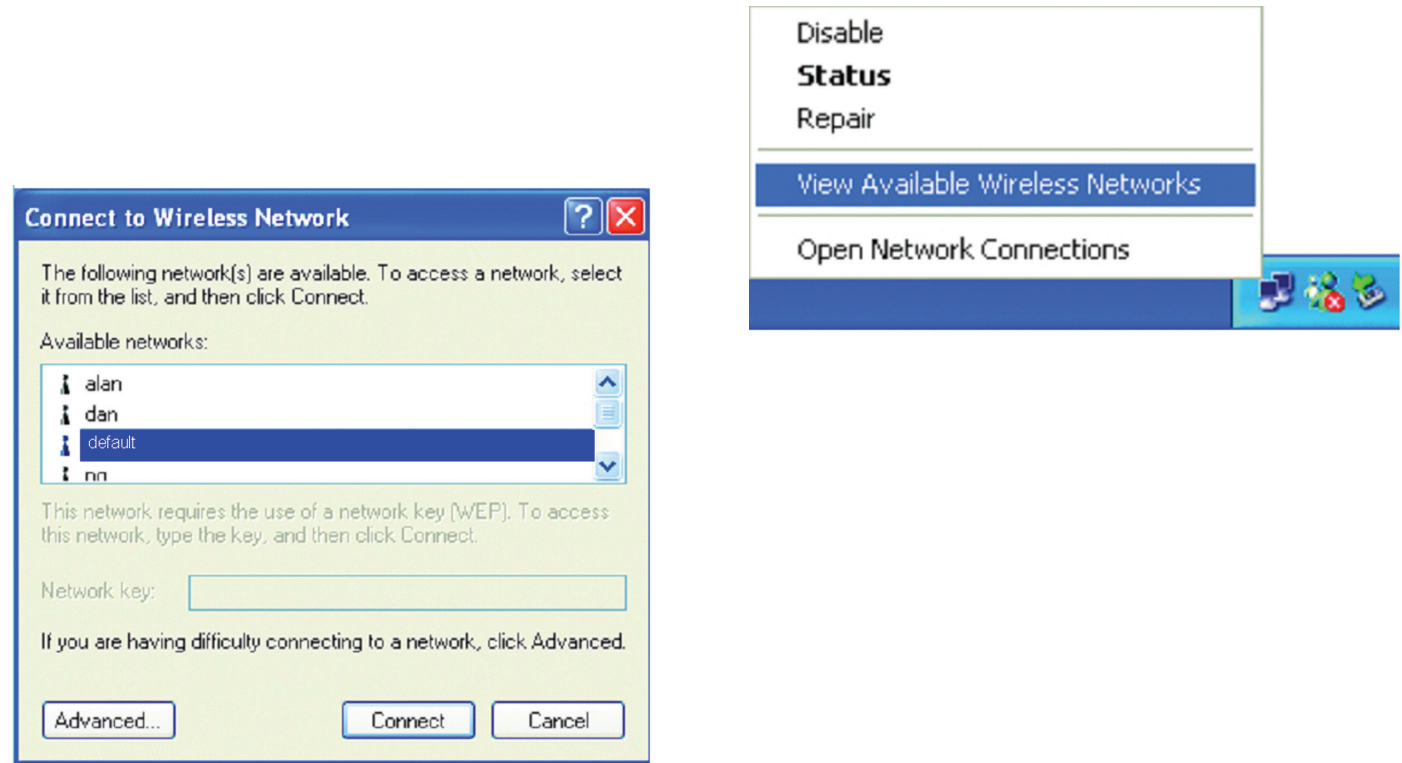

- Check that the IP address assigned to the wireless adapter is within the same IP address range as the access point and gateway. Since the DAP-2690 has an IP address of 192.168.0.50, wireless adapters must have an IP address in the same range, e.g. 192.168.0.x. Each device must have a unique IP address; there may be no two devices with the same IP address. The subnet mask must be the same for all the computers on the network. To check the IP address assigned to the wireless adapter, double-click the Local Area Connection icon in the taskbar, then select the Support tab and the IP address will be displayed.
- If it is necessary to assign a Static IP Address to the wireless adapter. If you are entering a DNS Server address, you must also enter the Default Gateway Address. *Remember that if you have a DHCP-capable router, you will not need to assign a static IP address.*

### 3. What variables may cause my wireless products to lose reception?

D-Link products let you access your network from virtually anywhere you want, however, the positioning of the products within your environment will affect its wireless range.

### 4. Why does my wireless connection keep dropping?

- Antenna Orientation - try different antenna orientations for the DAP-2690. Try to keep the antenna at least 6 inches away from the wall or other objects.
- If you are using 2.4 GHz cordless phones, X-10 equipment or other home security systems, ceiling fans, or lights, your wireless connection will degrade dramatically or even drop. Try changing the channel of your router, access point and wireless adapter to a different channel to avoid interference.
- Keep your product away - at least 3-6 feet - from electrical devices that generate RF noise like microwaves, monitors, electric motors, etc.

### 5. Why can't I get a wireless connection?

If you have enabled encryption on the DAP-2690, you must also enable encryption on all wireless clients in order to establish a wireless connection.

- Make sure that the SSID on the AP and the wireless client are exactly the same. If they are not, wireless connection cannot be established.
- Move the DAP-2690 and the wireless client into the same room and then test the wireless connection.
- Disable all security settings.
- Turn off your DAP-2690 and the client. Turn the DAP-2690 back on again, and then turn on the client.
- Make sure that all devices are set to Infrastructure mode.
- Check that the LED indicators are indicating normal activity. If not, check that the AC power and Ethernet cables are firmly connected.
- Check that the IP address, subnet mask, gateway, and DNS settings are correctly entered for the network.
- If you are using 2.4 GHz cordless phones, X-10 equipment, or other home security systems, ceiling fans, or lights, your wireless connection will degrade dramatically or drop altogether. Try changing the channel on your DAP-2690, and on all the devices in your network to avoid interference.
- Keep your product away - at least 3-6 feet - from electrical devices that generate RF noise like microwaves, monitors, electric motors, etc.

# Technical Specifications

## Standards

- IEEE 802.11a
- IEEE 802.11b
- IEEE 802.11g
- IEEE 802.11n
- IEEE 802.3
- IEEE 802.3u
- IEEE 802.3ab
- IEEE 802.3af

## Network Management

- Web Browser interface
  - HTTP
  - Secure HTTP (HTTPS)
- AP Array
- Central WiFiManager
- SNMP Support
  - Private MIB
- Command Line Interface
  - Telnet
  - Secure SSH Telnet

## Data Rates\*

For 802.11a:

- 54, 48, 36, 24, 18, 12, 9, and 6 Mbps

For 802.11b:

- 11, 5.5, 2, and 1 Mbps

For 802.11g:

- 54, 48, 36, 24, 18, 12, 9, and 6 Mbps

For 802.11n : HT20/HT40

- 144.4/300, 130/270, 117/243, 104/216, 78/162, 66/135, 58.5/121.5, 52/108, 39/81, 26/54, 19.5/40.5, 12/27, and 6.5/13.5 Mbps

## Security

- WPA™ Personal/Enterprise
- WPA2™ Personal/Enterprise
- WEP™ 64-/128-bit
- SSID Broadcast Disable
- MAC Address Access Control

## Wireless Frequency Range

- 2.4 to 2.4835 GHz and 5.15 to 5.85 GHz\*\*

## Operating Voltage

- 48V/0.5A Power Adapter or 802.3af PoE

## Radio and Modulation Type

For 802.11a/g/n:

BPSK, QPSK, 16QAM, and 64QAM with OFDM

For 802.11b:

DQPSK, DBPSK, DSSS, and CCK

## Operating Frequency\*

For 802.11a:

5.15 ~ 5.85 GHz

For 802.11b/g:

2400 ~ 2483.5 MHz ISM band

## For 802.11n:

2.4 GHz Band: 2.4 ~ 2.4835 GHz

5 GHz Band: 5.15 ~ 5.85 GHz

## Dipole Antenna

4dBi Gain @2.4 GHz

6dBi Gain @5 GHz

## LEDs

\*Maximum wireless signal rate derived from IEEE Standard 802.11g, 802.11a and 802.11n specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental conditions will adversely affect wireless signal range.

\*\*Please note that operating frequency ranges vary depending on the regulations of individual countries and jurisdictions. The DAP-2690 isn't supported in the 5.25~5.35 GHz and 5.47 ~ 5.725 GHz frequency ranges in some regions.



## Appendix A - Technical Specifications

---

- Power
- LAN
- 2.4 GHz
- 5 GHz

### Temperature

- Operating: 0°C to 40°C
- Storing: -20°C to 65°C

### Humidity

- Operating: 10%~90% (non-condensing)
- Storing: 5%~95% (non-condensing)

### Certifications

- FCC
- CE
- IC
- C-Tick
- UL
- WiFi

### Dimensions

- L = 197 mm
- W = 190 mm
- H = 35 mm

\*Please note that operating frequency ranges vary depending on the regulations of individual countries and jurisdictions. The DAP-2690 isn't supported in the 5.25~5.35 GHz and 5.47 ~ 5.725 GHz frequency ranges in some regions.

### **Trademarks:**

D-Link is a registered trademark of D-Link Corporation/D-Link Systems, Inc. Other trademarks or registered trademarks are the property of their respective owners.

### **Copyright Statement:**

No part of this publication or documentation accompanying this product may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from D-Link Corporation/D-Link Systems, Inc., as stipulated by the United States Copyright Act of 1976 and any amendments thereto. Contents are subject to change without prior notice.

Copyright ©2014 by D-Link Corporation/D-Link Systems, Inc. All rights reserved.

### **CE Mark Warning:**

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

### **Power Usage**

This device is an Energy Related Product (ErP) with High Network Availability (HiNA), and automatically switches to a power-saving Network Standby mode within 1 minute of no packets being transmitted. It can also be turned off through a power switch to save energy when it is not needed.

Network Standby: 3.86watts

Switched Off: 0.23 watts

### **FCC Statement:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

**FCC Caution:**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

If this device is going to be operated in 5.15 ~ 5.25GHz frequency range, then it is restricted in indoor environment only.

**IMPORTANT NOTICE:**

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user.

For detailed warranty information applicable to products purchased outside the United States, please contact the corresponding local D-Link office.

### Industry Canada Notice:

#### DETACHABLE ANTENNA USAGE

This device has been designed to operate with an antenna having a maximum gain of [5.646] dBi. Antenna having a higher gain is strictly prohibited per regulations of Industry Canada. The required antenna impedance is 50 ohms. Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication. This radio transmitter (IC: 4216A-AP2690B1 / Model: DAP-2690B1) has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Ce dispositif a été conçu pour fonctionner avec une antenne ayant un gain maximal de dBi [5.646]. Une antenne à gain plus élevé est strictement interdite par les règlements d'Industrie Canada. L'impédance d'antenne requise est de 50 ohms. Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante. Le présent émetteur radio (IC: 4216A-AP2690B1 / Modèle: DAP-2690B1) a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

#### APPROVED ANTENNA(S) LIST

Type	Gain	Brand	Manufacturer
Dipole	4.29dBi	WHA YU GROUP	WHA YU GROUP
Dipole	5.646dBi	WHA YU GROUP	WHA YU GROUP


#### IMPORTANT NOTE:

##### Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This device has been designed to operate with an antenna having a maximum gain of 6 dB. Antenna having a higher gain is strictly prohibited per regulations of Industry Canada. The required antenna impedance is 50 ohms.

# Antenna Pattern

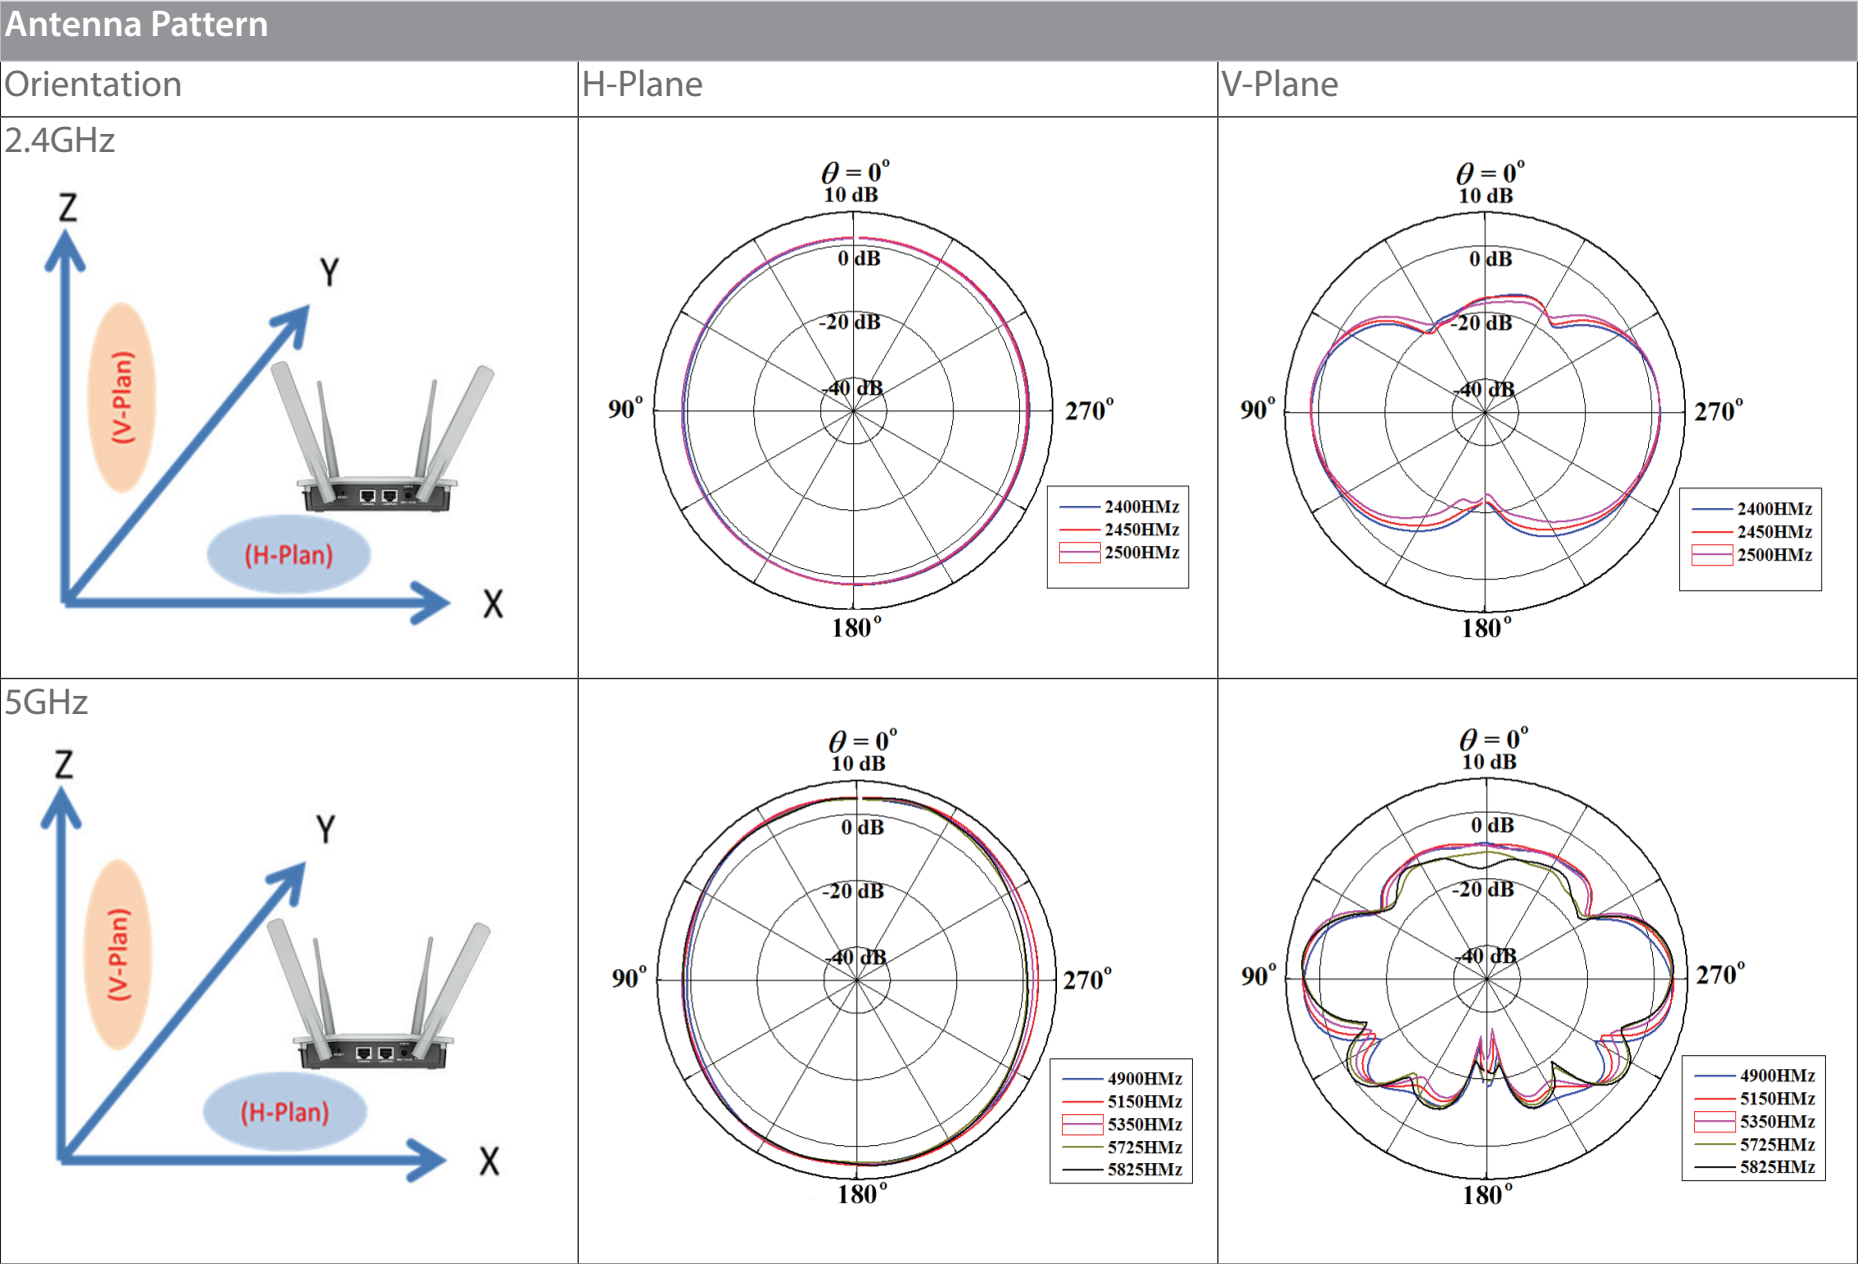

# FREE Central WiFiManager Software

DOWNLOAD  
NOW


[DLINK.COM/WIFIDOWNLOAD](http://DLINK.COM/WIFIDOWNLOAD)

## With the easy-to-use web-based interface you can...

- Configure once and apply to multiple Access Points
- Install on Windows PC
- Access on any device using a web-browser, e.g. smartphone or notebook
- Utilise user authentication and access control
- Monitor your entire wireless network in real time<sup>1</sup>
- Access detailed reports
- Optimise your bandwidth

FREE Central  
WiFiManager  
User Interface


Supports  
multiple  
languages

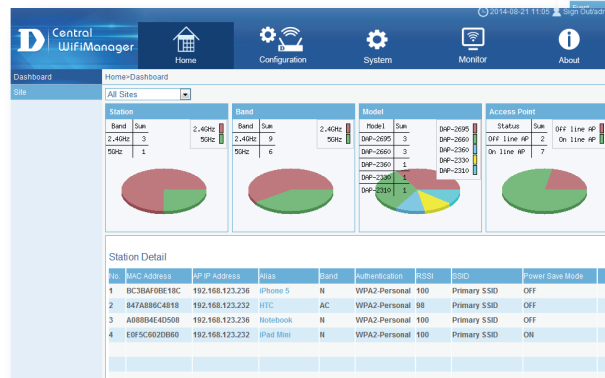

1. see overleaf for selected  
product information.



# FREE Central WiFiManager

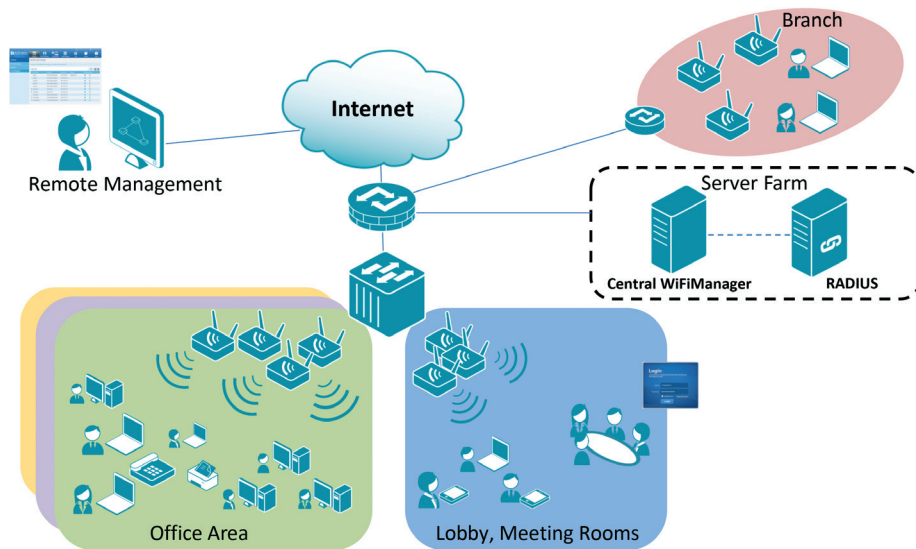

Available on the following products<sup>2</sup>:

## DAP-2695

### Wireless AC1750 Indoor Access Point

Designed to support small to medium business or enterprise environments. Secure, manageable dual-band wireless LAN options.



## DAP-2660

### Wireless AC1200 Indoor Ceiling Access Point

Providing enhanced speeds of Wireless AC as well as dual-band connectivity to reduce interference, for a faster and more efficient network.



## DAP-2310

### Wireless N Indoor Access Point

Ideal for creating or expanding capacity of a wireless network; mainly used in high-traffic areas such as airports, coffee shops, sports venues, and university campus deployments.



## DAP-2360

### Wireless N PoE Access Point

For advanced indoor installations, this high-speed Access Point has integrated PoE support, allowing installation in areas where power outlets are not readily available.



## DAP-2690

### Wireless N Simultaneous Dual-Band PoE Access Point

Designed for indoor installation where power outlets are not readily available. Enables deployment of a highly manageable, robust and secure wireless network.



## DAP-2330

### Wireless N PoE Access Point

Ideal for wireless networks in high-traffic areas such as airports, coffee shops, shopping centres, sporting venues, hotels and campus deployments. PoE offers installation where power outlets are not available.



2. Visit [dlink.com](http://dlink.com) for selected Hardware & Software versions.