

Firmware Update für den DCH-S150

- 1. Download the latest Firmware ftp://ftp.dlink.de/dch/@archive/beta/DCHS150_fw_reva_122BetaB06.zip
- 2. Unzip the BIN-file (*.bin) to your desktop.
- 3. Unplug the DCH-S150
- 4. Please use a PIN or needle to push the reset button while you plug in the DCH-S150 again.
- 5. Hold the reset button until the LED is flashing red
- Connect your PC to the Wireless Network of the DCH-S150 SSID: DCH-S150-XXXX (XXX= The last four characters of the MAC Address of the DCH-S150)
- 7. Open <u>http://192.168.0.60</u> in a web browser

D-Lin	serthiller	
	0	
	est a	
(RECOVERY	
	Model name: Hardware version:	
	Select Firmware	
	Upgrade Firmware	
(I) Notic	e: If you upload the binary file to the wrong TARGET, the departure again	evice may not work properly or even co

- 8. Click on "Select Firmware", select the BIN-file from your desktop and Upgrade the Firmware. After the Update the DCH-S150 reboots and you can close the Website.
- 9. Rerun the Setup Process after the Update.