

## RecoveryUpdate via SD card

If your camera (with an SD card slot) is not responding anymore after a firmware update, you can try a RecoveryUpdate.

To start, you need an empty SD card, a computer and an SD card reader.

Preparation:

1. Download the latest firmware for your camera from the internet (<http://eu.mydlink.com/download> or <ftp://ftp.dlink.de/dcs/>).
2. Unpack the downloaded ZIP-file to your computer's desktop. You need the firmware file (.bin) within the ZIP.
3. Connect the SD card to your computer and create a folder on the SD card. Name the folder "upgrade".
4. Copy the unpacked firmware file (step 2) and paste it into the newly created folder on your SD card (step 3).
5. Rename the firmware file to "update.bin".

Update:

6. Disconnect your camera from the power outlet.
7. Put the SD card into the SD card slot of your camera.
8. Press the camera's reset button with a sharp object
9. Keep holding down the button while reconnecting the camera to your power outlet.
10. After reconnection, keep the button pressed for five more seconds.
11. The LED of the camera will start blinking and the update begins. (The update process takes approximately 4 minutes)

**Do not disconnect the camera from the power within these four minutes!**

12. The update process is finished, when the LED stops blinking and changes to a constant green light.
13. Please eject the SD card from the camera and reboot the camera by disconnecting and reconnection it to the power outlet.