

D-Link

How to login D-Link Switch via SSH_Public Authmode

1. Add a admin user account in Switch.

```
create account admin admin
```

Enter a case-sensitive new password:**admin**

Enter the new password again for confirmation:**admin**

2. Setup and Enable SSH function in Switch.

```
config ssh server maxsession 8
```

```
config ssh server contimeout 120
```

```
config ssh server authfail 2
```


```
config ssh server rekey never
```



```
config ssh user admin authmode publickey
```

```
enable ssh
```


3. Use Puttygen.exe to generates private and public keys.





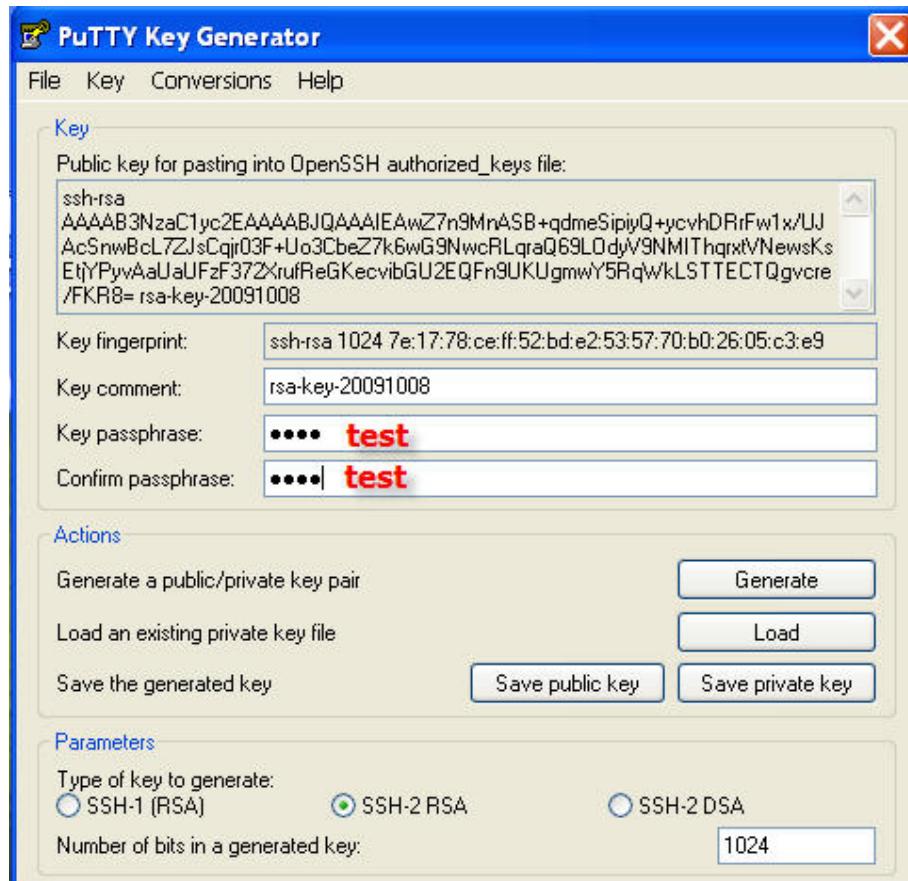


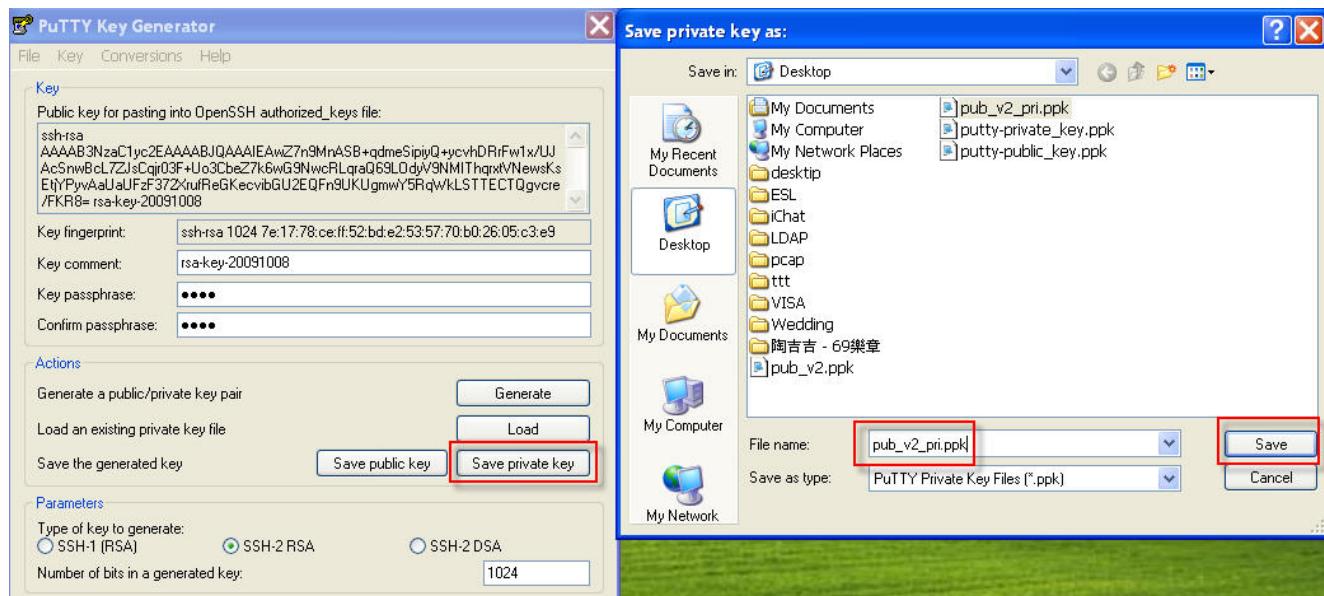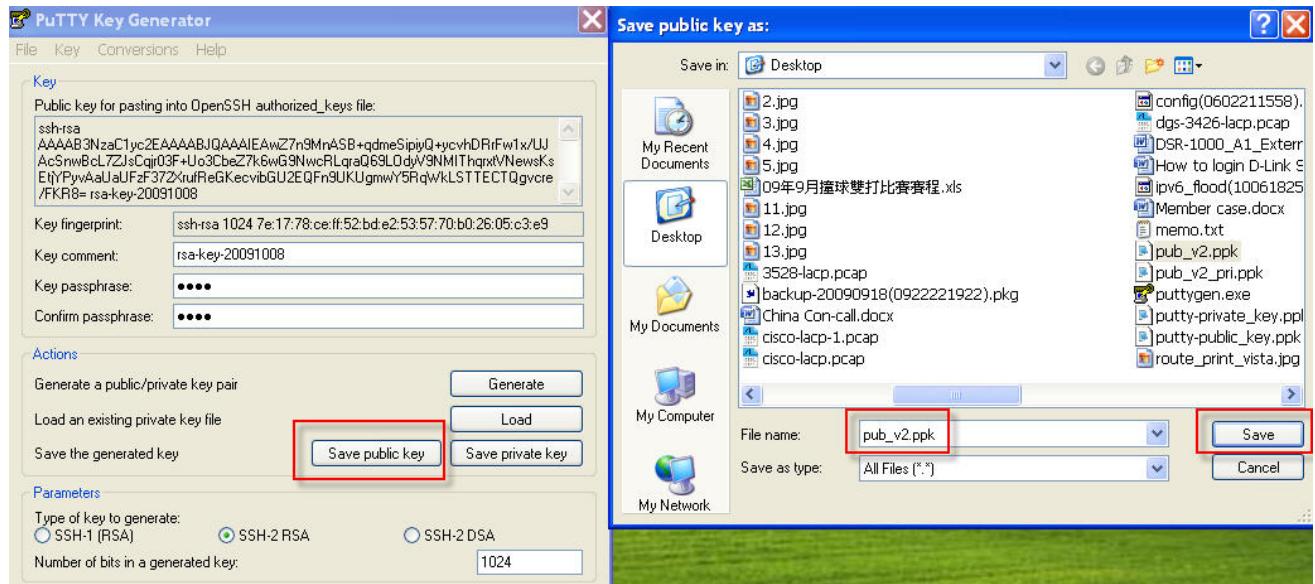

4. Enable Putty.exe and upload private key.

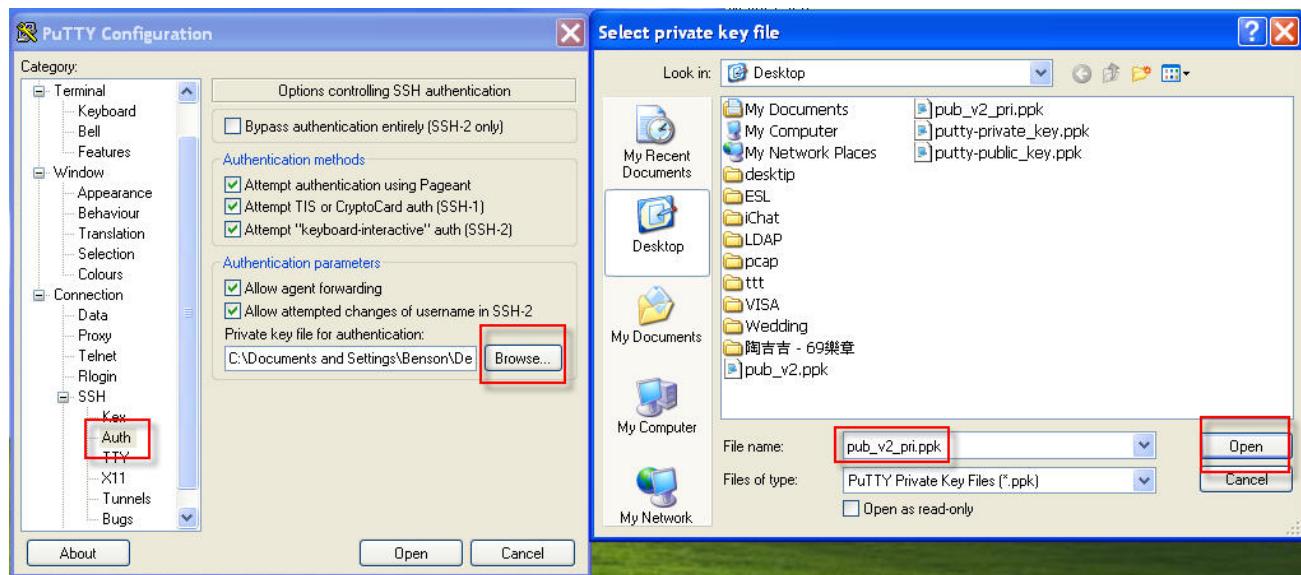

5. Use Putty SSH application to login Switch.

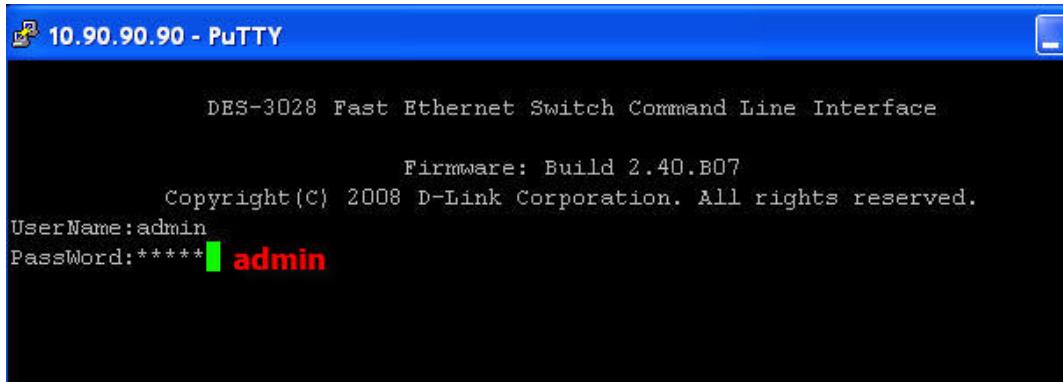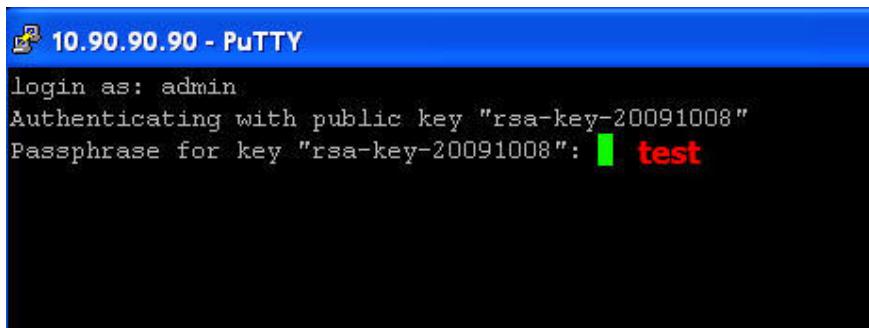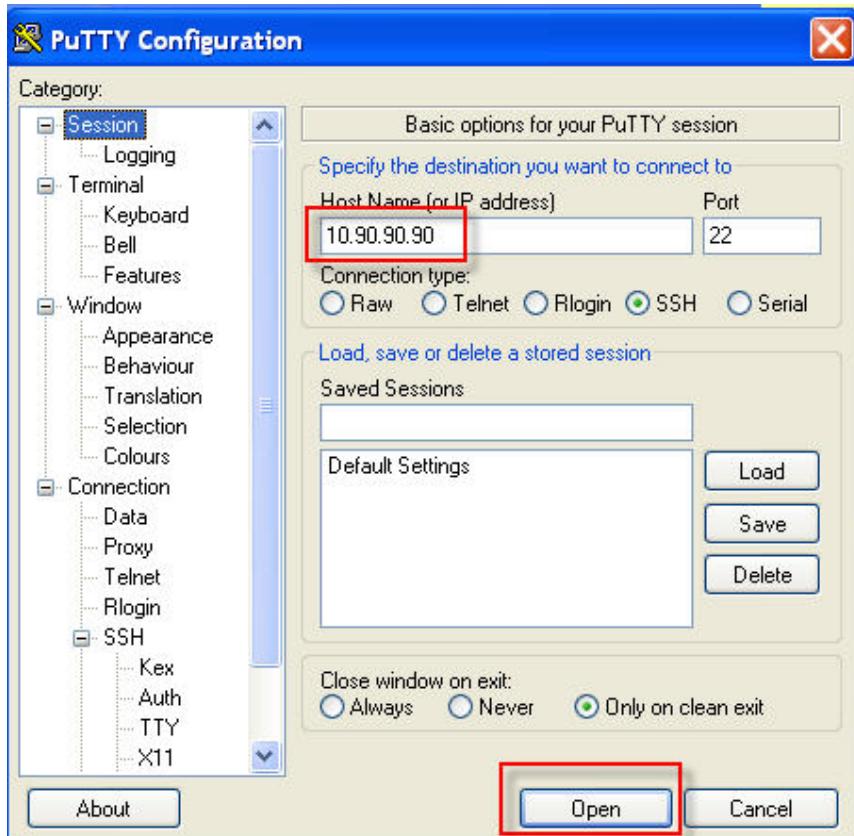

10.90.90.90 - PuTTY

DES-3028 Fast Ethernet Switch Command Line Interface

Firmware: Build 2.40.B07

Copyright (C) 2008 D-Link Corporation. All rights reserved.

UserName:admin

PassWord:*****

DES-3028:4#

DES-3028:4#