

According to the "Quick Installation Guide Industrial Ethernet Switch.pdf", page7:

Device Reset:

1. Press and hold the reset button for 6 to 10 seconds. All the LEDs on the DIS-200G will light amber. When this happens, release the reset button and the DIS-200G will be reset to factory defaults.

Note: holding the reset button for more than 11 seconds will cause all LEDs on the DIS-200G to light green. Holding the reset button for a further 2 seconds will put the DIS-200G into boot loader mode.

Based on my test there is no problem with F/W 1.00.043, 1.10.023, 1.10.024, and 1.20.006.

This is my test step:

Reboot:

1. Login console by [admin/admin] and add new account [test/12345678].
>>> Switch# conf t
>>> Switch(config)# username test password test
>>> Switch(config)# exit
>>> Switch# copy running-config startup-config
2. Re-login console by "test/test".
>>> Switch>
3. Holding reset button for more than 11 seconds, the LEDs are light green, and the DUT is rebooting.
4. Re-login console by "test/test", it is able to login.

Reset Default:

1. Login console by [admin/admin] and add new account [test/12345678].
>>> Switch# conf t
>>> Switch(config)# username test password test
>>> Switch(config)# exit
>>> Switch# copy running-config startup-config
2. Re-login console by "test/test".
>>> Switch>
3. Press and hold the reset button for 6 seconds, and then release the reset button, the LEDs are light amber, and it shows "The configuration is resetting to Factory Default" on the console message.
>>> Switch>
>>> The configuration is resetting to Factory Default
>>>
>>> Save configuration
4. Re-login console by "test/test", it cannot login. And the DUT is default.