

Bitte beachten Sie, dass diese Liste ständig aktualisiert wird. Haben Sie Verständnis, dass nicht jeder Drucker getestet werden kann.

GDI/WPS Drucker werden von Printservern generell nicht unterstützt.

<b>USB Port Printer List</b>		
Brand	Type	Model
<b>HP</b>	Deskjet	640C, 656C, 845C, 920C, 948C ,960C, 990CXI, 995C, 125C, 1180C, 3320, 3420, 3425, 3535 , 3650 , 5625
	Inkjet	DeskJet5610, DeskJet5650, DeskJet5850, CP1700
	Laserjet	1200, 2200, 2200D, 1500(USB 2.0)
<b>LexMark</b>		Z13, Z33, Z43, Z53, Z25, Z35, Z45, 4039 10R, 5700, Optra Color 45 Optra C710, Optra E, E+, E310, Optra K1220, Optra M410, M412, Optra N, Optra R+, Optra S1250, Optra S1855, Optra SC-1275, Optra SE-3455, OptraT614 Optra W810
<b>Canon</b>		S100SP, S200SP, S300, S330, S400SP, S520, S600, S6300, S750, S450.. S4500, S9000, PIXUS 850i, BJC55, BJC85, I850
<b>EPSON</b>	Stylus	C41UX, C405, C60, C61, C80, C42UX, RX510,
	Photo	R310, 720, 810, 820, 830, 830U, 890, 900, 1280, 1290, PM860PT, CC550L, CC570L, CL750, CL760, MC-2000, PM680C, PM-720C, PM-730C, PM-740C, PM740DU, PM-D750, PM-780CS, PM-790PT, PM-800C, PM-800DC, PM-820C, PM-820DC, PM-830C, PM-840C, PM-850PT, PM-860PT, PM-870C, PM-890C, PM-G900, PM-920C, PM-930C, PM-940C, PM-950C, PM-970C, PM-980C, PM-D1000, PM-2200C, PM-3300C, PM-3500C, PM-3700C, PM-4000PX , PM-A850, PM-D750, PM-G700, PM-G800, E-100
	Laser	PX-V500, PX-V600, PX-V700, PX-G900, 900, 1160, 2200, LP-1200, LP-1300 LP-1400, LP1500C, LP-2000C, LP-2400, LP-2500, LP-6100. LP-7000C, LP-7500, LP-7700, LP-7800, LP-7900, LP-8900, LP-9000B, LP-9000C, LP-9100, LP-9400, LP-9500C, LP-9800C

	All in One Officejet	PM-A850, CC-600PX
--	----------------------	-------------------

<b>Parallel Port Printer List</b>		
Brand	Type	Model
<b>HP</b>	LaserJet	LaserJet III, LaserJet 4P, 4L, 4V, LaserJet 5L, LaserJet 6P, 6L, LaserJet 1100, 1100A, LaserJet 1200, LaserJet 2100, 2100M, LaserJet 2200, LaserJet 3150, LaserColorJet 8500, LaserJet 1100 series, LaserJet 1300 series, LaserJet 2100 series, LaserJet 3150, LaserJet 4000, LaserJet 5000
	DeskJet	DeskJet 400, 420, DeskJet 500, DeskJet 550C, 560C, DeskJet 670C, 695C, DeskJet720C, DeskJet 810C, 890C DeskJet 920C, DeskJet 930C(new), 970CXI, DeskJet 1120C, DeskJet 1125C, DesignJet 350C, DesignJet 600C,
	All in One Officejet	T47, 710
<b>LexMark</b>		4039 10R, 5700, Optra Color 45, Optra C710, Optra E, E+, E310, Optra K1220 Optra M410, M412, Optra N, Optra R+, Optra S1250, S1855, Optra SC-1275 Optra SE-3455, Optra T614, Optra W810, Z53
<b>Canon</b>		BJC-255SP, BJ-330, BJC-600, 620, BJC-2000SP, BJC-4100, BJC- 4300, BJC- 4500, BJC- 4550, BJC-6000, BJC- 6500, BJC-7000, BJC-8200, LBP-720, BJC-740, Bubble Jet S520
<b>EPSON</b>		Stylus Photo 700, 710, 750, Stylus Photo 870, Stylus Photo 1200, 1270 Stylus Photo EX, Stylus Pro XL, Stylus Color 400, 440, 460, 480 Stylus Color 600, 640, 660, Stylus Color 740, Stylus Color 800, 850, 860 Stylus Color 900, Stylus Color 1160, Stylus Color 1500, 1520, Stylus Color 3000 Stylus C60, LQ-100, LQ-300, LQ-550, 570+, LQ-1070C+, LQ-2070, 2170C EPL-N2000, N2010, EPL-5500, 5700, 5700L, 5800
<b>Fujitsu</b>		10V, 14V, DL-700, DL-3800
<b>IBM</b>		5577, 4039, 16L, Infor Printer 20, InfoPrint 32
<b>NEC</b>		P2200, P3200, P5300, P6300, P7300
<b>Other Printer</b>		Brother HL-1260, CD T120, Citizen GSX-230, Futek 84+, OKI ML-391 OKIdata OL-400, Olivetti JP450, Pannsonic 2023, Panasonic KX-P1624 Printtec PR856C, Star NX-2420, Tektronix Phaser 350, Kyocera FS-1000 Kyocera mita FS-1000+

<b>Unsupported printer</b>	
HP	Laser Jet 1000 serial (DGI printer) , Office Jet serial (multi-function machine)

Canon

CAPT printer , I serial printer