

The image shows the web interface of a D-Link ADSL Router. At the top left is the D-Link logo with the tagline "Building Networks for People". To the right of the logo is the text "ADSL Router". Below this is a navigation menu with tabs for "Home", "Setup", "Advanced", "Tools", "Status", and "Help". The "Home" tab is highlighted in yellow. On the left side of the page, there is a small image of the router hardware. The main content area is titled "Login" and contains a message "Please log in to continue" in a light blue box. Below this are two input fields: "Login Name" with the value "admin" and "Password" with masked characters "*****". A blue "Login" button is positioned below the password field, with a mouse cursor hovering over it.



ADSL Router

- Home
- Setup
- Advanced
- Tools
- Status
- Help



Logout

Status Information

System Uptime	0 hour(s) 47 minute(s)
DSL Status	Connected
DSL Speed	160 Kbps Upstream, 640 Kbps Downstream
LAN IP Address	192.168.1.1
Ethernet	Connected
DHCP Server	Running
Software Version	V1.00B01T16.EU.20040217



ADSL Router

- Home
- Setup**
- Advanced
- Tools
- Status
- Help



LAN Setup

DHCP Configuration

Management IP

WAN Setup

DSL Setup

New Connection

Connection 1

Logout

Setup

The Setup section allows you to add new connections and modify existing connection parameters

LAN Setup

DHCP Configuration Select to setup DHCP Server/Relay.

Management IP Select to configure Management IP Address.

WAN Setup

DSL Setup Select to setup your DSL router

New Connection Select to Configure a new connection

Connection 1 TPSA_Neo_PLUS





ADSL Router

- Home
- Setup**
- Advanced
- Tools
- Status
- Help

LAN Setup

DHCP Configuration

Management IP

WAN Setup

DSL Setup

New Connection

Connection 1

Logout

DHCP Configuration

The device can be setup as a DHCP Server to distribute IP addresses to the LAN network.

Server On

Start IP:

End IP:

Lease Time: Seconds

Relay On

Relay IP:

Server and Relay Off



Apply



Cancel



ADSL Router

- Home
- Setup**
- Advanced
- Tools
- Status
- Help

LAN Setup

DHCP Configuration

Management IP

WAN Setup

DSL Setup

New Connection

Connection 1

Logout

Management IP

If this address or setting is changed, you will need to know the new IP address to be able to use your Web Browser for accessing your Web Pages.

IP Address

NetMask

Default Gateway

Hostname

Domainname



Apply



Cancel



ADSL Router

- Home
- Setup**
- Advanced
- Tools
- Status
- Help

LAN Setup

DHCP Configuration

Management IP

WAN Setup

DSL Setup

New Connection

Connection 1

Logout

DSL Setup

Select the Modulation type


- T1413
- GDMT
- GLITE
- MMODE



Apply



Cancel



ADSL Router

Home | **Setup** | Advanced | Tools | Status | Help

LAN Setup

- DHCP Configuration
- Management IP

WAN Setup

- DSL Setup
- New Connection**
- Connection 1
- Logout

PPPoE Connection Setup

Name: Type:

Options: NAT Firewall

PPP Settings	PVC Settings
Username: <input type="text" value="username"/>	VPI: <input type="text" value="0"/>
Password: <input type="password" value="password"/>	VCI: <input type="text" value="0"/>
Keep Alive: <input type="text" value="10"/> min	QoS: <input type="text" value="UBR"/>
MAX Fail: <input type="text" value="10"/> times	PCR: <input type="text"/> bps
MRU: <input type="text" value="1492"/> bytes	SCR: <input type="text"/> bps
Set Route: <input checked="" type="checkbox"/>	

Apply Delete Cancel



ADSL Router

- Home
- Setup**
- Advanced
- Tools
- Status
- Help

LAN Setup

DHCP Configuration

Management IP

WAN Setup

DSL Setup

New Connection

Connection 1

Logout

PPPoA Connection Setup

Name: Type:

Options: NAT Firewall

PPP Settings

Encapsulation: LLC VC

Username:

Password:

Keep Alive: min

MAX Fail: times

MRU: bytes

Set Route:

PVC Settings

VPI:

VCI:

QoS:

PCR: bps

SCR: bps



Apply



Delete



Cancel

