


## Reset login password to factory default by serial console port

1. Please connect to serial console port by console cable.
2. The console setting is baud rate: **115200**, 8 data bit, no parity, 1 stop bit, and no flow control.
3. Input the login name: **reset** in lower case.
4. Input the password: "The MAC address of management port". Notice that the input alphabets are in lower case. The setting of password is case sensitive.

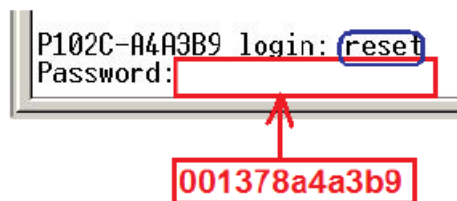

5. The login password will be reset to factory default as the following figure shows.
6. Please try to login as default password.

Resetting administrator's password ... Done



### Caution

This method is not applicable for web UI.