

How To Einstellen Logging für Firewallregeln

[Voraussetzungen]

1. DSR-500N/1000N mit Firmware Version: v1.06B43 und höher

[Szenario]

 $PC1-(192.168.10.100/24)-\{LAN\}-[DSR-500N]-(1.1.1.1/24)-\{WAN\}--PC2\ (1.1.1.100/24)-(1.1.1.1)-(1.1.1)-(1.1)-(1.1)-(1.1.1)$

[Schritte]

- 1. Einrichten einer Firewall-Regel (Service HTTP) und Weiterleiten zum PC1
- 2. Aktivieren der Option Log "Always" innerhalb der gerade erstellten Firewall-Regel

FIREWALL RULES LOGOUT											
A firewall is a security mechanism to selectively block or allow certain types of traffic in accordance with rules specified by network administrators. You can use this page to manage the firewall rules that control traffic to and from your network. The List of Available Firewall Rules table includes all firewall rules for this device and allows several operations on the firewall rules.											
List of Available Firewall Rules											
	#	Status	From Zone	To Zone	Service	Action	Source Hosts	Dest Hosts	Local Server	Internet Dest	Log
	1	Enabled	WAN	LAN	HTTP	Allow Always	Any		192.168.10.100	WAN1	Always



3. gehen Sie zu "Tools > Log Settings > Log Facility" und aktivieren Sie alle Logeinträge bei den Optionen "System" & "Kernel"

LOGS FACILITY		LOGOUT								
This page allows user to set the date and time for the router. User can use the automatic or manual date and settings depending upon his										
	bon touro octango									
Logs Facility										
Facility: System										
	[Display								
Display and Send Logs										
	Display in Event Log	Send to Syslog								
Emergency:										
Alert:										
Critical:										
Error:										
Warning:										
Notification:										
Information:										
Debugging:										
LOGS FACILITY LOGOUT										
This page allows user to set the or choice.	This page allows user to set the date and time for the router. User can use the automatic or manual date and settings depending upon his choice.									
Save Settings	Don't Save Settings									
Logs Facility										
Facility:	L	Kernel •								
8		Display								
Display and Send Logs										
	Display in Event Log	Send to Syslog								
Emergency:										
Alert:										
Critical:										
Error:										
Warning:										
Notification:										
Information:										
Debugging:										

- 2 -



4. gehen Sie zu "Tools > Log Settings > Logs Configuration" und aktivieren Sie die Option "WAN to LAN"

LOGS CONFIGURATION		LOGOUT
This page allows user to configure system wide k Save Settings Don't Save s	og settings. Settings	
Routing Logs		
	Accepted Packets	Dropped Packets
LAN to WAN:		
WAN to LAN:		
WAN to DMZ:		
DMZ to WAN:		
LAN to DMZ:		
DMZ to LAN:		
VLAN to VLAN:		
System Logs		
All Unicast Traffic:		
All Broadcast / Multicast Traffic:		
FTP Logs:		
Redirected ICMP Packets:		
Invalid Packets:		
Other Events Logs		
Bandwidth Limit:		

5. wenn PC2 auf die IP 1.1.1.1 im Browser zugreift können Sie im Log unter "Status > Logs > View All Logs" die entsprechenden Einträge sehen

Thu Sep 13 11:10:48 2012(GMT) [DSR-500N][Kernel][KERNEL] WAN_LAN[ACCEPT] IN=WAN OUT=LAN SRC=1.1.1.100 DST=192.168.10.100 PROTO=TCP SPT=55344 DPT=80 Thu Sep 13 11:10:48 2012(GMT) [DSR-500N][Kernel][KERNEL] WAN_LAN[ACCEPT] IN=WAN OUT=LAN SRC=1.1.1.100 DST=192.168.10.100 PROTO=TCP SPT=55343 DPT=80