

DWL-G122 (rev 'C' onwards)

How install in Microsoft VISTA


Note: The following steps are only a suggestion..

Step 1: Physically install the network adapter.

Step 2: Boot the computer. Wait for Vista to recognize the new hardware. Once it prompts you to locate the driver. Click **Locate And Install Driver Software (Recommended)**.




Step 3: If Vista fails to locate the drivers internally or online, it will prompt you to insert the Driver Disk.

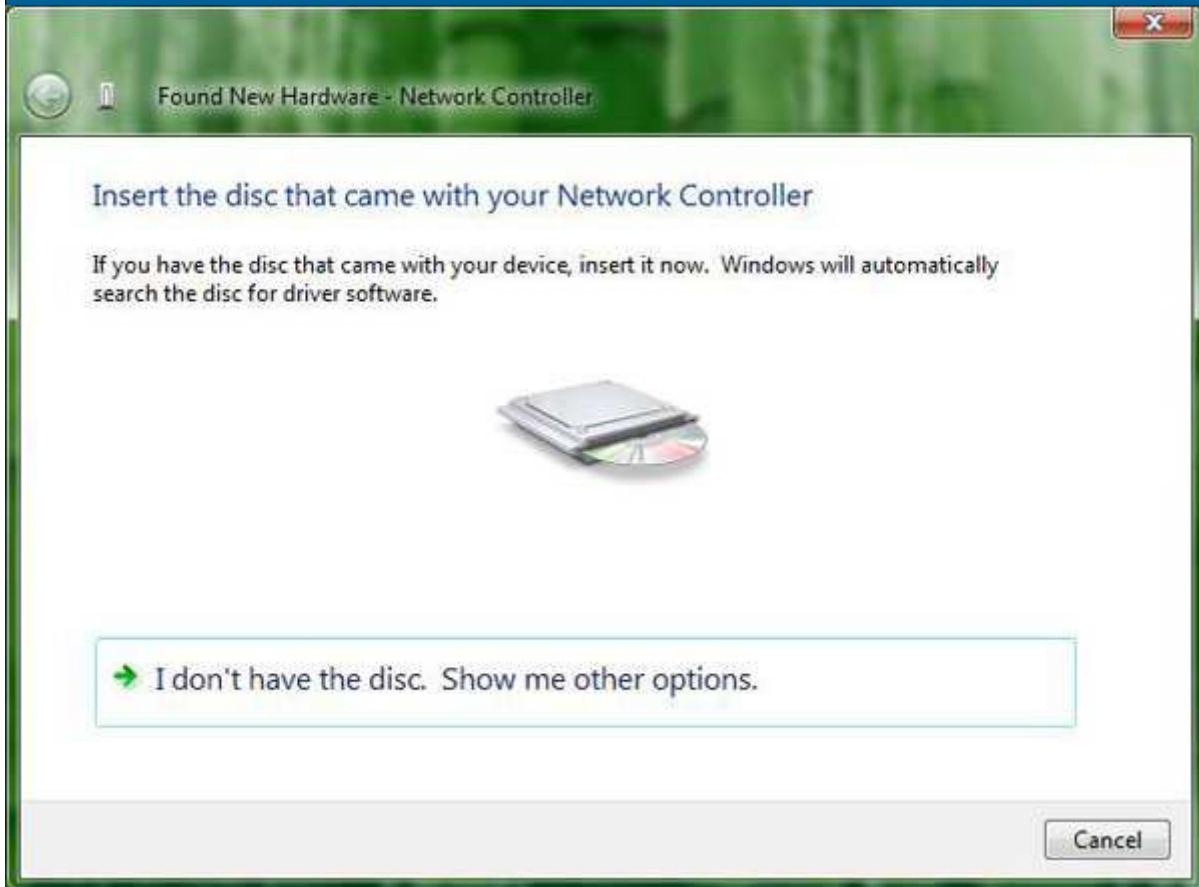

Step 4: Once the disk is inserted the Vista will locate the driver from the CD and install it. Click **Next** to continue.




Step 5: After the drivers are installed, Vista will tell you the card has installed properly and is ready to use. You should not have to reboot.

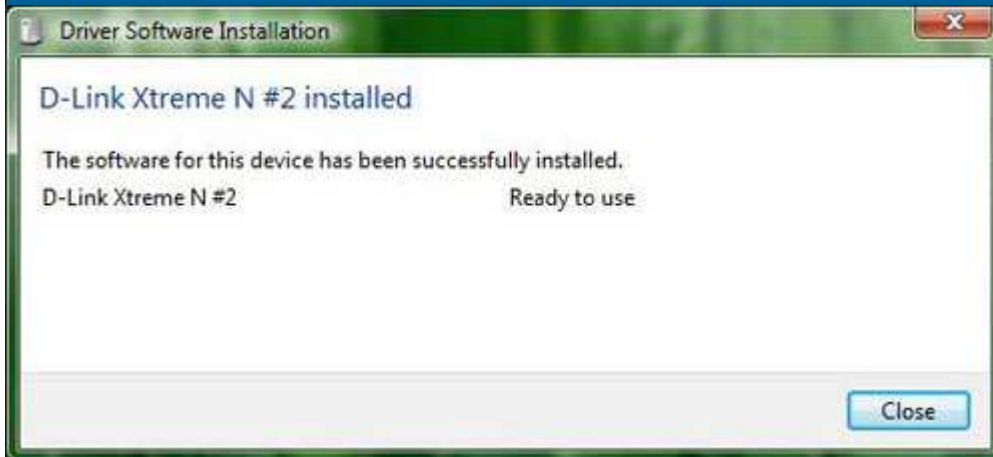

Alternate Installation Method:


Step 1: Click **Start** then **Control Panel** .

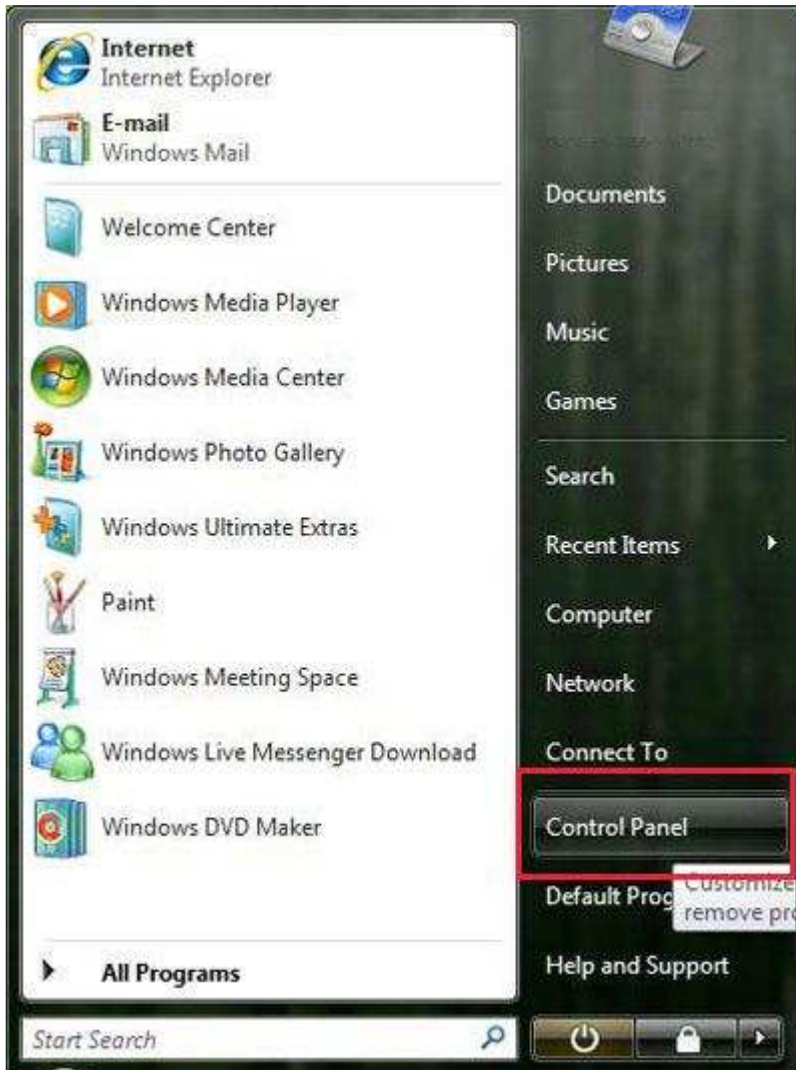


Step 2: Locate the **Device Manager**.

The control panel will be laid out one of two ways.




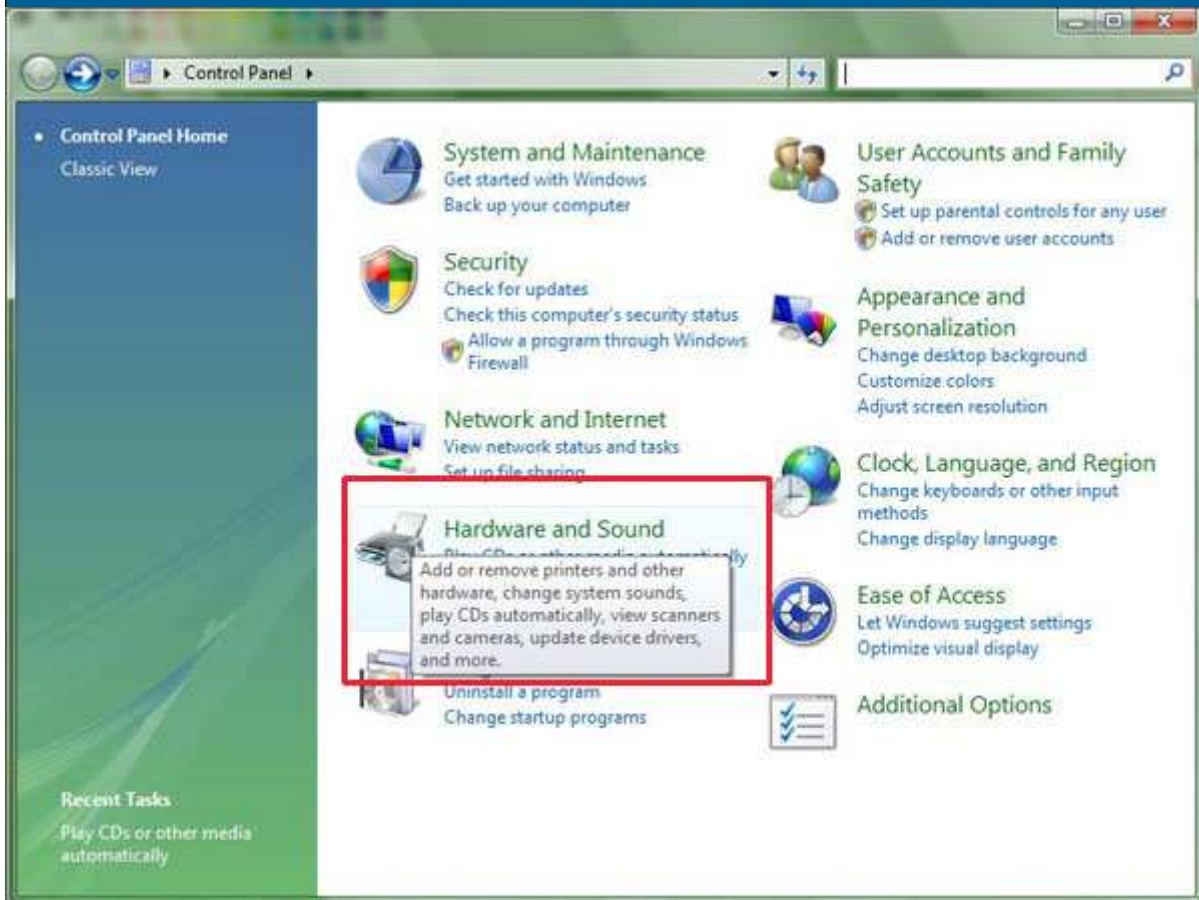


Step 3: Click the plus sign next to the **Other Devices**. This will display a sub-menu.

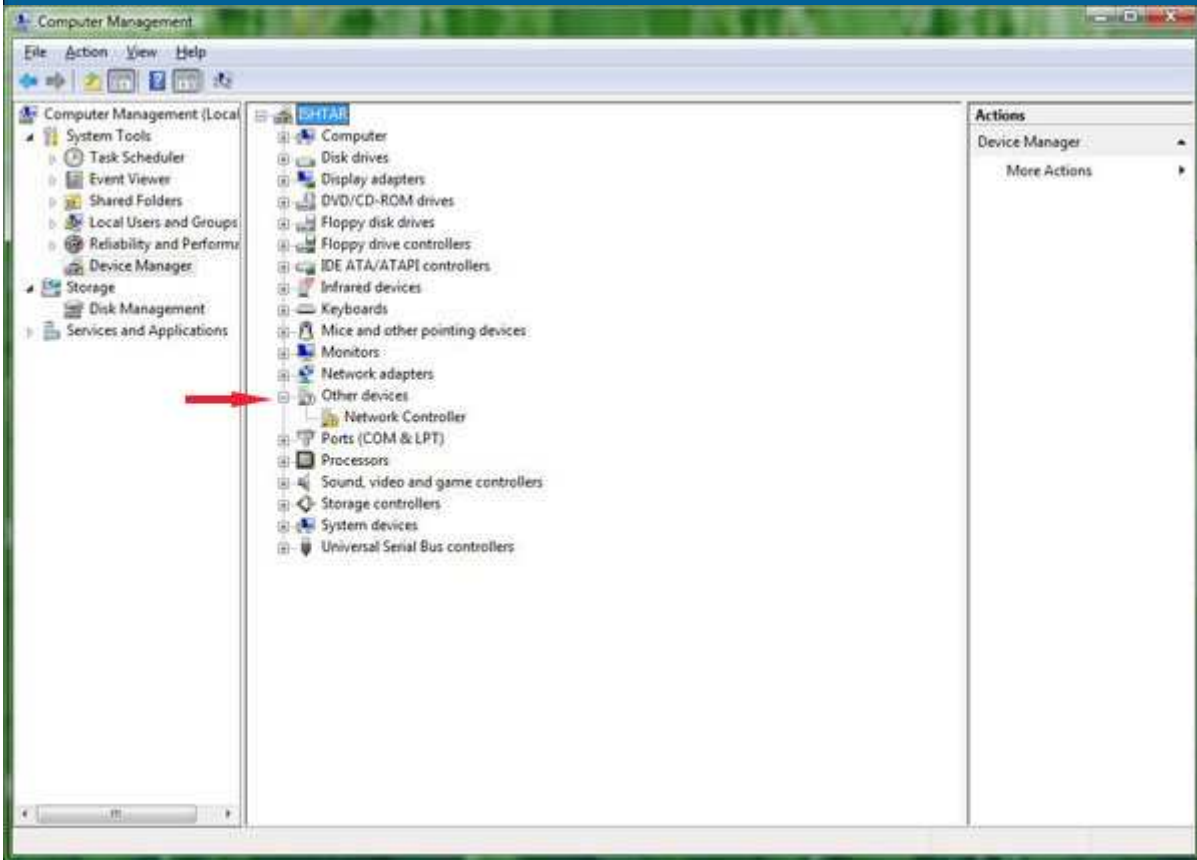

Step 4: Right click the **Network Controller**, and select **Update Drivers**.

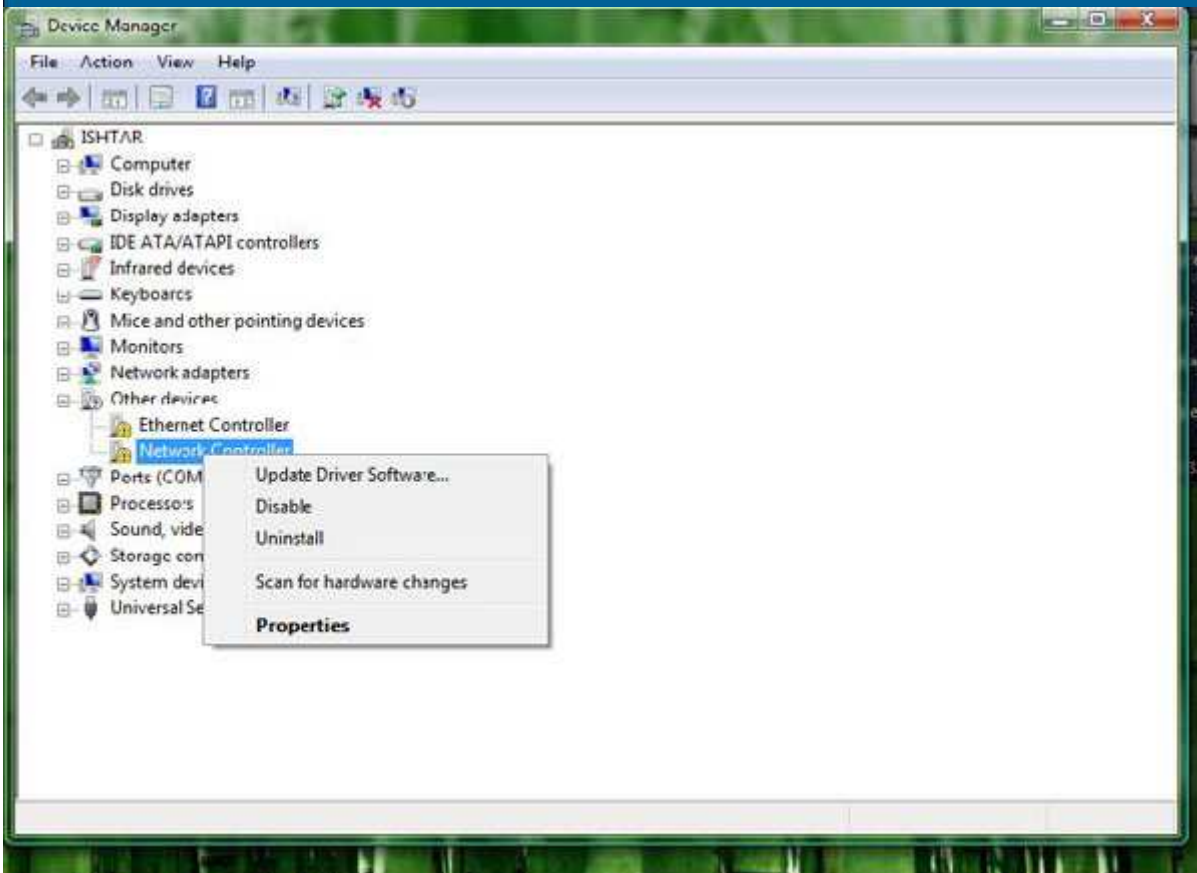

Step 5: Select **Search Automatically For Updated Driver Software**. Ensure that the driver CD is inserted in your machine as Vista will automatically check for it there.

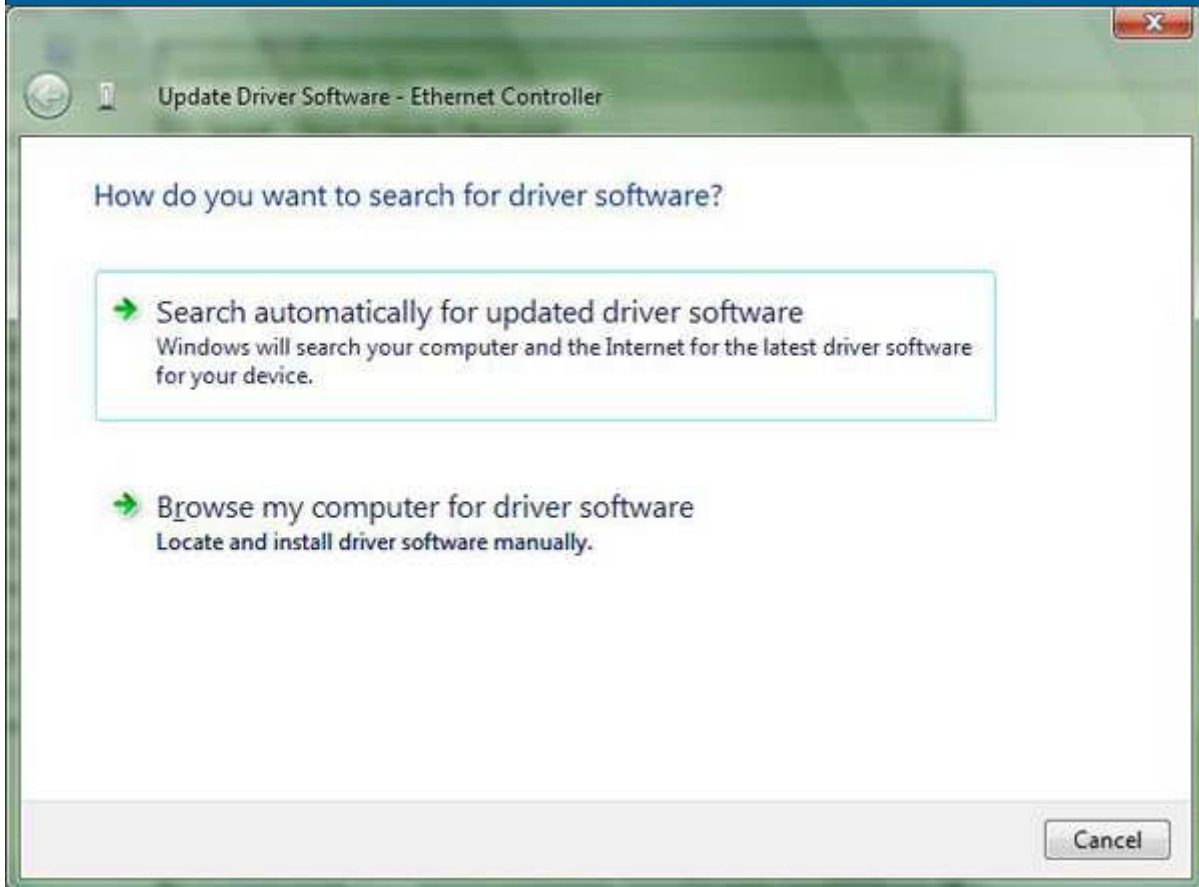

Step 6: After the driver is installed, click **Close**.



Note: Vista requires that you use its utility for wireless management. You cannot use the **D-Link** utility.