

Sendeleistung der einzelnen Accesspoints einstellen

Die Sendeleistung der Accesspoints können Sie manuell pro Accesspoint auf einen gewünschten Wert einstellen.

Stellen Sie eine telnet Verbindung zum DWS-3024 her:

```
telnet 10.90.90.90
```

```
User:admin
```

```
Password:
```

```
(DWS-3024) >en
```

```
Password:
```

```
(DWS-3024) #config
```

```
(DWS-3024) (Config)#wireless
```

```
(DWS-3024) (Config-wireless)#ap database 00:17:9a:d2:8d:70
```

```
(DWS-3024) (Config-ap)#radio 2 power 70
```

The valid AP entry is updated. This AP is already managed, to update the managed AP

configuration with the new value(s) you need to reset the AP.

```
(DWS-3024) (Config-ap)#exit
```

```
(DWS-3024) (Config-wireless)#exit
```

```
(DWS-3024) (Config)#exit
```

```
(DWS-3024) #wireless ap reset 00:17:9a:d2:8d:70
```

```
Are you sure you want to reset WS managed AP? (y/n)y
```

```
Reset Requested for WS Managed AP.
```

```
(DWS-3024) #show wireless ap radio status
```

MAC Address	Location	Radio	Channel	Power (%)	Clients	Clients
-------------	----------	-------	---------	-----------	---------	---------

```
-----  
00:17:9A:D2:8D:70
```

		1	161	100	0	1
		2	1	70	0	0

- 1 -

