

Anleitung zum Auslesen des WLAN Schlüssels

Für DHP-1565 Rev.A

Der DHP-1565 hat die WLAN-SSID **dlink** und keinen WLAN-Schlüssel vorkonfiguriert.

Wurde der WLAN-Schlüssel geändert und Sie kennen ihn nicht mehr, können Sie ihn aus der Web-Konfiguration auslesen.


Die Web-Konfiguration des DHP-1565 ist über eine LAN oder WLAN-Anbindung anzusprechen.

1. Greifen Sie per Webbrowser auf die Konfiguration des DHP-1565 zu.
Die Standard-Adresse ist <http://192.168.0.1> oder <http://dlinkrouter.local>

Es erscheint das Anmeldefenster.

Wurde bereits ein **Admin-Password** eingerichtet, geben Sie dieses bitte ein.
Andernfalls lassen Sie das Feld bitte leer.

Klicken Sie auf **Login**.

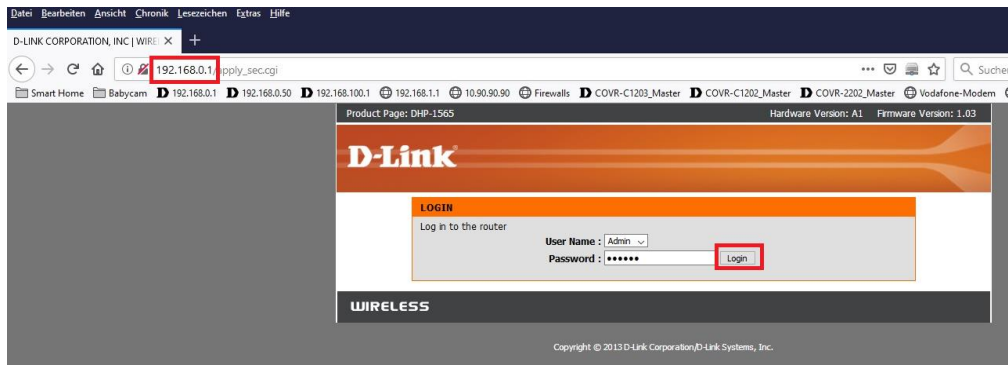

Hinweis:

Hat jemand anderes Ihren DHP-1565 konfiguriert und das Admin-Kennwort vergeben, fragen Sie ihn bitte danach.

Ist das Admin-Kennwort unbekannt, müssen Sie den DHP-1565 auf Werkseinstellungen zurücksetzen (Factory Reset).

Halten Sie dazu den Reset-Knopf mit der Aufschrift **RESET** auf der Rückseite Ihres DHP-1565 für etwa 5-10 Sekunden gedrückt.

Der DHP-1565 muss dazu eingeschaltet und hochgefahren sein.

Nach einem kurzen Moment startet der DHP-1565 dann neu.

Alle Einstellungen gehen beim Factory Reset verloren, auch die geänderte WLAN-Verschlüsselung.

Alle weiteren Schritte in dieser Anleitung sind dann hinfällig.

3. Klicken Sie oben das Menü **Setup** und links **Wireless** an und dann auf den Knopf **Add Wireless Device with WPS**.

The screenshot shows the D-Link router web interface. At the top, it displays 'Product Page: DHP-1565', 'Hardware Version: A1', and 'Firmware Version: 1.03'. The main navigation bar includes 'DHP-1565 // RT', 'SETUP', 'ADVANCED', 'TOOLS', 'STATUS', and 'SUPPORT'. The 'SETUP' menu is highlighted. On the left sidebar, 'WIRELESS SETTINGS' is selected. The main content area is titled 'WIRELESS SETTINGS' and contains three sections: 'WIRELESS NETWORK SETUP WIZARD' with a 'Wi-Fi Connection Setup Wizard' button, 'ADD WIRELESS DEVICE WITH WPS (WI-FI PROTECTED SETUP) WIZARD' with an 'Add Wireless Device with WPS' button, and 'MANUAL WIRELESS NETWORK SETUP'. A 'Helpful Hints...' sidebar on the right provides instructions for new and advanced users.

4. Wählen Sie **Manual ...** aus und klicken auf **Next**.

This screenshot shows the 'ADD WIRELESS DEVICE WITH WPS(WI-FI PROTECTED SETUP)' wizard. It prompts the user to 'Please select on of the following configuration methos and click next to continue.' There are two radio button options: 'Auto Select this option if your wireless device supports WPS (Wi-Fi Protected Setup)' and 'Manual Select this option will display the current wireless settings for you to configure the wireless device manually.' The 'Manual' option is selected and highlighted with a red box. Below the options are 'Next' and 'Cancel' buttons, with the 'Next' button also highlighted with a red box.

5. Bei **Pre-shared Key** können Sie Ihren WLAN-Schlüssel auslesen.

Mit einen Klick auf **OK** kehren Sie wieder ins Hauptmenü zurück.

The screenshot shows 'STEP 2: CONNECT YOUR WIRELESS DEVICE'. It provides a detailed summary of wireless security settings, advising the user to print the page for reference. The settings are as follows:
2.4GHz Band SSID: dlink
Security Mode: Auto (WPA or WPA2) - PSK
Cipher Type: BOTH
Pre-shared Key: 12345678
Below this, there is a section for a guest network:
SSID: dlink_guest
Security Mode: NONE
An 'OK' button is located at the bottom of the screen, highlighted with a red box.