

D-Link DCS-1000W

**2.4Ghz
Wireless
Internet Camera**

Manual

(2/13/2003)

D-Link
Building Networks for People

Contents

Package Contents	3
Introduction	4
Hardware Installation	9
Security	10
Using the Setup Wizard	11
Internet Camera Configuration	15
IPView Application Installation	35
IPView - Getting Started	41
Uninstall IPView Application	71
Using the Internet Camera as a Security System.....	73
Appendix (FAQ, I/O Connections, Time Zone Table, Active X Installation).....	79
Technical Specifications	94
Contacting Technical Support	96
Warranty and Registration.....	97
Index.....	100

Package Contents



Contents of Package:

- One Wireless Internet Camera
- Two External Antennas
- One Installation CD-ROM
- One AC power adapter
- One Camera Stand
- One Category 5 Ethernet Cable

If any of the above items are missing, please contact your reseller.

System Requirements:

Local Area Network: 10Base-T Ethernet or 100BaseTX Fast Ethernet

Wireless Local Area Network: IEEE 802.11b Wireless LAN

Recommended: PC or Notebook to Access the Internet Camera

Web Configuration

- Java Enabled and Compliant Web Browser (recommended)
- CPU: Pentium II, 266 MHz or above
- Memory Size: 32 MB (64 MB recommended)
- VGA card resolution: 800x600 or above

System Requirements (continued):

IPView Configuration

- Windows XP, Me, 2000, 98SE
- CPU: Pentium II, 350 MHz or above
- Memory Size: 128 MB (256 MB recommended)
- VGA card resolution: 800 x 600 or above

Introduction

The Internet Camera connects directly to an Ethernet, Fast Ethernet, or 802.11b network. It is different from the conventional PC Camera because the Internet Camera is a stand-alone system with a built-in CPU and Web server that transmits high quality video images for monitoring. The Internet Camera can be accessed remotely, and controlled from any PC/Notebook over the Intranet or Internet via a Web browser. The simple installation procedure and intuitive Web-based interface offer easy integration with your Ethernet, Fast Ethernet, or 802.11b wireless network. The Internet Camera also comes with remote monitoring capability for a complete and cost-effective solution.

Features & Benefits

Simple to Use

The Internet Camera is a stand-alone system with built-in CPU requiring no special hardware or software such as PC frame grabber cards. The Internet Camera supports both ActiveX mode for Internet Explorer and Java mode for Internet Explorer and Netscape Navigator. All that is required is a computer with current Web browser software.

Supports a Variety of Platforms

Supporting TCP/IP networking, SMTP e-mail, HTTP, and other Internet related protocols, the Internet Camera can be utilized in a mixed operating system environment such as Windows, Unix, and Macintosh. It can also be integrated easily into other Internet/Intranet applications because of its standards-based features.

Wired and Wireless Network Support

The Internet Camera supports both wired and wireless transmission, providing the advantage of mobility, flexibility, and high-speed of wireless LAN-based technology, IEEE 802.11b, to transform the Internet Camera into a total solution for your network. There are three modes available, configured from the slide switch on the rear panel:

- LAN (Local Area Network Only)
- LAN/WLAN (Local Area Network and Wireless Local Area Network. Both can be accessed at the same time.)
- WLAN (Wireless Local Area Network)

Web Configuration

Applying a standard web browser, administrators can configure and manage the Internet Camera directly from its own web page via the Intranet or Internet. Up to 64 user names and passwords are permitted, with privilege settings controlled by the administrator.

Remote Monitoring Utility

The powerful IPView application assigns the administrator with a pre-defined user ID and password enabling access for configuring the Internet Camera settings from the remote site via Intranet or Internet. IPView also allows you to upgrade remotely over the network for added convenience. Users are also allowed to monitor the image, record the image to a hard drive, and take snapshots.


Connection to External Devices

Supporting auxiliary Input/Output connectors, the Internet Camera can be connected to a variety of external devices such as IR-sensors, switches and alarm relays. You can combine the Internet Camera with programmable alarming facilities to develop a variety of security applications that are triggered on alarm-based events. The Internet Camera provides up to two in/out external devices for connectivity.

Broad Range of Applications

With today's high-speed Internet services, the Internet Camera can provide the ideal solution for live video images over the Intranet and Internet for remote monitoring. The Internet Camera allows remote access from a Web browser for live image viewing and allows the administrator to manage and control the Internet Camera anytime, anywhere in the world. Many applications exist, including industrial and public monitoring of homes, offices, banks, hospitals, child-care centers, and amusement parks. The Internet Camera can also be used for intruder detection, capture still images and video images for archiving, and much more.

Connections

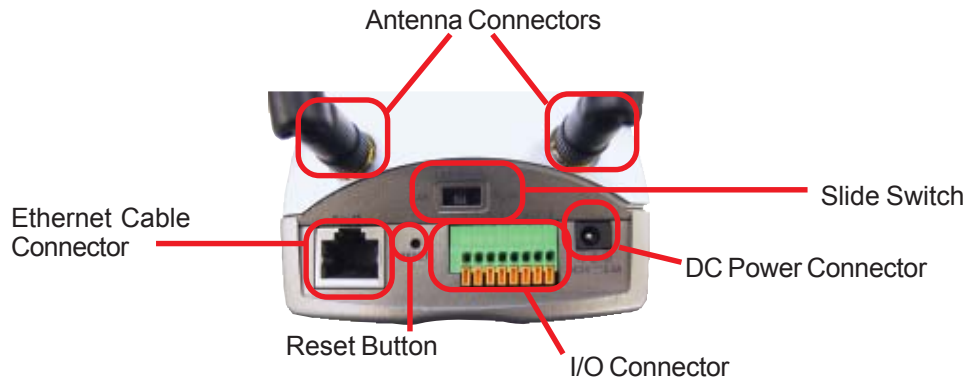

Network Cable Connector

The Internet Camera's rear panel features an RJ-45 connector for connections to 10Base-T Ethernet cabling or 100Base-TX Fast Ethernet cabling (which should be Category 5 twisted-pair cable). The port supports the NWay protocol, allowing the Internet Camera to automatically detect or negotiate the transmission speed of the network.

DC Power Connector

The DC power input connector is located on the Internet Camera's rear panel and is labeled **DC 5V** with a single jack socket to supply power to the Internet Camera.

Reset Button

Reset will be initiated when the reset button is pressed once and Power LED begins to flash.

Factory Reset will be initiated when the reset button is pressed continuously for three seconds or when Power LED begins to light up. Release the reset button and the Power LED will begin to flash indicating that the Internet Camera's settings are reverting back to the factory settings. When factory reset is completed, the Internet Camera will be set to default on channel 11 and ESS-ID is set as "NULL String". (This default setting allows the Internet Camera to connect to ANY access point on the infrastructure network.) The IP address will also return to the default setting of 192.168.0.20.

Connections *(continued)*

Slide Switch

The slide switch permits users to determine the type of network communication desired for the Internet Camera and is positioned on the rear panel. The three settings are as follows:

- LAN (Local Area Network Only)
- LAN/WLAN (Local Area Network and Wireless Local Area Network. Both can be accessed at the same time.)
- WLAN

I/O Connector

There are four I/O connectors, two for input and two for output situated on the rear panel. The I/O connectors provide the physical interface to send and receive digital signals to a variety of external alarm devices. *Please refer to the Appendix for detailed information.*

Antenna Connectors

Two high sensitivity antennas included with the camera connects to the two SMA type antenna connectors located on the rear panel of the Internet Camera.

Bracket Cavity

Located on the bottom panel of the Internet Camera, the bracket cavity is used to connect the camera stand onto the Internet Camera.

Bottom Panel



LEDS

LED stands for **L**ight-**E**mitting **D**iode.



Power LED

The Power LED is positioned on the right side of the Internet Camera lens. Steady blue confirms that the Internet Camera is powered on.

Note:

The Power LED has 3 different settings to control the LED activity for monitoring purposes: Normal / Off / Dummy. *Please refer to the **Internet Camera Configuration** section for detailed information and usage.*

LAN/WLAN LED

The LAN/WLAN LED is positioned on the right side of the Internet Camera lens. It is located to the right of the Power LED.

Steady orange confirms a good connection to the LAN or WLAN.

Depending on the data traffic, the LED will begin to flash to indicate that the Internet Camera is receiving/transceiving from/to the LAN or WLAN network.

Hardware Installation

Attach Wireless Antenna

From the rear panel of the Internet Camera, screw the 2 external antennas that came with the DCS-1000W into the antenna connector.



Configure Network Communication

From the rear panel of the Internet Camera select the desired network communication for the Internet Camera from the Slide Switch. Position the Slide Switch to the LAN, WLAN, or LAN/WLAN position, depending on your network configuration.



Connect an Ethernet cable

Connect an Ethernet cable to the network cable connector located on the Internet Camera's rear panel and attach it to your network.



Attach the external power supply

Attach the external power supply to the DC power input connector located on the Internet Camera's rear panel labeled DC 5V and connect it to your local power supply.

Note: The blue Power LED indicator will illuminate to indicate a proper connection to the power supply.



Connecting the Internet Camera to the Camera Stand

The Internet Camera comes with a camera stand with a swivel ball screw head that can be attached to the Internet Camera bottom bracket cavity. Attach the camera stand to the Internet Camera and station it for your application. There are three holes located in the base of the camera stand allowing the Internet Camera to be mounted on the ceiling or any wall securely.



Security

To ensure the highest security and prevent unauthorized usage of the Internet Camera, the Administrator has the exclusive privilege to access the *System Administration* setting to authorize privileges for all users. The Internet Camera supports multi-level password protection/access to the Internet Camera that can be restricted to defined users who have a **User Name** and **User Password** which is assigned by the Administrator.

The administrator can release a public user name and password so that when remote users access the Internet Camera, they will be allowed to view the images transmitted by the Internet Camera.

Note:


When the Internet Camera is used for the first time it is highly recommended that the Administrator set the **Admin ID** and **Admin Password** to constrain user access to the Internet Camera since the Default settings are Null String (no password). Once the ID and Password are defined only the Administrator has the access to the management of the Internet Camera. This procedure should be done as soon as possible since the security features of the Internet Camera will not be enabled until the **Admin ID** and **Admin Password** is defined.

Using the Setup Wizard


To get up and running immediately with your new Internet Camera, follow the simple steps below to run the Setup Wizard. Insert the **D-Link DCS-1000W** Driver CD into your CD-ROM drive. When the autorun screen appears, click **Install Wizard** to begin the installation.



Click **Next**

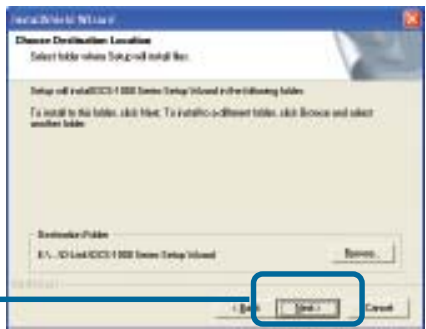

Click **Finish**

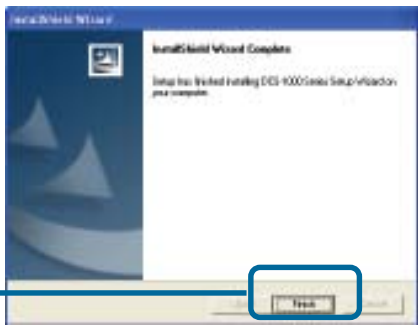

To run the Setup Wizard, click on **Start->Programs->DCS-1000 Series Setup Wizard**.


Your camera's IP address will be displayed here if it is valid.

Click **Wizard** to begin




This screen appears if the default IP Address of the camera (192.168.0.20) does not correspond to your local area network settings. To access your camera, your camera's IP address must correspond to your network's IP addressing scheme.

Click **Yes**

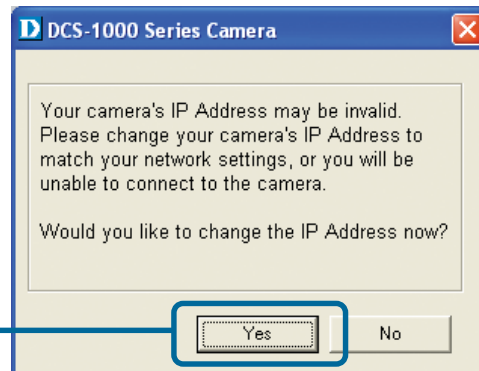

By default, the Admin ID and Password are blank. If you are running this Setup Wizard for the first time, simply click OK to continue.

Click **OK**

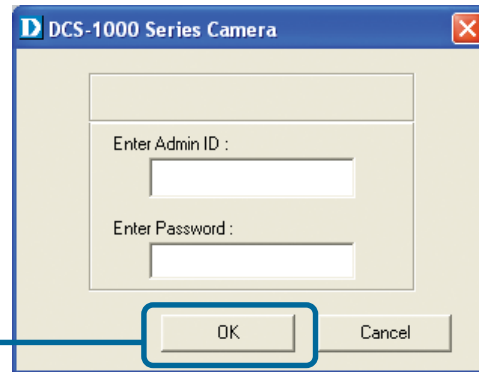

The IP Address of your camera must correspond to your network settings for you to access the camera. If you are unsure of what these settings should be, please check with your network administrator.

Click **OK**



You must change the Admin ID and Password immediately to protect your camera against unauthorized access. By default, the Admin ID and Password is blank. To change the Admin ID and Password, select both **Change** boxes and enter in a new Admin ID and Password.

Click **Next**



Input the correct settings for your camera into the **IP Address** and **Subnet Mask** fields. If you are not sure what these settings should be, please contact your network administrator to determine the correct settings.

Click **Next**

This screen allows you to set your wireless settings. Select your Connection Mode: Infrastructure (Access Point), 802.11 Adhoc (Wireless), Adhoc (Ethernet). The Network Name, Wireless Channel, and Encryption Keys **MUST** match your wireless network settings. If you are unsure of these settings, please check with your network administrator.

Click **Next**

If you need to make any changes, click **Back** to modify your camera settings. Otherwise Click **Restart** to save your settings.

Click **Restart**

When the main Setup Wizard screen appears after clicking **Restart**, you are ready to view your camera's images. Click **Link** to automatically launch your web browser and view your images.


Click **Link**

Internet Camera Configuration

Web Configuration

After completing the Setup Wizard, you are ready to use your camera. The web configuration utility is designed for advanced configuration of your Internet camera. If you wish to apply advanced configuration settings for your Internet Camera, you can do so through the web configuration interface.

From the Web Browser, enter the IP address that you assigned to the camera to access the Welcome screen of the Internet Camera.

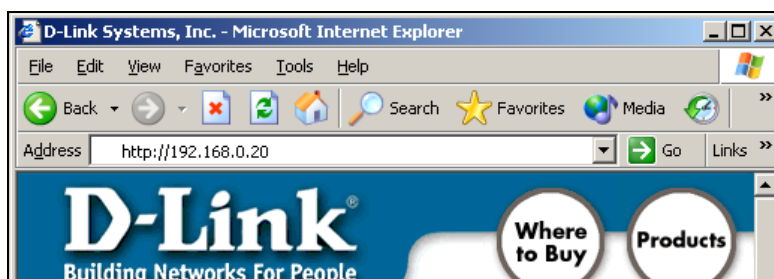

Note:

The PC's IP address must correspond with the Internet Camera's IP address in the same segment (i.e. PC=192.168.0.5, Camera=192.168.0.20) for the two devices to communicate. For instructions on how to do this, please access instructions for installing any of the D-Link Broadband Gateway products from support.dlink.com/ products. The **DI-713** or **DI-714** are good products to use as an example as their Quick Install Guides are the most up-to-date.

Main Menu Image

After the camera's IP address is entered from the browser, the Internet Camera Home screen will appear with a still image. There will be three options to choose from to set-up and view your Internet Camera and they are as follows:

- View Image – ActiveX Mode
- View Image – Java Mode
- System Administration



System Administration

Click on “**System Administration**” from the Home screen to access the settings required for the Internet Camera.

There will be several options in the System menu bar to choose from to set your Internet Camera and they are as follows:

- System
- Image
- Users
- Date/Time
- Trigger
- Information
- Tools

System Administration – System

The System menu contains commands for settings that are required for inputting key details to set-up the Internet Camera for operation.

Click on **System** in the system administration menu bar and the System screen will appear as illustrated below:

The screenshot displays the 'System' configuration page for a D-Link Wireless Internet Camera (DCS-1000W). The page features a navigation bar with 'System' highlighted. The configuration is organized into several sections:

- Camera Name:** CS-08EB51
- Location:** (Empty text field)
- Admin:** Admin ID, Admin Password, and Confirm Password (all empty text fields).
- IP Assignment:** Includes radio buttons for 'Manually Assign' (selected) and 'Assign Automatically Using'. Under manual assignment, there are fields for IP Address (192.168.0.250), Subnet Mask (255.255.255.0), and Default Gateway (0.0.0.0). Under automatic assignment, there are checkboxes for RARP, BOOTP, DHCP, and PPPoE, along with fields for Service Name, User ID, and Password.
- DNS IP Address:** Two fields for DNS IP addresses, both set to 0.0.0.0.
- Wireless Interface:** Connection Mode (Infrastructure selected), Network Name (ESS-ID), Wireless Channel (T1), Encryption WEP Key (ASCII selected), and Confirm WEP Key.
- LED Control:** Radio buttons for Normal (selected), OFF, and Dummy.
- Loading ActiveX From:** (Empty text field)
- Open Second Port:** Radio buttons for Yes and No (No selected). Below are two rows of settings: '1: Web Server - Default 80' and '2: Transfer Image - Default 8481', each with an empty text field.

At the bottom of the page, there are 'Save' and 'Cancel' buttons.

Camera Name:

This field is used for entering a descriptive name for the device. The default setting for the Camera Name is CS-xxxxxx, where xxxxxx is the last six digit of the MAC Address. The maximum length is 32 (Printable ASCII).

Location:

This field is used for entering a descriptive name for the location used by the Internet Camera.

Admin:

This field is used for entering the Administrator ID along with the password to access the System Administration settings. Be sure to enter the password twice to confirm the details once in the Admin Password field and again in the Confirm Password field.

The default setting for Admin is blank (Null String) you need to key in the Admin ID with a maximum length of 12 (Printable ASCII) characters and enter the Admin Password with a maximum length of 8 (Printable ASCII) characters.

It is highly recommended to set the Admin ID and Admin Password as soon as possible to ensure the highest possible security.

IP Assignment:

Access to the Internet Camera is gained by assigning a proper IP Address. Please make sure to use a vacant IP address when you assign the IP Address for the Internet Camera. This will prevent IP address conflict.

There are two options to select from the IP Assignment either **Manually Assign** or **Assign Automatically Using**.

Manually Assign

You can click **“Manually Assign”** and directly enter the IP address.

The default settings are as follows:

- Default IP – 192.168.0.20
- Subnet Mask – 255.255.255.0
- Default Gateway – 0.0.0.0

Assign Automatically Using

Important

It is recommended that you do not use an Automatically Assigned IP address as it may be difficult to determine the IP address of the unit after the IP address has been assigned. It is recommended that an IP address be assigned manually.

If your network is using RARP, BOOTP or DHCP server you can click **Assign Automatically Using** and click on **RARP**, **BOOTP** or **DHCP**. Under this setting the Internet Camera will automatically assign an IP address from RARP, BOOTP or DHCP server. Each time the Internet Camera starts up, be sure the RARP, BOOTP or DHCP server is setup to assign a static IP to your Internet Camera.

If your application requires direct connection from an ADSL modem through the Internet Camera's RJ-45 LAN port and you also have an ISP PPPoE account, the click on **PPPoE** and enter the **Service Name**, **User ID** and **Password** into the respective fields.

The Internet Camera will get an IP address from the ISP each time it starts up.

DNS IP Address:

DNS (Domain Name System) server is an Internet service that translates domain names (ie. www.dlink.com) into IP addresses (ie. 192.168.0.20). The DNS IP address can be received from your ISP. Enter at least one DNS IP Address.

Wireless Interface:

Connection Mode:

Use the Connection Mode to determine the type of wireless communication for the Internet Camera. There are three choices of **Infrastructure mode**, **802.11 Adhoc mode** and **Adhoc mode**. The default setting for the Connection Mode is Infrastructure.

Note:

Keep in mind that after setting the Wireless Interface make sure that the Slide Switch on the rear panel is positioned to either LAN/WLAN or WLAN setting for the wireless communication to take effect.

Network Name

This field is used to setup which wireless network (ESS-ID Extended Service Set ID) DCS-1000W is to be connected for communication. The ESS-ID is a unique identifier shared among all points in a wireless network environment.

The default Network Name is a blank space (NULL String); this default setting will let the Internet Camera connect to any access point under the infrastructure network mode.

To connect the Internet Camera to a specific access point on the network make sure that you set the ESS-ID of the Internet Camera to correspond with the access point's ESS-ID. Type any string up to 32 characters long (spaces, symbols, and punctuation are not allowed) in the Network Name box.

To connect the Internet Camera to an Ad-hoc wireless workgroup make sure that you set the same wireless channel and ESS-ID to match with the PC/Notebook wireless channel and ESS-ID for direct wireless communication under the Ad-hoc wireless workgroup (ad-hoc and 802.11 ad-hoc modes).

Note:

The Internet Camera supports two ad-hoc modes (802.11 ad-hoc mode and proprietary ad-hoc mode). Which option of the ad-hoc mode required depends on which ad-hoc mode is supported by your wireless card driver on the PC/Notebook. Some drivers supports both modes, however, some drivers support only one of the modes. The names of each ad-hoc mode may not be consistent between wireless card vendors, therefore you may need to try each of the ad-hoc modes (802.11 mode or Adhoc Mode proprietary) and select the mode that allows for wireless communication.

Wireless Channel

The pull down menu provides the wireless channel for communication. A "channel" is a range of frequencies to be used in communication between the Internet Camera and Access Point in infrastructure mode or the Internet Camera and PC/Notebook in Ad-hoc mode. Select the appropriate channel from the list provided depending on the regulatory region in which the unit is sold. The default setting is channel 11.

Encryption WEP Key

Wireless network communications are easily intercepted. WEP (Wired Equivalent Privacy) is an encryption method specified by the IEEE 802.11b standard to make any intercepted communications extremely difficult to interpret by unauthorized parties.

To enable WEP Encryption, first decide which WEP key format will be applied. Click on ASCII or HEX check box to select input format as ASCII format or HEX format, and then input the WEP key. To Confirm the WEP key you must enter the data once again in the Confirm WEP Key field.

ASCII input format

ASCII format causes each character you type to be interpreted as an eight-bit value. All unaccented upper- and lower-case Western European characters that can be input through your keyboard's typing zone are valid. To setup 64-bit WEP key, input 5 ASCII characters, for example, '12345'. To setup 128-bit WEP key, input 13 ASCII characters, for example, '1234567890123'. These character counts result in bit counts of 40 and 104, respectively; the Internet Camera will automatically pad your input to a bit count of 64 or 128.

HEX input format

HEX format causes each pair of characters you type to be interpreted as an eight-bit value in hexadecimal (base 16) notation. Only the digits 0 through 9 and the letters A through F (in upper or lower case) are valid. To set up a 64-bit WEP key, input 10 numbers in HEX format, for example, '3132333435', this is the same with the ASCII input '12345'. To set up a 128-bit WEP key, input 26 numbers in HEX format, for example, '31323334353637383930313233', this is the same with the ASCII input '1234567890123'. These character counts result in bit counts of 40 and 104, respectively; the Internet Camera will automatically pad your input to a bit count of 64 or 128.

On the Confirm WEP Key field, input the same characters input in the Encryption Code field.

Make sure the Encryption Code is the same with the access point's encryption code that the Internet Camera is to be connected under Infrastructure mode. Your PC/ Notebook's encryption code also needs to be setup the same with the Internet Camera's encryption code under either Infrastructure mode or Ad-hoc mode.

The default setting for the Encryption Key is **Disable**. Therefore, to secure the wireless transmission be sure to **Enable** the Encryption Key by entering the relevant data.

Note:

Be sure to carefully input the Encryption Code; input errors will cause the communication link to fail.

LED Control:

The LED control allows you to set up the LED illumination as desired. This feature provides the flexibility when surveillance activity is ON.

There are three options as follows:

- Normal
 - Power** - LED indicator is steady ON.
 - LAN/WLAN** - LED indicator is steady ON. When LAN/WLAN activity is present the LED indicator will flash steadily.
- OFF
 - Power** - LED indicator is OFF.
 - LAN/WLAN** - LED indicator is OFF.
- Dummy
 - Power** - LED indicator is steady ON.
 - LAN/WLAN** - LED indicator is ON with random flashing.

The default setting for the LED control is **Normal**. When you have configured the LED control the correct illumination will be applied after 1 minute.

Note:

This function is built-in to the LED indicators to add extra capabilities. The three options allow the Administrator to configure and camouflage the illumination for the LED indicator to falsify the monitoring status. In Normal Mode the LED indicator functions normally. Under Off Mode the LED indicators are both off, however, it is still monitoring the activity. In Dummy Mode the LED indicators operate in monitoring condition but monitoring activity is off or on.

Loading ActiveX From:

This field is used to specify the location of Xplug Control (ActiveX) plug-in program. Enter the information as required in .ocx format, for example:

<http://www.<your company>.com/xplug.ocx> where <your company> must be replaced with your company's DNS server.

Instructions for installing ActiveX from the driver CD is included in this manual. Please refer to the Appendix.

Open Second Port:

The Open Second Port option is used when multiple cameras are being installed on a network OR if you wish to use a port other than the default port 80 and 8481 for image viewing. If you are installing only one camera and wish to use the default ports, you do not have to open a second port on your camera. If you are installing a camera behind a router, you must also open a port on your router for remote viewing of your camera. For detailed instructions on how to do this, please refer to the dlink.com. For each additional camera that is installed, you must select the Open Second Port option and assign the appropriate Web server and Transfer Image Ports for each camera to enable remote viewing.

For example, for a multiple camera installation, you can open the second port for each additional Internet Camera from port 81 to Port 85 as follows:

Internet Camera 1 – IP 192.168.0.101, second web port 81
Internet Camera 2 – IP 192.168.0.102, second web port 82
Internet Camera 3 – IP 192.168.0.103, second web port 83
Internet Camera 4 – IP 192.168.0.104, second web port 84
Internet Camera 5 – IP 192.168.0.105, second web port 85

The Transfer Image Port must also be assigned a port number for multiple camera installation, beginning with port 8482:

Internet Camera 1 – IP 192.168.0.101, second web port 8482
Internet Camera 2 – IP 192.168.0.102, second web port 8483
Internet Camera 3 – IP 192.168.0.103, second web port 8484
Internet Camera 4 – IP 192.168.0.104, second web port 8485
Internet Camera 5 – IP 192.168.0.105, second web port 8486

Note: If you are installing multiple Internet Cameras and wish to use the default 192.168.0.20 address, remember to assign this address to the LAST camera that you plan to install to avoid IP Address conflict.

IMPORTANT: You **MUST** also set up your router/gateway for Port Mapping--this will enable remote viewing of your camera through the Internet. Please refer to your router's instruction manual on how to open up ports. Please also refer to dlink.com. For installing multiple cameras, **TWO** ports per camera must be opened on your router, the web server and image transfer port.


Save/Cancel:

After making sure all your settings are correct, click on the **Save** button to store the settings. You can alternatively click on the **Cancel** icon to restore all settings to the values last saved to or retrieved from the Internet Camera.

System Administration - Image

The Image menu contains commands allows you to change your camera's image settings.

Click on **Image** in the menu bar and the Image screen will appear:

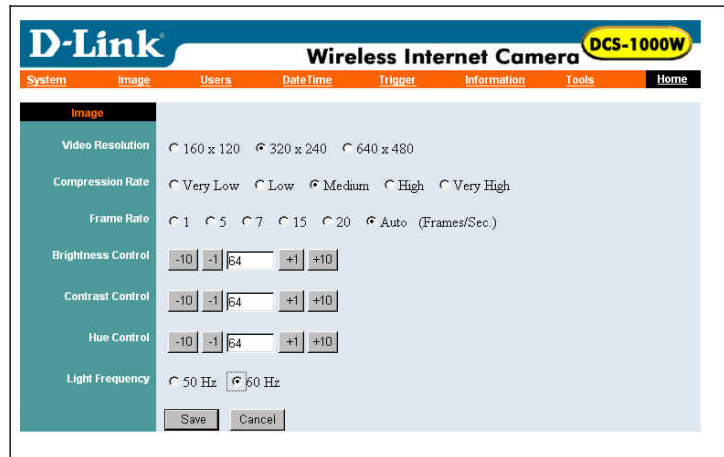

Video Resolution:

Select the desired video resolution format: 160x120, 320x240 (default) or 640x480

Compression Rate:

Select the desired compression rate from very low to very high. Higher video compression rates will generate more compact file sizes with less video quality, and lower video compression will result in larger files with higher video quality. The default setting is **Medium**.

Frame Rate:

Select the frame rate desired. **Auto** is the frame rate setting by default and provides the best results.

Brightness Control:

Allows you to adjust the brightness level. The default setting is **64**.

Contrast Control:

Allows you to adjust the contrast level. The default setting is **64**.

Hue Control:

Allows you to adjust the hue level. The default setting is **64**.

Light Frequency:

Adjust the light frequency to suit your area of operation. 50 Hz and 60 Hz variants are available to accommodate the different light frequencies found in USA (60 Hz) and Europe (50 Hz) to ensure optimal image quality.


Save/Cancel:

After making sure all your settings are correct, click on **Save** to store the settings. You can alternatively click on **Cancel** to restore all settings to the values last saved to or retrieved from the Internet Camera.

System Administration - Users

The User options menu contains commands to allow the system administrator to assign users permission to monitor the Internet Camera from a remote site.

Click on **Users** in the menu bar and the **Users** screen will appear as illustrated below:

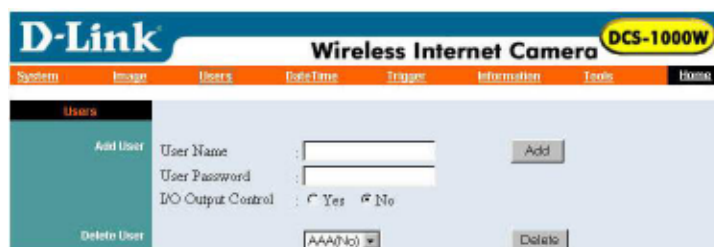

The screenshot shows the 'Users' management page for a D-Link Wireless Internet Camera (DCS-1000W). The page has a navigation menu at the top with options: System, Image, Users, Date/Time, Trigger, Information, Tools, and Home. The 'Users' menu item is highlighted. The main content area is titled 'Users' and contains two sections: 'Add User' and 'Delete User'. The 'Add User' section has three input fields: 'User Name' (with an 'Add' button), 'User Password' (with an 'Add' button), and 'DC Output Control' (with radio buttons for 'Yes' and 'No'). The 'Delete User' section has a dropdown menu showing 'AAA(NC)' and a 'Delete' button.

Add User:

User Name:

Enter the user name in this field.

A maximum of 64 user names are allowed, however each user name must be different. Each user name can be used as a group. For example, if the User Name is **Guest** and the User Password is **Guest** anyone can access the Internet Camera using this information. The maximum length for the User Name is 12 characters (Printable ASCII).

User Password:

Enter the user's password you want to assign to the specific user-name. The maximum password length is 8 characters (Printable ASCII).

I/O Output Control:

The Administrator has the authority to give users permission to control the I/O Output by selecting **Yes** or **No**.

To add a new user name, input the necessary information first and click on **Add**.

Delete User: Select the user you wish to delete from the pull down menu and click on the **delete** icon.

Important Information


Once the administrator has added users for the Internet Camera, users will be required to enter a login password to access the video image from the Internet Camera. The password dialog box is illustrated below.



System Administration – DateTime

The **DateTime** menu contains commands for setting the Internet Camera's time and date requirements to provide correct information to users who might be thousands of miles away at a remote site. The two options in the **DateTime** menu bar are *Synchronized with Time Server* or *Set Manually*

Click on **DateTime** in the system administration menu bar and the *DateTime* screen will appear as illustrated below:

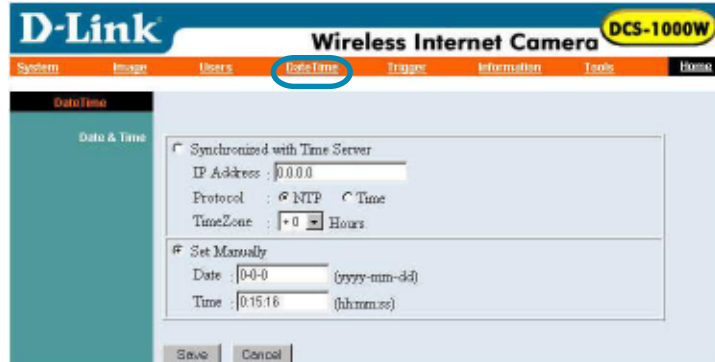

DateTime:

Select **Synchronized with Time Server** and the time will be based on the GMT setting. The time will be synchronized every 10 minutes. This is also the default setting for the Internet Camera.

IP Address:

Enter the IP Address of the *Time Server* in this field.

Protocol:

Two options for linking with the Time Server are available. The default setting is **NTP**.

TimeZone:

The System administrator must select the time zone for the region. *Please refer to the Appendix for the time zone selection table.*

To set the **Time** manually select **Set Manually**. The system administrator must then enter the Date and Time in the respective field manually.

When you select **Set Manually**, each time the Internet Camera is powered off and on you must re-enter the details once again.

Save/Cancel:

After making sure all settings are correct, click on the **Apply** icon to store the settings in the Internet Camera. You can alternatively click on the **Cancel** icon to restore all settings to the values last saved to or retrieved from the Internet Camera.

The NTP server web addresses listed below will set the time server.

<http://www.eecis.udel.edu/~mills/ntp/clock1.htm>

<http://www.eecis.udel.edu/~mills/ntp/clock2.htm>

System Administration – Trigger

The Trigger menu contains commands for the I/O Trigger connectors providing the physical interface for 2 digital outputs and 2 digital inputs that are used for connecting a diversity of external alarm devices to the Internet Camera such as IR-Sensor and alarm relay devices.

Click on **Trigger** in the system administration menu bar and the Trigger screen will appear as illustrated below:

The screenshot displays the 'Trigger' configuration page for a D-Link DCS-1000W camera. The page is organized into two main sections, 'I/O Input 1 Trigger' and 'I/O Input 2 Trigger'. Each section contains a checkbox for 'Send e-mail attached with trigger'. Below this, there are input fields for 'SMTP Server Address', 'SMTPS e-mail Address', 'POP3 e-mail Address', and 'IMAP4 e-mail Address'. There are also input fields for 'Sending Interval' and 'Sending Time', both with 'Seconds' labels. Underneath, there is a checkbox for 'Trigger I/O Output' and two checkboxes for 'Output 1 Time' and 'Output 2 Time', each with a 'Seconds' label. At the bottom of the page, there are 'Save' and 'Cancel' buttons.

The default setting for the I/O Trigger functions is “disabled.” You must enable the I/O Trigger first to enable the Triggers.

There are two options to select from the Trigger screen: **I/O Input 1 Trigger** and **I/O Input 2 Trigger**.

I/O Input 1 Trigger:

Select “**Send e-mail attached with image**” and enter relevant information such as the SMTP Server Address, Sender e-mail Address, Receiver e-mail Address, Sending Interval and Sending Times.

- ◆ **SMTP** (Simple Mail Transfer Protocol) is a protocol for sending e-mail messages between servers. You need to input the mail server address in this field.
- ◆ **Sender e-mail** is the person’s e-mail address that will be sending the e-mail.
- ◆ **Receiver e-mail** is the e-mail address of the person that will receive the e-mail.
- ◆ **Sending Interval** is the period of time between each e-mail being sent to the receiver. If the setting is at 10 seconds, a new e-mail will be sent in a 10 second interval to the receiver.
- ◆ **Sending Time** is the number of times the e-mail will be sent to the receiver before it terminates.

Select “**Trigger I/O Output**” and enter the setting for the duration of the output device for Output 1 time and Output 2 time in seconds.

I/O Input 2 Trigger:

Refer to “I/O Input 1 Trigger” information above.

Save/Cancel:

After making sure all your settings are correct, click on the **Save** icon to store the settings for the Internet Camera. You can alternatively click on the **Cancel** icon to restore all settings to the values last saved to or retrieved from the Internet Camera.

Warning

*When connecting other devices through the I/O connectors, please make sure the maximum current of 100mA is strictly observed. Failure to do so might cause a loss of power and possibly cause serious damage to the Internet Camera.
Please refer to the Appendix for detailed information regarding the I/O Connector.*

System Administration - Upload

The **Upload** menu contains commands for FTP server, time schedule and manual operation. Click on **Upload** in the system administration menu bar and the Upload screen will appear as illustrated below:

The screenshot shows the 'Upload' configuration page for a D-Link Wireless Internet Camera (DCS-1000W). The page is organized into three main sections: FTP Server, Time Schedule, and Manual Operation. The FTP Server section includes fields for Host Address (61.219.201.69), Port Number (21), User Name (ftp-test), Password (masked), Directory Path, and Passive Mode (No). The Time Schedule section has a checkbox for 'Upload image to FTP server', radio buttons for 'Always' and 'Schedule', a 'Day' selection (None), 'Time Period' start/stop times, 'Image Frequency' (1 Frames/Second), 'Base File Name', and file naming options (Overwrite, Date/Time Suffix, Sequence Number Suffix). The Manual Operation section has a checked checkbox for 'Upload image to FTP server', 'Base File Name' (asa), and file naming options. 'Save' and 'Cancel' buttons are at the bottom.

There are three options to select from in the Upload screen: **FTP Server**, **Time Schedule** and **Manual Operation**.

FTP Server:

There are 6 basic settings for your FTP server.

- **Host Address:** The IP Address of the target FTP server.
- **Port Number:** The standard port number for the FTP server is Port 21 and is also the default setting. If the FTP server uses a specific port, please confirm with your network admin.

- **User Name:** Enter the user name in this field.
- **Password:** Enter the user password in this field to login the FTP server.
- **Directory Path:** It is recommended to leave this field blank. By default, the path will be the ftp root directory. Optional: Enter an existing folder name in this field, and the images will be uploaded to the given folder.
- **Passive Mode:** This function depends on your FTP server. Please check with your network admin if the FTP server uses passive mode. The default setting is **No**.

Time Schedule:

Select **Upload image to FTP server** and enter the schedule, image frequency and base file name.

- **Schedule:** You can 1.) Choose **Always** to upload the images to FTP server always, or 2.) Set the **Schedule** to manage the uploading task. In the Schedule option, you can set the Day and Time Period option.
- **Image Frequency:** There are two ways to set the image frequency: 1.) Set Auto/1/2/3 frames per second, or 2.) Set the time in seconds for every one frame.
- **Base File Name:** Enter the file name to identify your saved video images.
- **File:** Since several images are uploaded to the FTP server, you can choose the filing rule, including **Overwrite**, **Date/Time Suffix**, and also set up the **Sequence Number**.

Manual Operation: When you click on the image upload **On** button, it will start to upload the image. This option also will use the same **Base File Name** and **File** naming convention as above.

Save/Cancel:

After making sure all your settings are correct, click on **Save** to store the settings for your Internet Camera. You can alternatively click on **Cancel** to restore all settings to the values last saved to or retrieved from the Internet Camera.

System Administration - Information

The Information menu displays information about your Internet Camera. Click on **Information** in the system administration menu bar and the Information screen will appear as illustrated below:



The Information table provides detailed information about your Internet Camera such as the Model Name, Firmware Version, Mac Address, and IP Address.

System Administration - Tools

The Tools menu contains commands for restarting your Internet Camera. Click on **Tools** in the menu bar and the Tools screen will appear as illustrated below:



Reset:

The Reset command restarts the Internet Camera. With Reset, you can turn it off and then on again, and your settings will be retained. The Reset panel contains the message “Do you really want to reset this device?” and a YES button. If you do not want to reset the Internet Camera, exit the panel without clicking YES, otherwise, click on the “**YES**” icon and the reset process will initiate.



Warning

The Network settings must be reconfigured after a Factory Reset!


Completing Your Camera Configuration

Once the configuration is completed click on **Home** to return to the Home screen and select the desired Viewing Image either using ActiveX Mode or Java Mode as described in the next section.

The last step is to position the Internet Camera and adjust the focus, by manually turning the lens clockwise or counter-clockwise to the desired image quality. *Please refer to the appendix for detailed information regarding **Adjusting the Internet Camera Focus and Replacing the Lens.***

View Image – ActiveX Mode

To view video images from the browser, click on “**View Image – ActiveX Mode**” in the Home screen, as illustrated below:

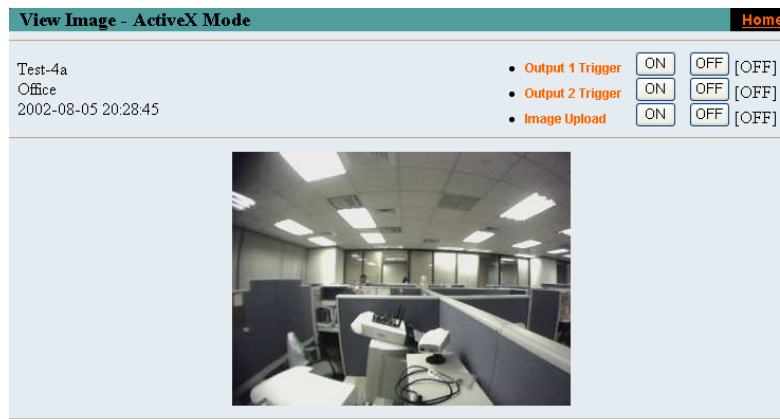

Camera Name - The Camera name will be displayed in the upper left hand corner of your browser screen according to the information that is provided in the Web Configuration setting under **System**.

Location- The location of the Internet Camera will be displayed in the upper left hand corner of your browser screen according to the information that is provided in the Location field in the Web Configuration settings under **System**.

Date/Time - The date/time of the Internet Camera will be displayed according to the time server settings or from settings you have made manually.

Note:

Please refer to the appendix for instructions on how to install ActiveX.

1. Install to the Web Server
2. Install to your Local PC

In *ActiveX Mode*, you are allowed two output trigger options and one image upload option. Simply click on the desired selection “**ON**” or “**OFF**” to utilize the options for each of the functions.

Note 1:

Output trigger will send a 5V signal to the device connected to the Internet Camera. A maximum of two devices is permitted to connect to Internet Camera to utilize the output trigger function. Please refer to appendix for detailed information.

Note 2:


The *Administrator* has the authority to allow users to set the output trigger functions, through the **System Administration-Users** menu.

Note 3:

The *Administrator* has the authority set the image upload functions through the **System Administration-Trigger** menu.

View Image – Java Mode

Click on **View Image – Java Mode** from the Home screen to access the video images from the Internet Explorer or Netscape browser as illustrated below:

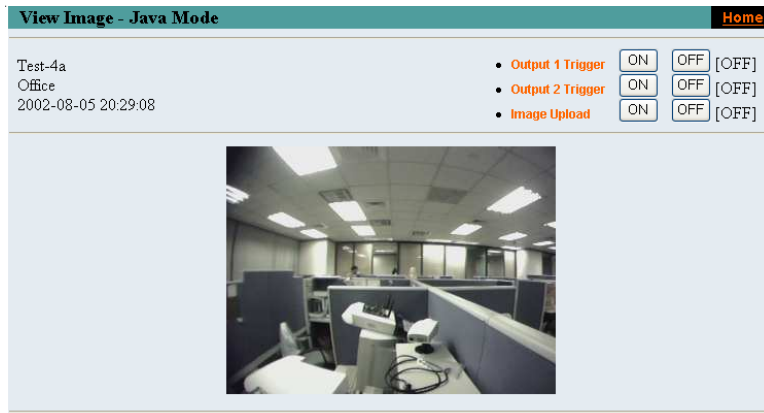

Camera Name - The Camera name will be displayed when the Camera Name field is entered in the Web Configuration setting under **System**.

Location - The location of the Internet Camera will be displayed when the Location field is entered in the Web Configuration settings under **System**.

Date/Time - The date/time of the Internet Camera will show the date and time which comes either from the time server or from manual settings.

In **Java** Mode you are allowed two output trigger options and one image upload option. Just click on the desired selection **ON** or **OFF** to utilize the options for each of the functions.

Note 1:

Output trigger will send a 5V signal to the device connected to the Internet Camera. A maximum of two devices is permitted to connect to the Internet Camera to utilize the output trigger function. *Please refer to appendix for detailed information.*

Note 2:

The Administrator has the authority to allow users to set the output trigger functions through the **System Administration-Users** menu.

Note 3:

The Administrator has the authority to access image upload functions through the **System Administration-Trigger** menu.

IPView Application Installation

IPView software is included for administrators to manage multiple Internet cameras remotely, enable motion detection, and configure advanced settings for the DCS-1000W. IPView is a complete software management tool for the DCS-1000W and includes all configurable settings available in the web configuration utility.

Installation


Insert the CD-ROM into the CD-ROM drive to initiate the auto-run program.

To install the IPView application click on **Install IPView** on the main screen to activate the installation procedure for the application program.


Once executed a prompt will appear requesting the input of the desired language selection. Make the desired selection and click on **OK** to continue.




The Welcome screen will appear. Click on the **Next** button to proceed with the installation.

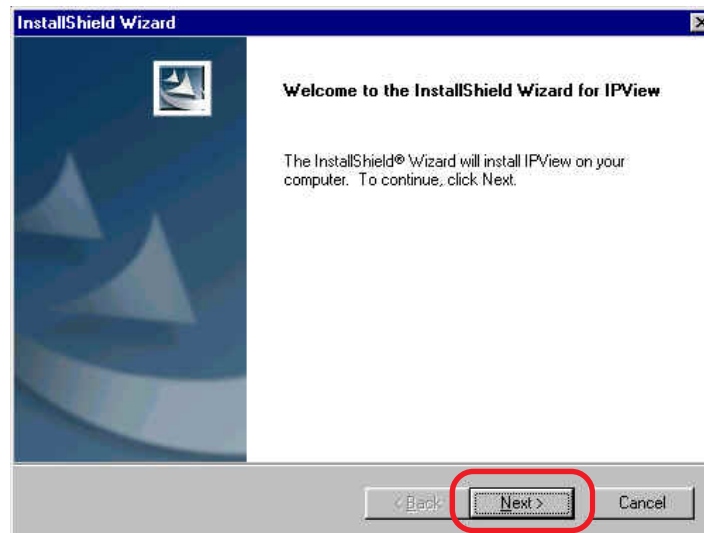


The License Agreement prompt will appear as below. Read the details carefully and click on the **Yes** icon to continue with the installation procedure.

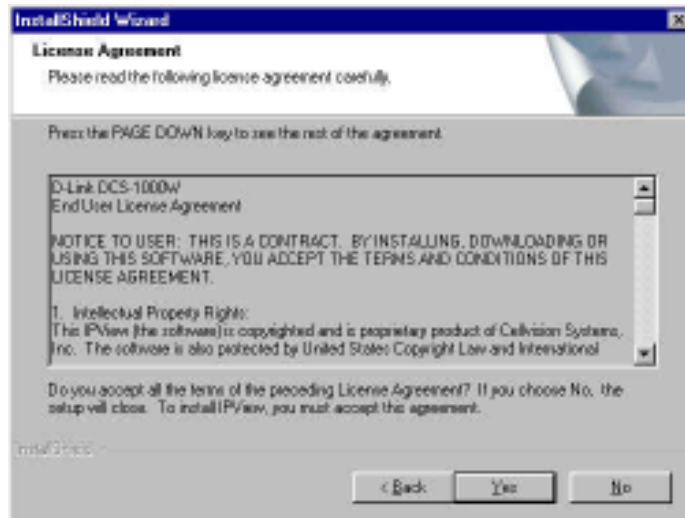


A prompt will appear and in the Destination Location dialog box, you may click on **Next** to accept the recommended destination location or click on **Browse** to select another location. After specifying the desired destination location, click on **Next** to proceed further.

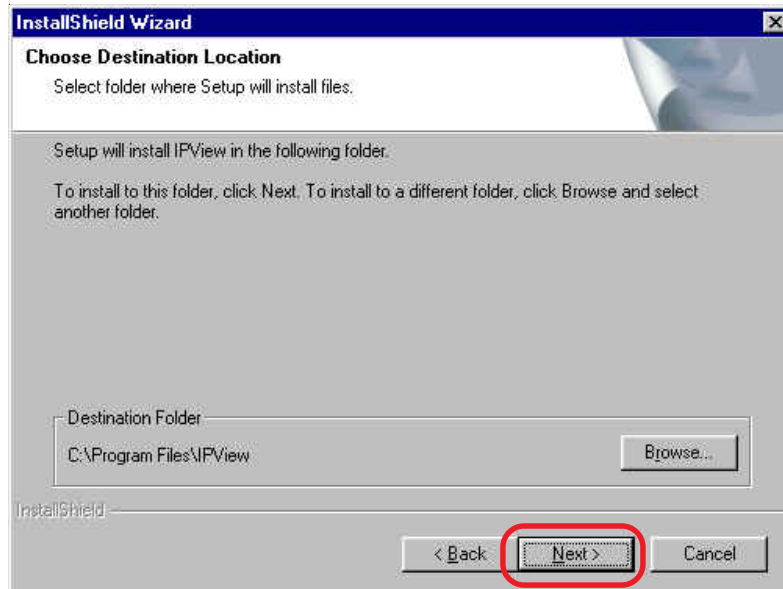


The Select Program Folder prompt will appear providing information on where the IPView application is located, click on **Next** to continue. If you wish to modify your settings, click on **Back** to return to the previous screens.

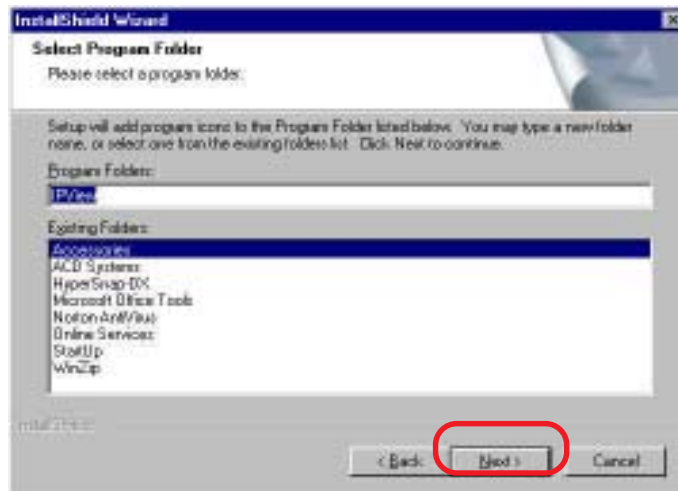

Please wait until one of the two dialog boxes appear, select “Yes, I want to restart my computer now” and click on **Finish** to restart the computer to complete the installation procedure.

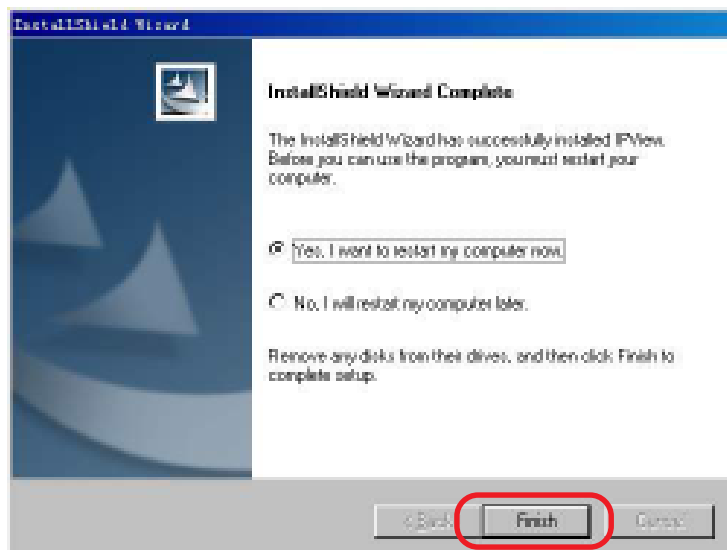

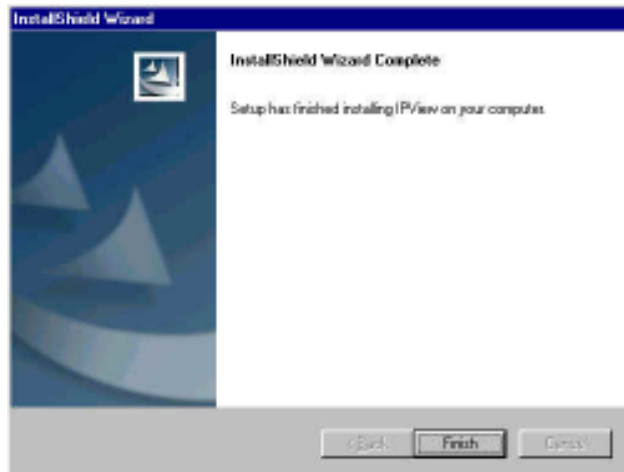


After successfully installing the IPView, the application program for the Internet Camera is automatically installed to \Programs\IPView Directory.

To start running the IPView click on windows **Start > Menu > Programs > IPView >IPView**

Once IPView is executed a Login prompt will appear, you must enter the default User Name: **admin** into the respective field and click on **OK** to log into the application.



Once logged in, the IPView application is executed and the IPView interface will appear as follows in the default List View format:

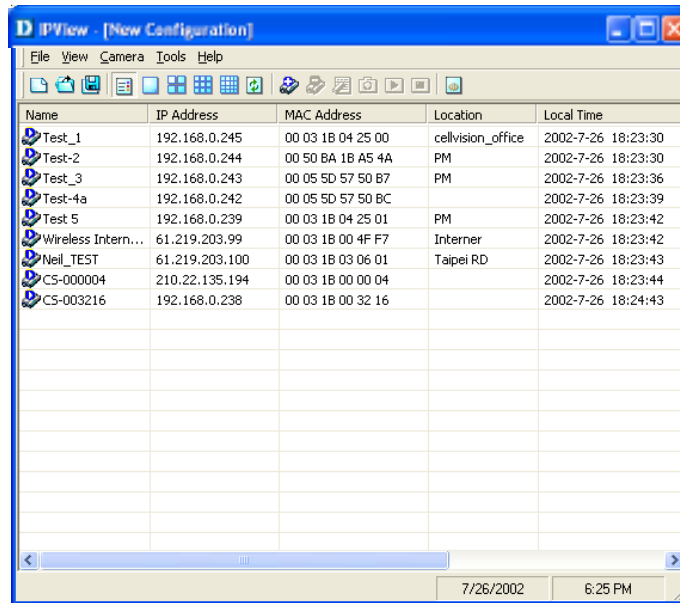

The screenshot shows the IPView application window titled "IPView - [New Configuration]". The window has a menu bar with "File", "View", "Camera", "Tools", and "Help". Below the menu bar is a toolbar with various icons. The main area displays a table with the following columns: Name, IP Address, MAC Address, Location, and Local Time. The table contains the following data:

Name	IP Address	MAC Address	Location	Local Time
Test_1	192.168.0.245	00 03 1B 04 25 00	cellvision_office	2002-7-26 18:23:30
Test-2	192.168.0.244	00 50 BA 1B A5 4A	PM	2002-7-26 18:23:30
Test_3	192.168.0.243	00 05 5D 57 50 B7	PM	2002-7-26 18:23:36
Test-4a	192.168.0.242	00 05 5D 57 50 BC		2002-7-26 18:23:39
Test 5	192.168.0.239	00 03 1B 04 25 01	PM	2002-7-26 18:23:42
Wireless Intern...	61.219.203.99	00 03 1B 00 4F F7	Interner	2002-7-26 18:23:42
Neil_TEST	61.219.203.100	00 03 1B 03 06 01	Taipei RD	2002-7-26 18:23:43
CS-000004	210.22.135.194	00 03 1B 00 00 04		2002-7-26 18:23:44
CS-003216	192.168.0.238	00 03 1B 00 32 16		2002-7-26 18:24:43

The status bar at the bottom of the window shows the date "7/26/2002" and the time "6:25 PM".


IPView - Getting Started

This section describes the operation of the IPView application User Interface with detailed procedures for using the application.

IPView

IPView is responsible for the management, preview, configuration, and searching for each camera.

It is designed with a user-friendly interface for ease of control and navigation as illustrated below.

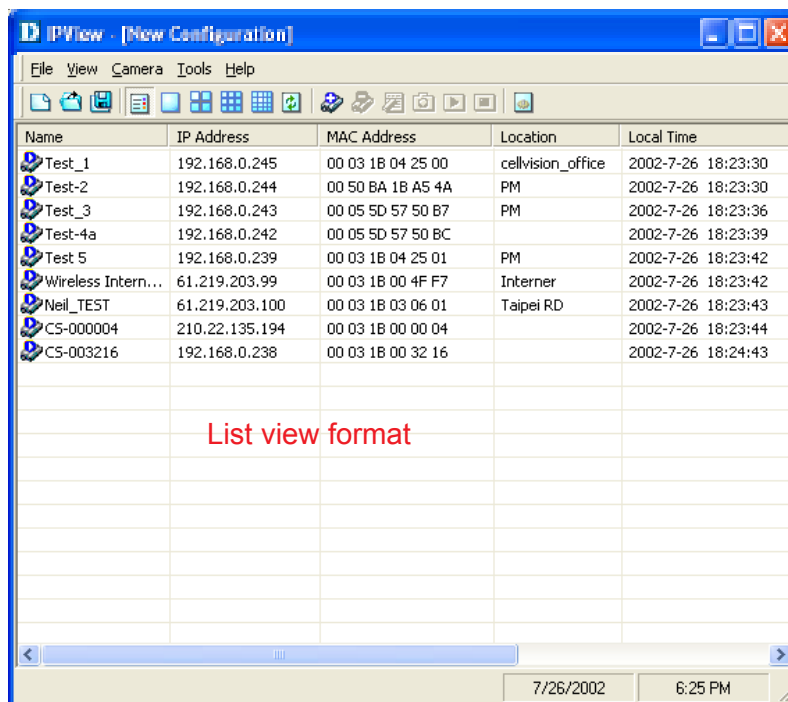

How to Change the Password


Change Password

When IPView is used for the first time it is highly recommended for the administrator to change the **User Name** and **Password** for security purposes. Once the **User Name** and **Password** are defined, only the Administrator has access to the management of IPView applications. This procedure should be done as soon as possible to prevent unauthorized usage of the IPView application.

Once IPView is executed a **Login** prompt will appear, you must enter the default **User Name: admin** into the respective field and click on **OK** to log into the application.




To change the administrator **User Name** and **Password** select **Tools > Options**. The **Options** dialog box will appear as illustrated below.

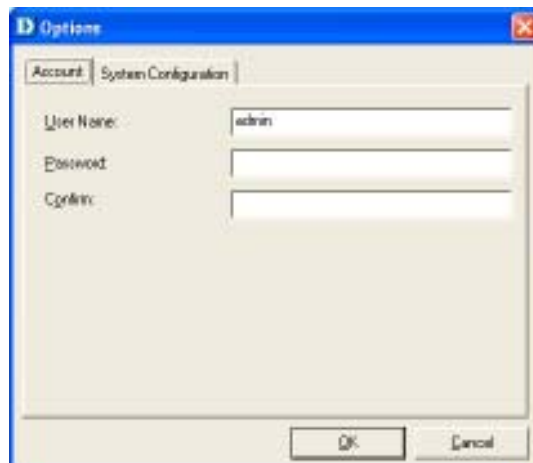

Enter a **User Name** and enter the **Password** twice. Once all the new details are entered click **OK**.

Make sure to save any changes you have made to keep the information updated.


Note:

Alternatively you can click the **Options** icon  as illustrated or use the hot key **F10**.


How to Change the IP Address

Change the IP Address


To change an IP Address for a camera select **Camera > Add**. An **Add Camera** dialog box will appear as illustrated below.

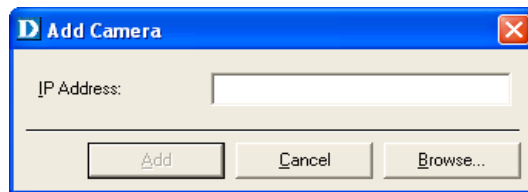


Click on **Browse**. The **Browse Camera** dialog box will appear with a blank screen as illustrated below.

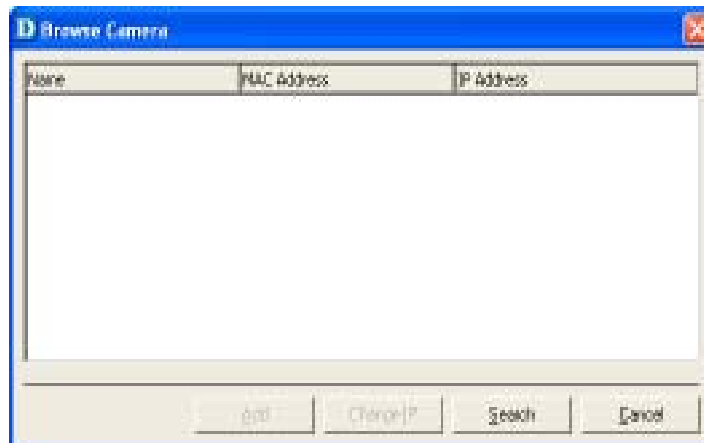

Click **Search**. IPView will detect and search all the available cameras that are installed on the local area network as depicted below:

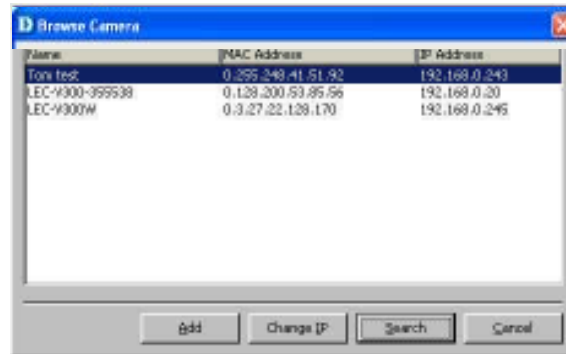

Highlight the camera you wish to change and click **Change IP**. The **Change IP Address** dialog box will appear as depicted below:

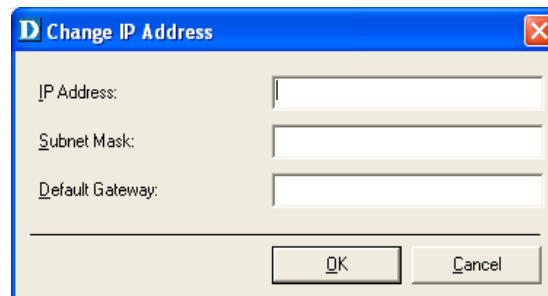

Enter the new **IP Address**, the **Subnet Mask** and the **Default gateway** into the respective fields and click **OK**. IPView will automatically change the IP Address.

Make sure to save any changes you have made.

How to Add a Camera

Add Camera

To add a new camera select **Camera > Add** from the IP View. An **Add Camera** dialog box will appear as illustrated below.



Enter the IP Address of the camera in the specified field and click **Add**. If the IP Address is entered incorrectly a dialog box will appear to notify you of the error.




Note: *If you want to add a camera through the Internet, you must key in a physical IP Address.*

If you are unsure of the IP Address of the camera you can click on **Browse**, the **Browse Camera** dialog box will appear with a blank screen as illustrated below.




Click on **Search**. IPView will detect and search all the available cameras that are installed on the local area network as depicted below:

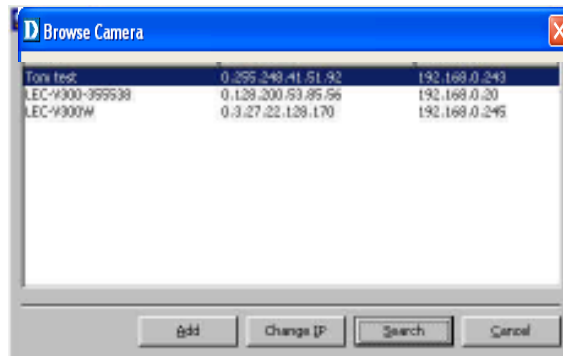

Highlight the camera you wish to add and click on **Add**. The **Add Camera** dialog box will appear once again with the IP Address entered. Click on **Add**. The camera will be automatically added into the IPView list view format.

Alternatively, you can double-click on the camera you wish to add and the **Add Camera** dialog box will appear once again with the IP Address entered. Click on **Add**, and the camera will be automatically added into the IPView list view format.

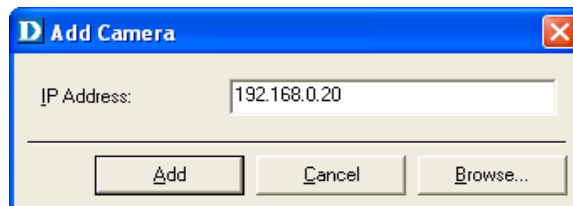

If the **Login Camera** dialog box appears, make sure to enter the correct **User Name** and **Password**. Click **OK**. The camera will be added into IPView, in list format. If the **User Name** and **Password** are entered incorrectly, the camera will not be added into IPView.

The Login Camera dialog box will appear only if you have already set the **User Name** and **Password** during the Web Configuration setting.

If you forget to highlight the camera you wish to add, a dialog box will appear to notify you of the error.




Make sure to save any changes you have made.

Note 1:

You are only able to add one camera at a time.


Note 2:

Alternatively you can click the **Add** icon  as illustrated, or use the hot key **Shift+Ins**.

How to Delete a Camera

Delete Camera

To delete a camera you must highlight the camera you wish to delete from IPView list view format. From the menu bar select **Camera > Delete**. A **Delete Camera** dialog box will appear. Click **Yes** to delete the camera, or click **No** if you do not wish to delete the camera as illustrated below.

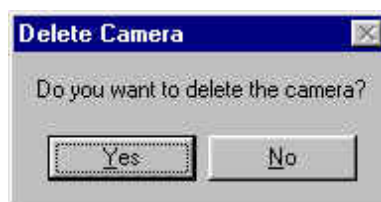

Make sure to save any changes you have made.

Note:

Alternatively you can click the **Delete** icon  as illustrated or use the hot key **Del**.

How to format the Camera view

View Camera

From the menu bar select **View > 4 Cameras** (other choices are available in **1 Camera**, **9 Cameras** and **16 Cameras** viewing format). The viewing screen will appear with the video image.



Note:





The icon on the upper left corner of the screen will appear with the camera number that is being displayed

To return to the IPView list view format, right-click on the icon located on the upper left corner of the screen and a case sensitive menu will appear. Select **List** and the viewing image will return to the list view format.

Note 1:

A maximum of 16 cameras are available for viewing with the IPView application.

Note 2:

Alternatively you can click the **1 Camera** icon  as illustrated or use the hot key **Ctrl+F3**. For **4 Cameras** , **9 Cameras**  and **16 Cameras**  click the respective icon or use the hot key as follows **Ctrl+F4**, **Ctrl+F5** and **Ctrl+F6**. To return to list view format use the hot key **Ctrl+F1**.

Rotate Video

In **View Mode** format, click on the icon located on the upper left corner of the screen and a pop-up menu will appear as shown below.



Once you click **Rotate Right** or **Rotate Left** in the menu, the video will rotate 90 degrees to the right or left.

How to take a Snap-Shot with the Camera

Snap shot

To take a snap shot with the camera, you must highlight the camera you wish to use from the list view format. From the menu bar select **Camera > Snap shot**. A **Save Image** dialog box will appear for you to save the snap shot picture.

Alternatively, select from the viewing mode either 1, 4, 9, or 16 cameras. Click on the icon located on the upper left corner of the screen. A case sensitive menu will appear. Select the **Snap shot** icon. A **Save Image** dialog box will appear for you to save the snap shot picture.

Note:

You can also click the **Snap shot** icon , as illustrated, or use the hot key, **F5**.

How to Start Recording

To start recording with a camera you must highlight the camera you want to use from the list view format. From the menu bar select **Camera > Start**. According to the default setting, an AVI file will appear in your IPView folder to save the recorded videos.

Alternatively, in the viewing mode (using either 1, 4, 9, 16 cameras), right-click on the icon located on the upper left corner of the screen. A case sensitive menu will appear. Select the **Start** icon. According to the default setting, an AVI file will appear in your IPView folder to save the recorded videos.

Note :

Please stop recording before changing any camera settings.

Alternatively you can click the Start icon as illustrated or use the hot key "F7".

How to Stop Recording

To stop recording with a camera, you must highlight the camera you wish to stop from the list view format. From the menu bar select **Camera > Stop**. The recording function will be stopped.

The other alternative is to right-click the icon located on the upper left corner of the screen under the viewing mode of either 1, 4, 9, 16 cameras; a pop-up menu will appear. Select **Stop**. The recording task will be stopped.

Note :


Alternatively you can click the Stop icon as illustrated or use the hot key "F9".

How to Adjust the Property Setting

To access the property menu, select **Camera > Property** from the main menu. A dialog box will appear which allows for Web Configuration settings and upgrading firmware. (Please refer to the appendix for detailed information.) The **Camera Property** dialog box will appear. Select the desired options from the tab selections to configure the camera as shown below.

General

Allows settings for the camera name, location and administrator information such as administrator ID and password. *Please refer to the Web Configuration section under **System Administration-System** for further details.*

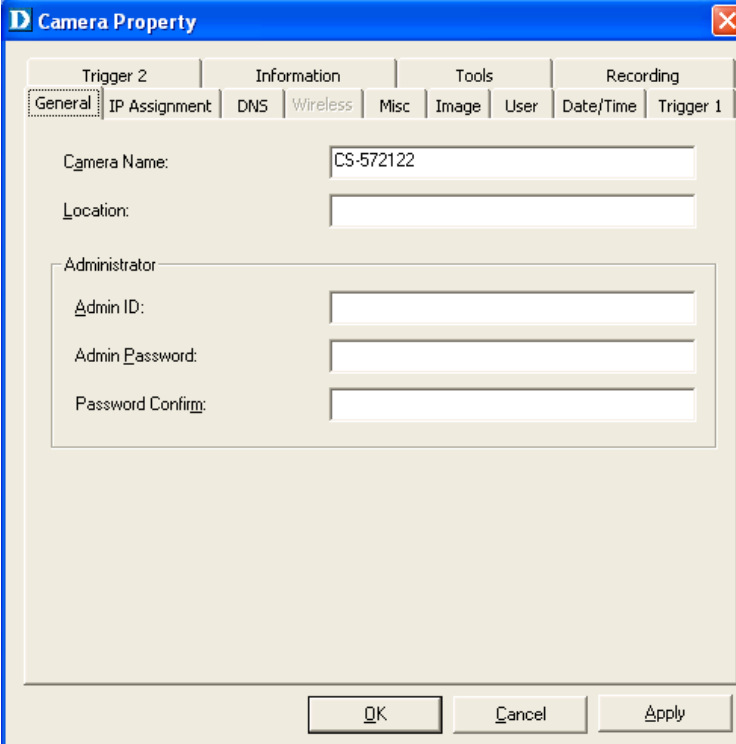

The screenshot shows a Windows-style dialog box titled "Camera Property" with a close button in the top right corner. The dialog has a tabbed interface with the following tabs: Trigger 2, Information, Tools, Recording, General (selected), IP Assignment, DNS, Wireless, Misc, Image, User, Date/Time, and Trigger 1. The "General" tab is active and contains the following fields:

- Camera Name: CS-572122
- Location: (empty text box)
- Administrator section (grouped in a box):
 - Admin ID: (empty text box)
 - Admin Password: (empty text box)
 - Password Confirm: (empty text box)

At the bottom of the dialog are three buttons: OK, Cancel, and Apply.

IP Assignment


There are two options: **Manually Assign** or **Assign Automatically Using**. Please refer to the Web Configuration section: **System Administration-System** for further details.

The screenshot shows the 'Camera Property' dialog box with the 'IP Assignment' tab selected. The dialog has a blue title bar with a close button. Below the title bar are four tabs: 'Trigger 2', 'Information', 'Tools', and 'Recording'. Under 'Information', there are sub-tabs: 'General', 'IP Assignment', 'DNS', 'Wireless', 'Misc', 'Image', 'User', 'Date/Time', and 'Trigger 1'. The 'IP Assignment' sub-tab is active. It contains two main sections: 'Manually Assign' (selected) and 'Automatic Assign'. The 'Manually Assign' section has three text boxes: 'IP Address' (192.168.0.20), 'Subnet Mask' (255.255.255.0), and 'Default Gateway' (192.168.0.1). The 'Automatic Assign' section has four radio buttons: 'BARP', 'BOOTP', 'DHCP', and 'PPPoE'. Below these are three text boxes: 'Service Name', 'User ID', and 'Password'. At the bottom are 'OK', 'Cancel', and 'Apply' buttons.

Section	Option	Value
Manually Assign	IP Address:	192.168.0.20
	Subnet Mask:	255.255.255.0
	Default Gateway:	192.168.0.1
Automatic Assign	BARP	<input type="radio"/>
	BOOTP	<input type="radio"/>
	DHCP	<input type="radio"/>
	PPPoE	<input type="radio"/>
Service Name:		
User ID:		
Password:		

DNS


DNS (Domain Name System) server is an Internet service that translates domain names into IP addresses. Enter at least one DNS IP Address. *Please refer to the Web Configuration section under **System Administration-System** for further details.*

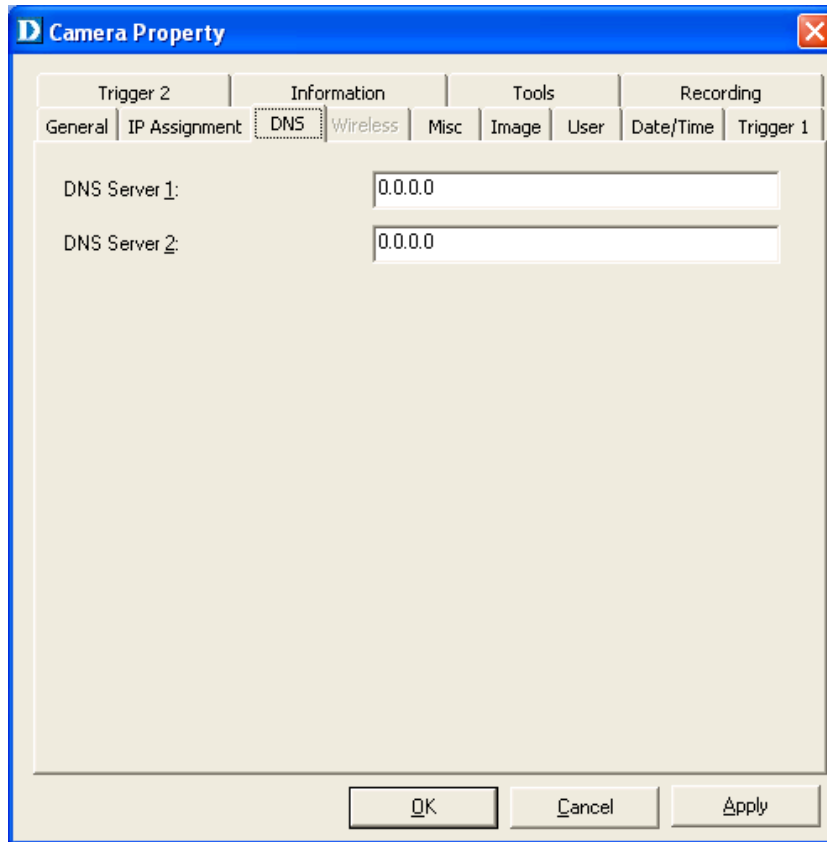

The image shows a screenshot of a software window titled "Camera Property". The window has a blue title bar with a close button (X) in the top right corner. Below the title bar is a tabbed interface with the following tabs: "Trigger 2", "Information", "Tools", and "Recording". Under the "Information" tab, there are sub-tabs: "General", "IP Assignment", "DNS", "Wireless", "Misc", "Image", "User", "Date/Time", and "Trigger 1". The "DNS" sub-tab is currently selected and highlighted with a dashed border. The main content area of the dialog contains two text input fields. The first is labeled "DNS Server 1:" and contains the text "0.0.0.0". The second is labeled "DNS Server 2:" and also contains the text "0.0.0.0". At the bottom of the dialog, there are three buttons: "OK", "Cancel", and "Apply".

Wireless

Allows settings for **Connection mode**, **Network name**, **Wireless Channel** and **WEP key**. Please see the *Web Configuration* section under **System Administration-System** for further details.

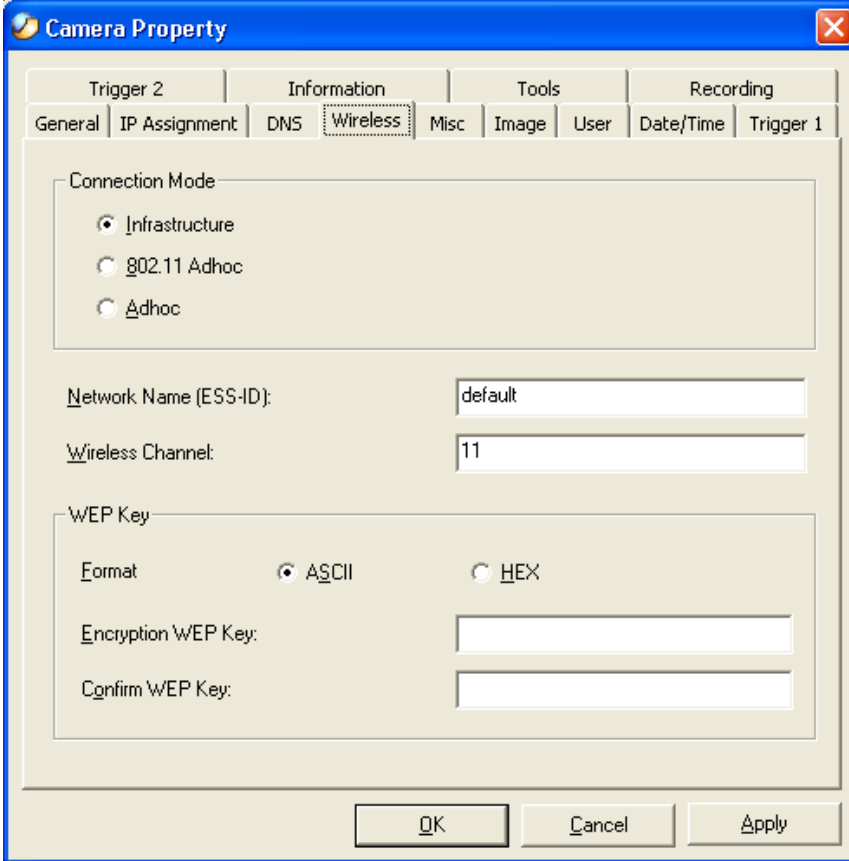

The screenshot shows the 'Camera Property' dialog box with the 'Wireless' tab selected. The dialog has a blue title bar and a close button in the top right corner. Below the title bar is a tabbed interface with the following tabs: Trigger 2, Information, Tools, Recording, General, IP Assignment, DNS, Wireless (selected), Misc, Image, User, Date/Time, and Trigger 1. The main content area is divided into three sections:

- Connection Mode:** Contains three radio buttons: Infrastructure, 802.11 Adhoc, and Adhoc.
- Network Name (ESS-ID):** A text input field containing the value 'default'.
- Wireless Channel:** A text input field containing the value '11'.
- WEP Key:** Contains two radio buttons for format: ASCII and HEX. Below these are two text input fields: 'Encryption WEP Key:' and 'Confirm WEP Key:'.

At the bottom of the dialog are three buttons: 'OK', 'Cancel', and 'Apply'.


Misc

Allows settings for LED Control, ActiveX control location, and second port. *Please refer to the Web Configuration section under **System Administration-System** for further details.*




Image

Provides the settings for the video image of the camera such as brightness, contrast, hue, resolution, compression, frame rate, and light freq. *Please refer to the Web Configuration section under **System Administration-Image** for further details.*

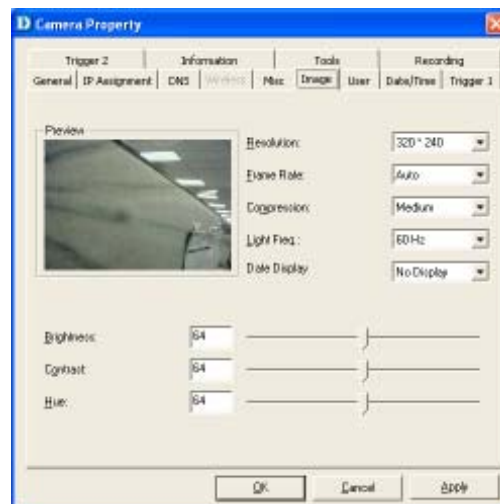

Users

Allows the system administrator to allow or deny user permission to monitor the camera from a remote site. The admin can **Add** or **Delete** user. *Please refer to the Web Configuration Setting under **System Administration-Users** for more detailed information.*

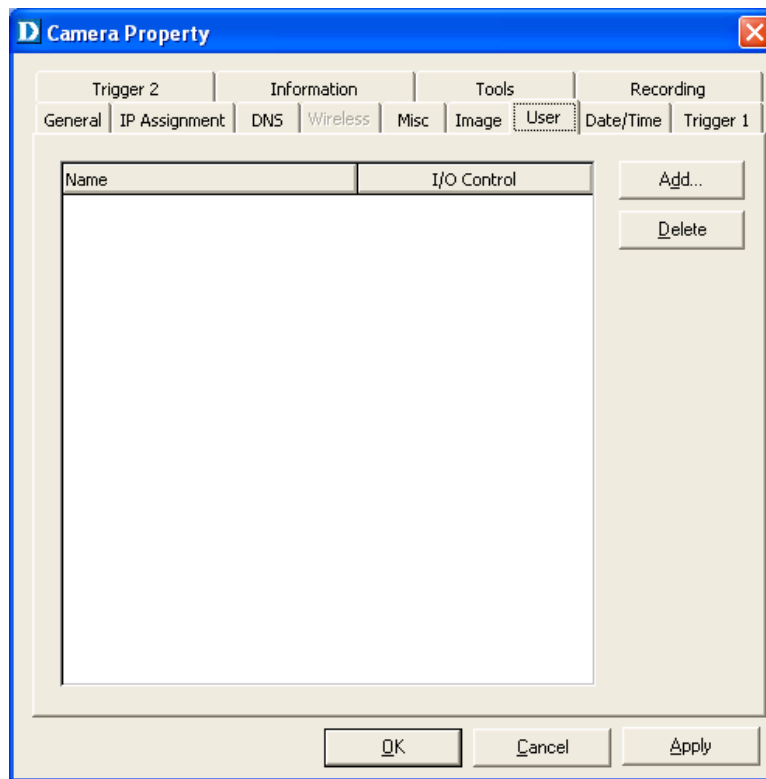

To add a user click on the **Add** icon and the **Add User** dialog box will appear. Enter the **User Name** and **Password** into the specific field. Select the I/O Output Control to give users the privilege of accessing the I/O Output Control.

To delete a user, select the user and click on the **Delete** icon.

Date/Time

Set the camera's time and date to provide correct time information to users who might be thousands of miles away in a remote site by selecting **Synchronized with Time Server** or **Set Manually**. Please refer to the *Web Configuration* section under **System Administration-TimeDate** for further details.

The screenshot shows the 'Camera Property' dialog box with the 'Date/Time' tab selected. The 'Synchronized with Time Server' option is unselected, and the 'Set Manually' option is selected. The 'Date' field is set to 2002-1-1 (YYYY-MM-DD) and the 'Time' field is set to 3:14:32 (HH:MM:SS). The 'Time Zone' is set to +0. The dialog box has 'OK', 'Cancel', and 'Apply' buttons at the bottom.

Trigger 1

Contains commands for setting the Input/Output Trigger connectors providing the physical interface for 1 digital output and 1 digital input that is used for connecting a diversity of external alarm devices to the camera such as IR-Sensor and alarm relay. Please refer to the *Web Configuration* section under **System Administration – Trigger** for further details.

The screenshot shows the 'Camera Property' dialog box with the 'Trigger 1' tab selected. The 'Send e-mail attached with image' option is unselected. The 'SMTP Server Address', 'Sender E-Mail Address', and 'Receiver E-Mail Address' fields are empty. The 'Sending Interval' and 'Sending Times' fields are set to 0. The 'Output 1 Times' and 'Output 2 Times' fields are also set to 0. The dialog box has 'OK', 'Cancel', and 'Apply' buttons at the bottom.

Trigger 2

Contains commands for setting the **Input/Output Trigger** connectors that provide the physical interface for 1 digital output and 1 digital input, used for connecting a diversity of external alarm devices to the camera such as IR-Sensor and alarm relay. *Please refer to the Web Configuration section under **System Administration – Trigger** for further details.*

The screenshot shows the 'Camera Property' dialog box with the 'Trigger 2' tab selected. The 'Information' sub-tab is active, displaying the following fields:

- Send e-mail attached with image
- SMTP Server Address: [Text Field]
- Sender E-Mail Address: [Text Field]
- Receiver E-Mail Address: [Text Field]
- Sending Interval: [Text Field] (value: 0)
- Sending Times: [Text Field] (value: 0)
- Trigger I/O Output
- Output 1 Time: [Text Field] (value: 0)
- Output 2 Time: [Text Field] (value: 0)

Buttons at the bottom: OK, Cancel, Apply.

Information

Displays information about the camera such as the model, firmware version, MAC address, and IP address. *Please refer to the Web Configuration section under **System Administration - Information** for further details.*


The screenshot shows the 'Camera Property' dialog box with the 'Trigger 2' tab selected. The 'Information' sub-tab is active, displaying the following information:

Model:	DC5-1000
Firmware Version:	1.27
MAC Address:	00 09 5D 57 21 22
IP Address:	192.168.0.20

Buttons at the bottom: OK, Cancel, Apply.

Tools

Contains commands to reset the camera and update firmware. Please refer to the Web Configuration section under **System Administration - Tools** for further details on reset.

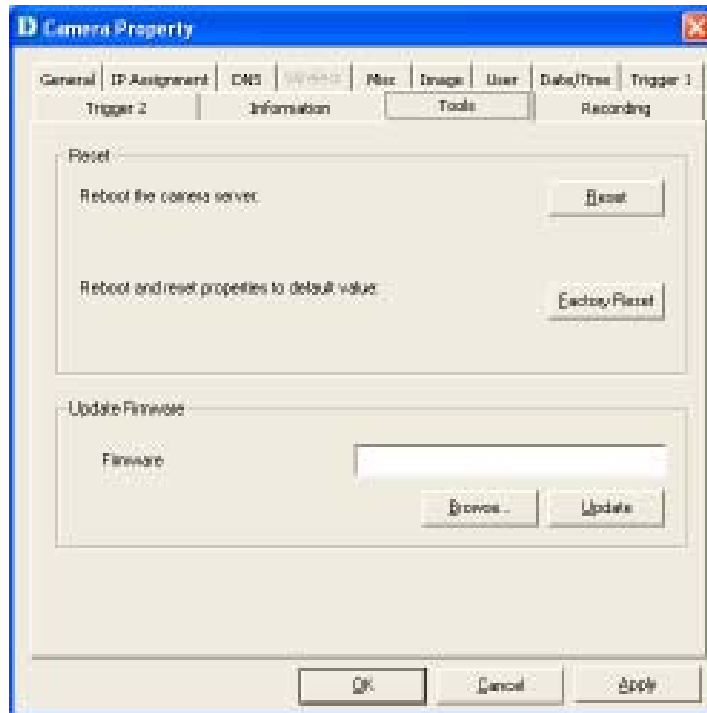

Upgrade Firmware

You can update the firmware using the *IPView* application. With *IPView* running, select **Camera > Properties** and the **Camera Property** dialog box will appear. Select the **Tools** tab and enter the full path of the firmware binary file name in the *Update Firmware* field or you can click on the **Browse** button to select the file. Once the firmware file is entered click on the **Update** button to proceed with the update process. Once completed, click **OK**.




Warning


The download firmware procedure cannot be interrupted. If the network connection is broken during the download procedure it might possibly cause serious damage to the Internet Camera.

Recording

The software will create a folder in the **Recording File Path** specified and record the video images with the file name by date and time. Multiple file paths can be specified to store your video images. The current path where recorded images are being stored is designated as “Working”. Once this path has reached full capacity, the images will then be stored in the next designated file path.

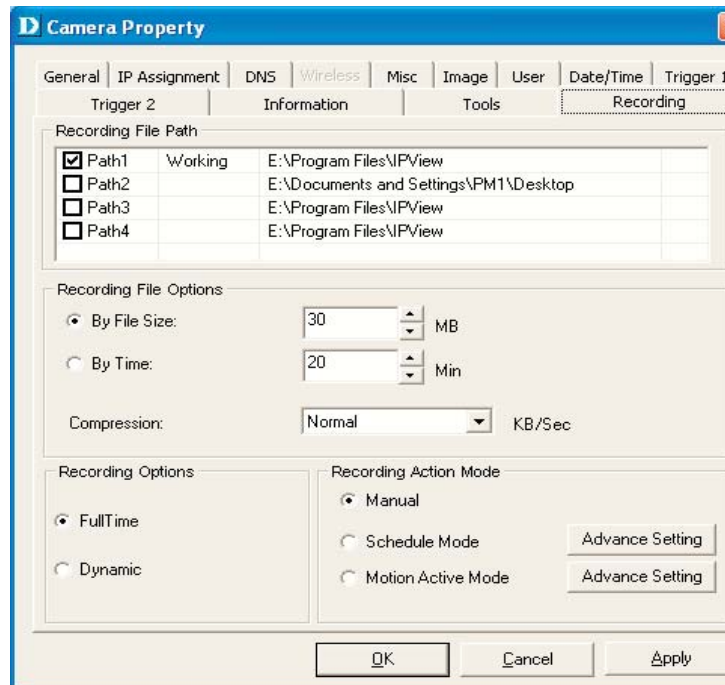

To change file paths, highlight the file path and double-click to select a new drive/directory to store your video images. This screen will appear below. Click on **Browse** to select a drive/directory, then click on **OK** to save your changes. Place a check mark next to your new file path to enable the drive/directory for use.

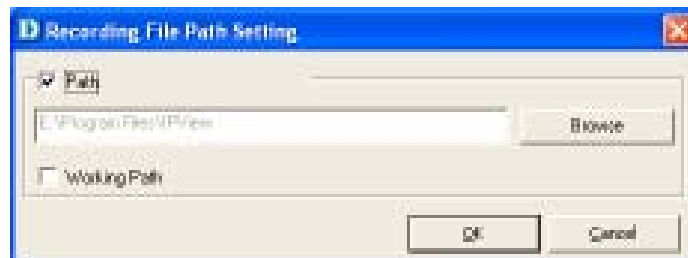

Recording File Options

You can adjust the maximum file size by clicking on **By File Size** from the **Recording File Options** field. (The default size is 50MB.) If the recorded video files reach the file size allocated, video images will be recorded into another file automatically. Click on **By Time** in **Recording Options** if you wish to record to a file for a specified time period. Once the time period specified is reached, video images will be recorded into a new file automatically.

Recording Options

Selecting Full-Time will enable continuous recording of every single frame of your video images. Selecting Dynamic will still enable continuous recording of frames, but not all of your frames will be saved to your hard disk drive. This option will save space on your hard drive.


Be sure to click Apply to save your settings, then click OK to exit this screen.

Note:


If you are using Windows Media Viewer to view your recorded videos, make sure that you have the most up-to-date version in order to view the videos correctly.

Recording Action Mode-Schedule Mode

Allows customized settings to start recording specified by date or by week. Select **Schedule Mode**, then click on **Advanced Settings** to access the schedule menu.

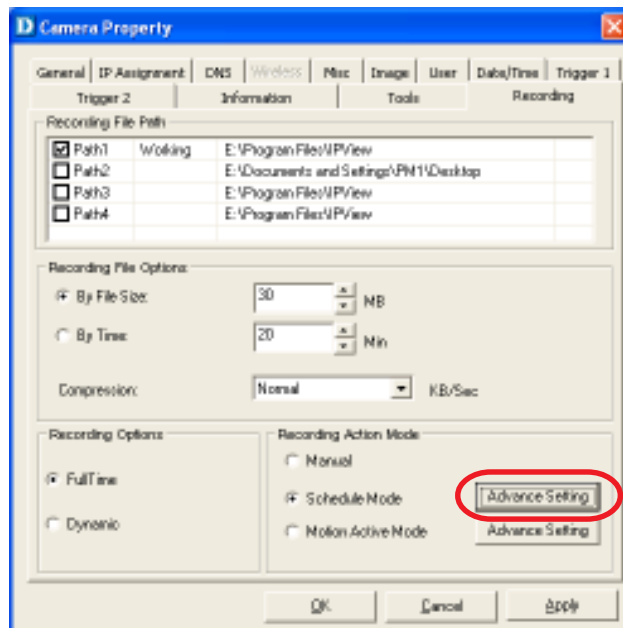


You will see the following screen. Select **By Date** and enter in the dates, **Stop**, and **Start** Times. The camera will start to record according to the specified date and time period entered. Select **By Week** to indicate specific days to record and the time period.

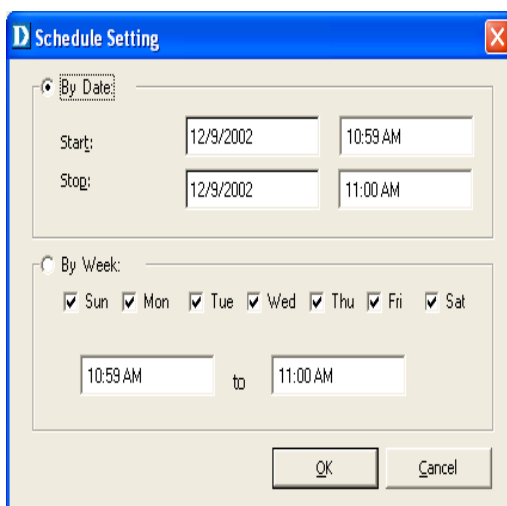


Recording Action Mode-MotionActive Mode

Select **MotionActive Mode** to set up motion detection for the camera. Click on **Advanced Setting** to access the motion detection menu.

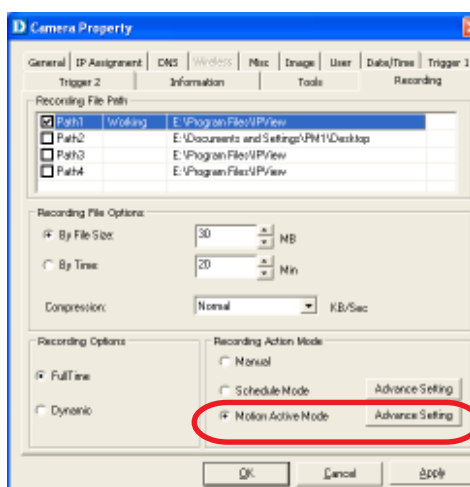


This new screen will appear enabling you to set motion detection properties. To enable motion detection, place a check mark in the box preceding **Motion Detection**. The **Sensitivity Level** determines how sensitive your camera will be in detecting motion. Click on **Alarm Beep** to enable audio notification once motion is detected. If you wish to enable email notification once your camera has detected motion, select the send email option and enter in the appropriate mail server address. Click on **OK** to exit this menu and save your changes.

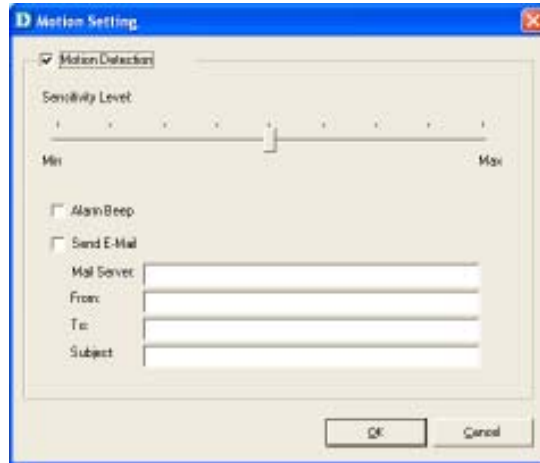


Motion Detection (List View)

Once Motion Detection is enabled in the Recording Menu, in the list view for the camera, a red circle preceding the camera name indicates that the camera is recording if it has detected motion. The Camera will continue to record for 10 seconds after it has stopped detecting motion, then will stop recording. A new .AVI file will appear in your specified recording folder each time the camera is triggered to record. In the Camera menu, a check mark in front of **Enable Motion** indicates that the camera is set to detect motion. You can manually disable motion detection by clicking on **Stop** and clicking on **Enable Motion**, which will remove the check mark.

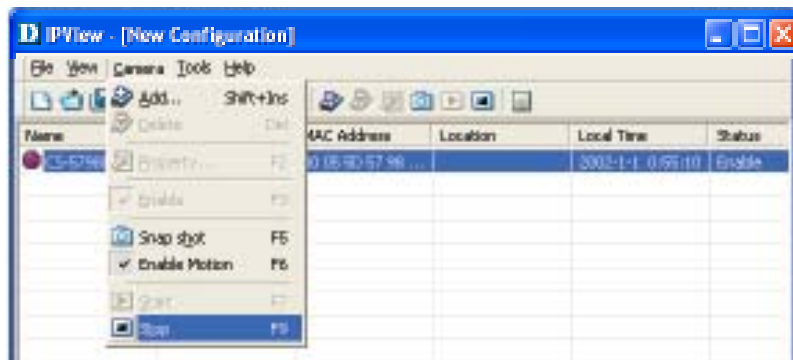

To re-enable motion detection, simply click on **Enable Motion** and a check mark will appear to indicate that the camera is now set to record when it detects motion.

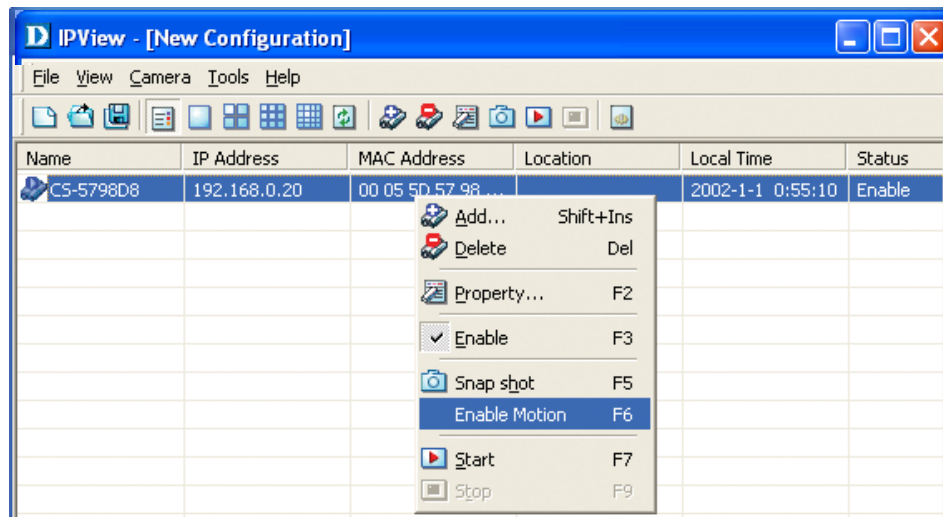


Menu Bar

The menu bar provides easier access for users to navigate IPView with different selections along with hot key capabilities as follows:


Menu Bar - File

File on the menu bar contains **New**, **Open**, **Save**, **Save As** and **Exit** for users to create new files, open existing files, save files, and exit IPView as depicted below.

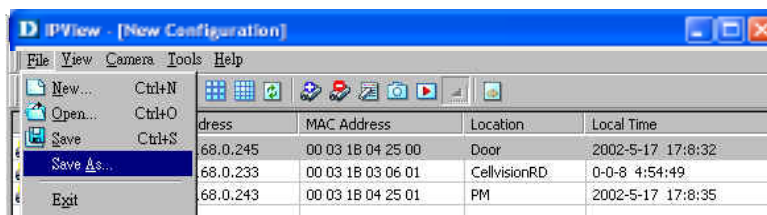


Menu Bar – View

View on the menu bar provides users with management capabilities for **Columns**, **List**, **Camera** and **Refresh**. You can view the **Camera** in **1 Camera**, **4 Cameras**, **9 Cameras**, or **16 Cameras** mode. The **View** menu bar is pictured below.

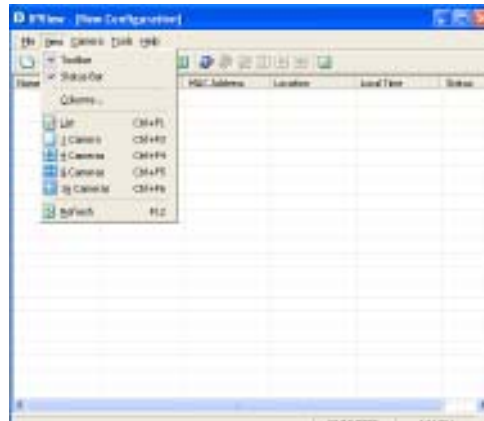

Columns

When **Columns** is launched, a dialog box will appear displaying the **Column Settings**. Select the columns that you wish to appear in *List View* as illustrated below.

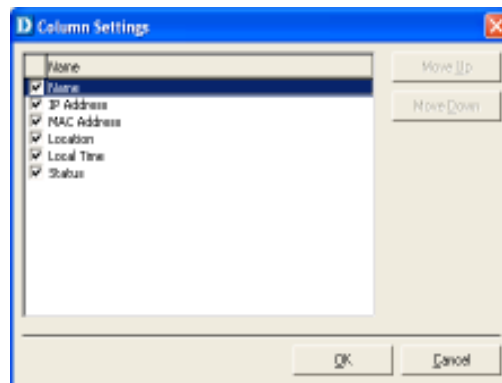


Viewing Format

You can view the format in **List** view. The **List** viewing format allows easy management and control of each camera.

List View

All the cameras and their properties, such as the camera name, IP address, user name, and location, will be displayed in the list view.

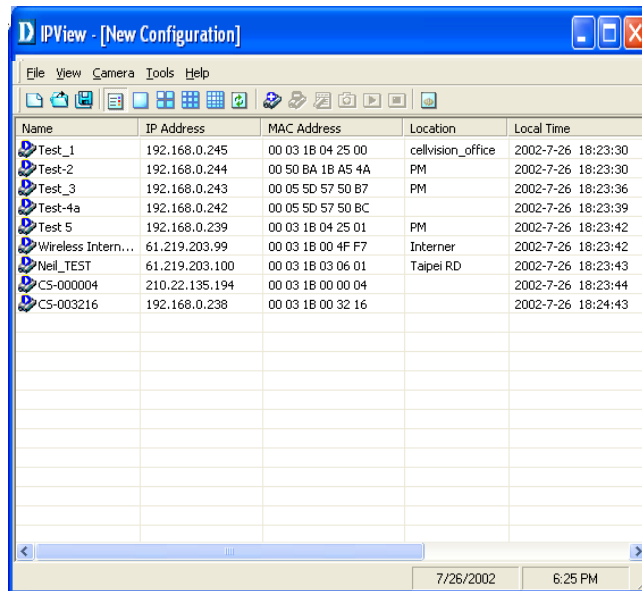

Name	IP Address	MAC Address	Location	Local Time
Test_1	192.168.0.245	00 03 18 04 25 00	cellvision_office	2002-7-26 18:23:30
Test-2	192.168.0.244	00 50 BA 1B A5 4A	PM	2002-7-26 18:23:30
Test_3	192.168.0.243	00 05 5D 57 50 B7	PM	2002-7-26 18:23:36
Test-4a	192.168.0.242	00 05 5D 57 50 BC		2002-7-26 18:23:39
Test 5	192.168.0.239	00 03 18 04 25 01	PM	2002-7-26 18:23:42
Wireless Intern...	61.219.203.99	00 03 18 00 4F F7	Internet	2002-7-26 18:23:42
Neil_TEST	61.219.203.100	00 03 18 03 06 01	Taipei RD	2002-7-26 18:23:43
CS-000004	210.22.135.194	00 03 18 00 00 04		2002-7-26 18:23:44
CS-003216	192.168.0.238	00 03 18 00 32 16		2002-7-26 18:24:43

Note:


Right click on any camera to bring up a context sensitive menu of actions you can apply to the selected camera.

Double-clicking on the desired camera will bring up the **Property** dialog box.

You can click the **Refresh** icon to update the camera list view.

Menu Bar - Camera

Camera on the menu bar provides options to manage the camera. **Add** up to 16 additional Cameras for viewing. The **Camera** menu also allows you to **Delete** a camera, manage the **Property**, **Enable** real timevideo capture, take a **Snap shot** image, and **Enable Motion** for Motion Detection. The menu bar is illustrated below:

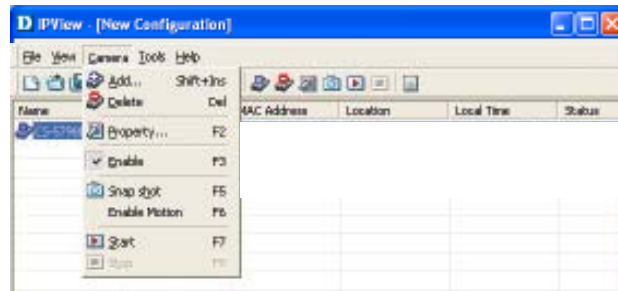


Enable Function

By default the video image is enabled. There will be a **check** next to the **Enable** command to show that the Enable function is working. To disable the real-time image select **Camera > Enable** and the real-time video image will stop and shutdown.


Menu Bar - Tools

Tools on the menu bar allows you to change account information and system configuration. From the menu bar, select **Tools> Options**.

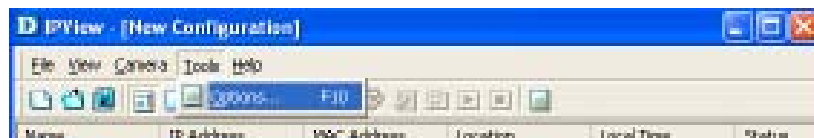


Account

The account menu is for administrators to change user name and password.

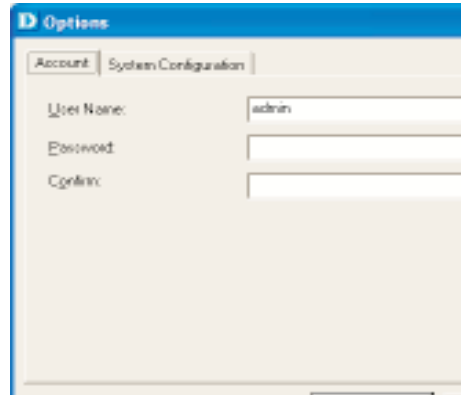


System Configuration


This menu allows you to set overwrite options to overwrite old recorded files with new recorded files. Check the **Load Last Configuration When Program Starts** to load all your configured settings each time you run IPView. **It is highly recommended that you select this option to save your camera settings in IPView.**

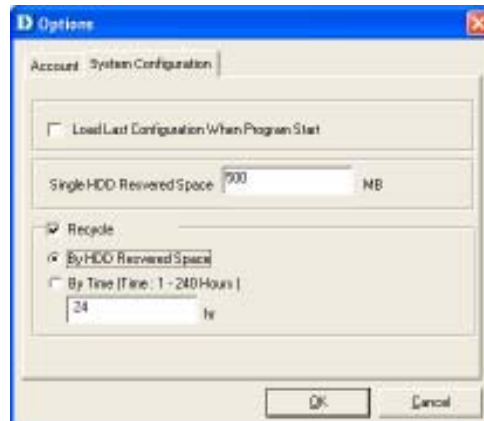

In order to allow old video files to be overwritten and replaced by new recorded files, place a check mark in the **Recycle** Box. By clicking on **By HDD Reserved Space**, new files will overwrite old files once the disk drive reaches the specified drive space in the **Single HDD Reserved Space** field. You can reserve 500MB to 5GB HDD for the program.

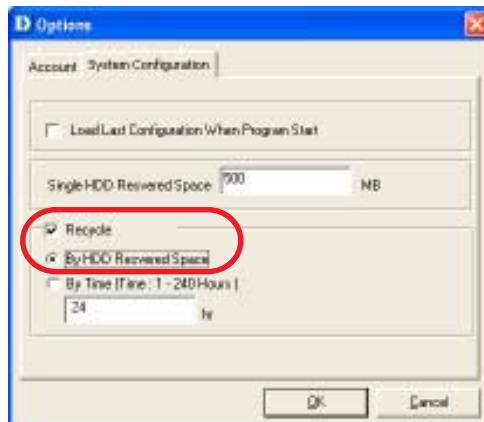


Click on **By Time (Time: 1-240 Hours)** to overwrite old files with new files once the time frame that you specify has been reached.

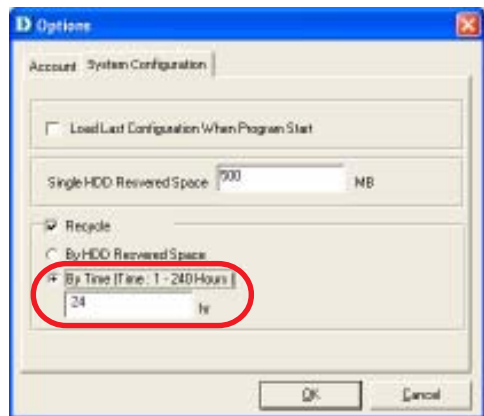





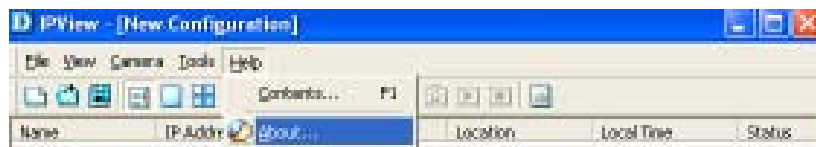











Menu Bar - Help

Under **Help** on the menu bar you can choose **Contents** or **About** to learn more about the camera.




IPView Icon Description

-  Open a new file. The hot key is **Ctrl+N**.
-  Open an existing file. The hot key is **Ctrl+O**.
-  Save a file. The hot key is **Ctrl+S**.
-  List view format. The hot key is **Ctrl+F1**.
-  1 Camera view format. The hot key is **Ctrl+F3**.
-  4 Camera view format. The hot key is **Ctrl+F4**.
-  9 Camera view format. The hot key is **Ctrl+F5**.
-  16 Camera view format. The hot key is **Ctrl+F6**.
-  Refresh IPView application. The hot key is **F12**.
-  Add a camera. The hot key is **Shift+Ins**.
-  Delete a camera. The hot key is **Del**.
-  Property setting to configure the camera. The hot key is **F2**.
-  Snap shot to capture a single still image. The hot key is **F5**.
-  Start recording video image. Alternatively the hot key is **F7**.
-  Stop recording video image. Alternatively the hot key is **F9**.
-  Options to modify the User Name and Password for IPView.
The hot key is **F10**.

Context Sensitive Menu

In *List View* format, highlight a camera and right-click to bring up a context sensitive menu for features such as **Add**, **Delete**, **Property**, **Enable**, and **Snap shot**, **Enable Motion**, and **Start/Stop** recordings.

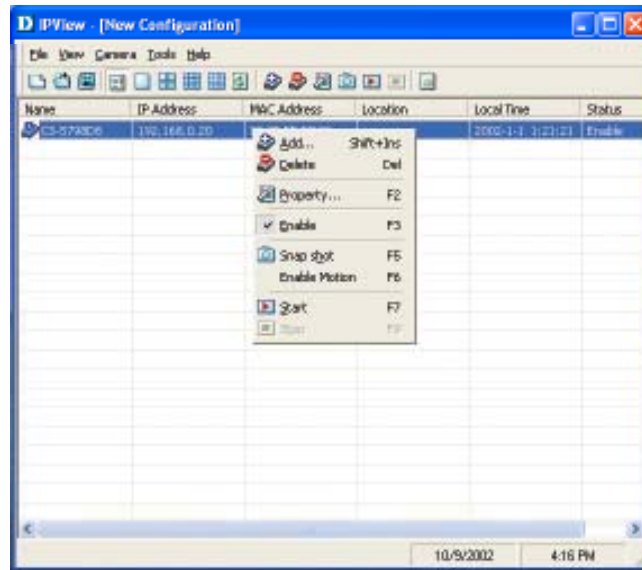


In *View mode* format click on the icon located on the upper left corner of the screen and a case sensitive menu will appear as illustrated below.



These features will be available: **Enable**, **Rotate Right**, **Rotate Left**, **Snap Shot**, **Enable Motion**, **Start**, **List**, **1 Camera**, **4 Cameras**, **9 Cameras**, **16 Cameras**, **Previous Page** and **Next Page**.


Uninstall IPView Application

Click on windows **Start Menu / Programs / IPView / Uninstall IPView**. A new prompt screen will be displayed like the one below confirming the removal.

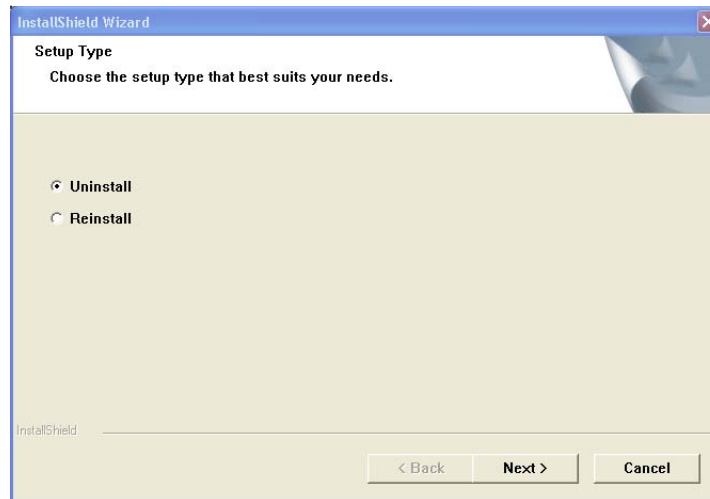


Choose the option that you want and click **Next** to continue the process or click on **Cancel** to reject the uninstall process.

After you click on **Next**, a **Confirm Uninstall** dialog box will appear. Click **OK** to continue the process.

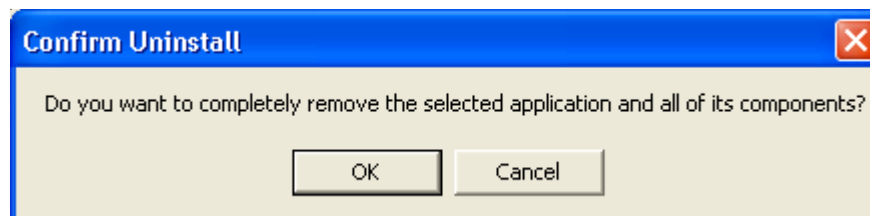

The InstallShield Wizard prompt will appear. Click **Finish** to complete the uninstallation procedure.

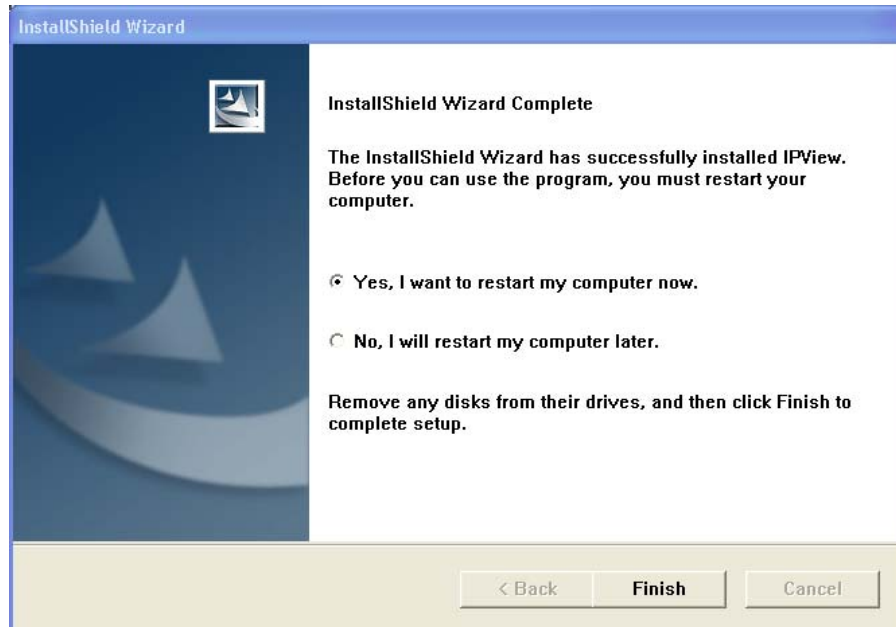

Using the Internet Camera as a Security System



D-Link's IP Camera System is one of the most cost effective security solutions today. Both the DCS-1000 Wired model and DCS-1000W Wired/Wireless model have input/output controls for interfacing with security systems.

On the back of the Camera you will find an 8-position connector. This connector has 2 input triggers for security sensors and 2 output triggers for security alarms.

Security sensors for input are available as Passive (low-current/low voltage) sensors or Active (powered) sensors.

Because of power limitations of the DCS cameras and its compatibility with Power over Ethernet standards, the sensor power requirement must be obeyed for proper operation. We have listed Passive and Active components that will interface with the DCS family of Cameras. Passive components must not exceed 5V 100mA. Active components must be self-powered by an external power source.

As an example for a typical installation is shown below: a D-Link DCS-1000 was purchased from www.dlinkshop.com, the security equipment was purchased from www.smarthome.com, and some cable accessories purchased from a local hardware store.

Materials


- DCS-1000/W
- 2 Ethernet Cables & Ethernet Switch/Internet Router
- An Ethernet based PC to configure system
- Internet Name Server and E-Mail Server to send capture information
- 10FT. 24Gauge
- 1 light current power distribution block for 12V power
- 30W Weatherproof Siren
- High Sensitivity DPDT relay (allows 5V camera to turn on 12V siren)
- Mini-Magnetic Contact Switch (commonly used for doors or windows)
- PIR Motion Detector

You will need some simple tools like wire cutters/strippers and an appropriate screwdriver for mounting the distribution block setup.

Everything less the camera costs about \$97 US Dollars including shipping.

Basic Hardware Set-up Diagram

The diagram below shows the hardware configuration for 1 Active Sensor (PIR Motion Sensor), 1 Passive Sensor (Magnetic Switch), and 1 output (For Relay) for a siren.

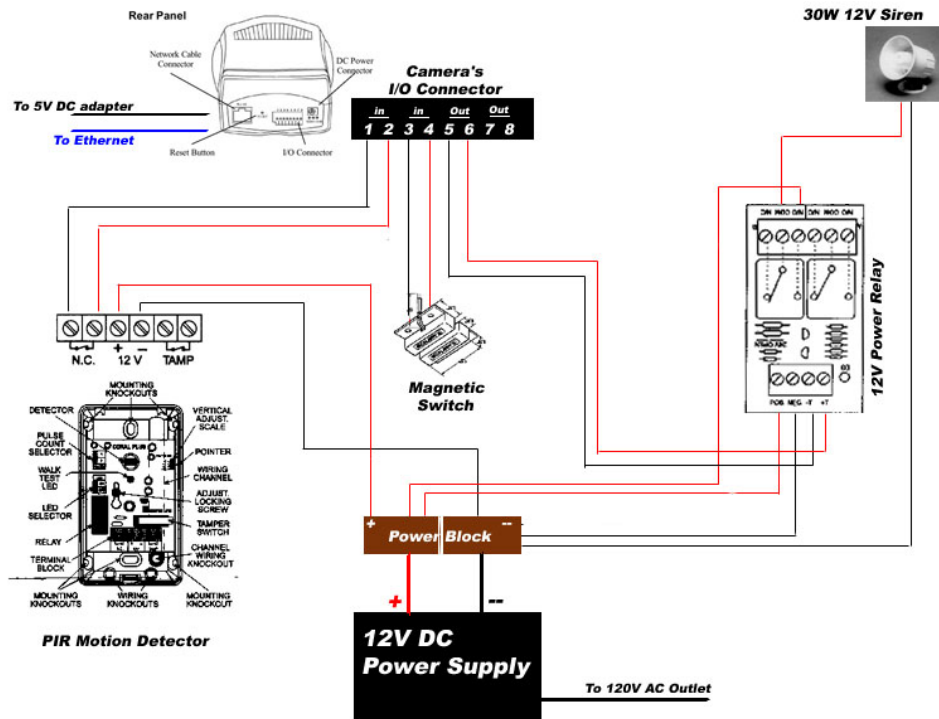

Passive Component Notes

Only simple magnetic or contact switches can be used for passive components. This limitation is because the camera only supplies 5V and less than 100mA current to those circuits. Distance for passive components is limited by a viewable camera range of about 25 Ft using 26GA wire.

Active Component Notes

A separate power supply is needed for these devices. In order to choose the proper power supply, remember that the total current draw by all the components cannot exceed the Max current supplied by the power supply.

Example

Our PIR Motion Detector = 17 mA = .017A

Our Relay = 60 mA = .06A

Siren = 200mA = .20A


Total : .277A

Purchase a 12V DC 1.2A Max power adapter to cover all active sensors and the siren.

Camera Configuration

Follow the instructions for setting up the camera for either wired/wireless. If this is a home and the camera is behind an Internet router, additional set-up notes for your router can be found on www.dlink.com.

Once logged into the camera, on the main menu, click/select **Trigger** and the following screen will appear.

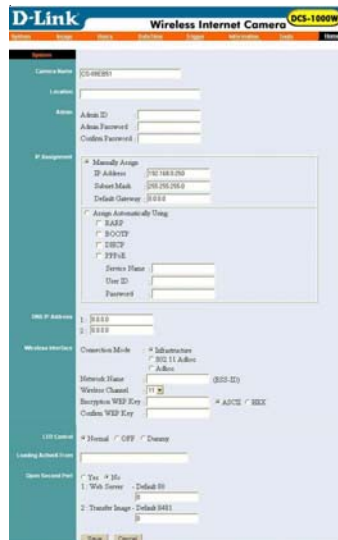

The screenshot shows the configuration interface for a D-Link Wireless Internet Camera (DCS-1009W). The page is titled "Trigger" and contains several sections for configuring input and output triggers. The "Input" section includes fields for "Camera Name" (DCS-1009W), "Location", "Admin ID", "Admin Password", and "Custom Password". The "IP Assignment" section has options for "Manually Assign" (with IP Address, Subnet Mask, and Default Gateway) and "Assign Automatically Using" (with protocols like DHCP, BOOTP, DHCP, and PPPoE, plus fields for Service Name, User ID, and Password). The "SMTP Address" section has two input fields. The "Wireless Interface" section includes "Connection Mode" (Substructure, IP Address, or Admin), "Manual IP" (DHCP), "Wireless Channel" (11), "Receive WEP Key" (ASCII or HEX), and "Custom WEP Key". The "I/O Control" section has radio buttons for "Normal", "OFF", and "Change". The "Linking Action Time" section has a radio button for "Yes" and "No". The "Open Interval Time" section has two rows for "1: Web Server" and "2: Transfer Image", each with a "Default" value and an input field. At the bottom are "Save" and "Cancel" buttons.

These fields control Input Trigger 1 and Trigger 2. Each Input trigger can trigger either or both Output triggers.

SMTP Server Address: Name or IP address of a Mail Server that the camera can use to send images by e-mail

Sender E-Mail: Name of the Camera who sent the mail

Receiver E-Mail: Name of the person to receive the pictures when the sensors are activated

Sending Interval: The time between additional sequences of pictures are taken when the sensors are activated

Sending Times: The number of times the camera takes additional sequences of pictures based on Sending Interval.

Trigger I/O: Enable Output trigger for the specified input trigger

Output # Time: How long the output trigger is activated if the sensor is activated. (ie. How long should the siren ring?)

INPUT TRIGGER RESPONSE NOTES

The camera will take a sequence of pictures and the output trigger is activated when the sensor is triggered. Example: The magnetic switch is opened, a sequence is sent and siren goes off. The switch is then closed, an additional sequence is sent and the alarm goes off. The camera is designed this way so if there is an intrusion, the intrusion is detected if the intruder simply opens and closes the door.

Additional Component Listing for use with the Internet Camera

All components listed below can be found at www.smarthome.com

Passive Components

Glass Break Sensor PN: 5150w - Sentrol Inc. Any contact switch or pressure switch not exceeding 100mW current draw.

Examples at <http://www.smarthome.com/seccontacts.html>

Active Components

Coral Plus Temperature Compensated PIR Detector - Visonic Ltd. Duet Dual Microwave/IR Motion Detector - Visonic Ltd. Bravo 6 Dual PIR Detector - DSC Security Products. Any active security sensor that uses external power and a separate normally closed N/C circuit for detection. Examples at <http://www.smarthome.com/secpirmotion.html>

Power and Relay Components

ELK Products Inc. ELK-924 Single 12V to 120V relay switch. DVE Power Supply 12V 1.2A. More can be found at <http://www.smarthome.com/powersupply.html>

Alarm Components

Universal SS30 30W 8Ohm Siren More visual and audible alarms can be found at <http://www.smarthome.com>

Appendix

Frequently Asked Questions

Internet Camera Features

Q: What is an Internet Camera?

A: The Internet Camera is a standalone system connecting directly to an Ethernet or Fast Ethernet network and supported by the wireless transmission based on the IEEE 802.11b standard. It is different from the conventional PC Camera, the Internet Camera is an all-in-one system with built-in CPU and web-based solutions providing a low cost solution that can transmit high quality video images for monitoring. The Internet Camera can be managed remotely, accessed and controlled from any PC/Notebook over the Intranet or Internet via a web browser.

Q: What is the maximum number of users that can be allowed to access DCS-1000W simultaneously?

A: Maximum number of users that can log onto the Internet Camera at the same time is 64. Please keep in mind the overall performance of the transmission speed will slow down when many users are logged on.

Q: What algorithm is used to compress the digital image?

A: The Internet Camera utilizes JPEG image compression technology providing high quality images. JPEG is a standard for image compression and can be applied to various web browser and application software without the need to install extra software.

Q: Can I change the wireless antenna attached to the Internet Camera?

A: The wireless antenna can be changed for a variety of reasons such as extending the wireless transmission range, however, please consult authorized distributors before attempting as the connectors must be SMA connector type.

Q: Can I capture still images from the Internet Camera?

A: Yes you are able to capture still images with the snapshot function from the IPView application supplied with the Internet Camera CD-ROM. You may also use the first page that shows up with you type in the IP address of the camera. When viewing this page, press the "refresh" button on your web browser to update the image. *Please refer to the User's Guide for detailed information.*

Q: What is the wireless transmission range for the Internet Camera?

A: Generally the wireless distance can go up to 100 meters indoors and up to 300 meters outdoors. The range is limited by the number of walls, ceilings, or other objects that the wireless signals must pass through. Typical ranges vary depends on the types of materials and background Radio Frequency (RF) noise in your home or business and the configuration setting of your network environment.

Internet Camera Installation

Q: Can the Internet Camera be used outdoors?

A: The Internet Camera is not weatherproof. It needs to be equipped with a weatherproof case to be used outdoors and it is not recommended.

Q: What network cabling is required for the Internet Camera?

A: The Internet Camera uses Category 5 UTP cable allowing 10 Base-T and 100 Base-T networking.

Q: Can the Internet Camera be setup as a PC-cam on the computer?

A: No, the Internet Camera is used only on Ethernet and Fast Ethernet network and supported by wireless transmission. The D-Link DSB-C110, DSB-C310 can be used as a PC Camera (Webcam).

Q: Can the Internet Camera be connected on the network if it consists of only private IP addresses?

A: The Internet Camera can be connected to a LAN with private IP addresses.

Q: Can the Internet Camera be installed and work if a firewall exists on the network?

A: If a firewall exists on the network, port 80 is open for ordinary data communication. However, since Internet Camera transmits image data, the default port 8481 is also required. Therefore, it is necessary to open port 8481 of the network for remote users to access the Internet Camera.

Troubleshooting

Q: I cannot access the Internet Camera from a web browser

A1: The possible cause might be the IP Address for the Internet Camera is already being used by another device. To correct the possible problem, you

need to first disconnect the Internet Camera from the network. Then run the PING utility (follow the instructions in *Appendix B - PING Your IP Address*.)

A2: Another possible reason is the IP Address is located on a different subnet. To fix the problem, run the PING utility (follow the instructions in Appendix B - PING Your IP Address). If the utility returns “no response” or similar, the finding is probably correct, then you should proceed as follows:

In Windows 98SE, 2000, check that the IP Address of the Internet Camera is within the same subnet as your workstation.

- Click **Start, Setting, Control Panel**, and the **Network** icon.
- Select TCP/IP from the **Network** dialog box and from the **TCP/IP Properties** dialog box click on **Specify an IP address**.
- If the Internet Camera is situated on a different subnet than your workstation, you will not be able to set the IP address from this workstation. To verify make sure the first 3 sections of the IP address of the Internet Camera corresponds to the first 3 sections of the workstation. Therefore the IP address of the Internet Camera must be set from a workstation on the same subnet.

A3: Other possible problems might be due to the network cable. Try replacing your network cable. Test the network interface of the product by connecting a local computer to the unit, utilizing a standard Crossover (hub to hub) Cable. If the problem is not solved the Internet Camera might be faulty.

Q: Why does the Power LED not light up constantly?

A: The power supply used might be at fault. Confirm that you are using the provided power supply, which is DC 5V, for the Internet Camera and verify that the power supply is well connected.

Q: Why does the LAN/WLAN LED not light up properly?

A1: There might be a problem with the network cable. To confirm that the cables are working, PING the address of a know device on the network. If the cabling is OK and your network is reachable, you should receive a reply similar to the following (...bytes = 32 time = 2 ms).

A2: The network device utilized by the Internet Camera is not functioning properly, such as hubs or switches. Confirm the power for the devices are well connected and functioning properly.

A3: The wireless connection might be at fault. In ad-hoc mode make sure the Internet Camera wireless channel and ESS-ID is set to match the PC/Notebook wireless channel and ESS-ID for direct communication. Since The Internet Camera ad-hoc mode supports two modes (802.11 ad-hoc mode and proprietary ad-hoc mode), make sure that you are using the same mode on each device. If they are not the same, the camera will not be accessible.

Under infrastructure mode make sure the ESS-ID on the PC/Notebook and the Internet Camera must match with the Access Point's ESS-ID.

Q: Why does the Internet Camera work locally but not externally?

A1: Might be caused from the firewall protection. Check the Internet firewall with your system administrator. The firewall may need to have some settings changed in order for the Internet Camera to be accessible outside your local LAN.

A2: Make sure that the Internet Camera isn't conflicting with any web server you may have running on your network.

A3: The default router setting might be a possible reason. Check that the configuration of the router settings allow the Internet Camera to be accessed outside your local LAN.

Q: Why does a series of broad vertical white line appear through out the image?

A: It could be that the CMOS sensor has become overloaded when it has been exposed to bright lights such as direct exposure to sunlight or halogen lights. Reposition the Internet Camera into a more shaded area immediately as prolonged exposure to bright lights will damage the CMOS sensor.

Q: The focus on the Internet Camera is bad, how can I correct it?

A1: Adjust the Internet Camera focus manually as described in "Adjusting the Internet Camera Focus" in the Appendix section of this manual.

A2: If you have previously changed the supplied CS-type lens, you may have unintentionally installed a C-type lens without fitting the adaptor first.

Q: Noisy images occur. How can I solve the problem?

A1: The video images might be noisy if the Internet Camera is used in a very low light environment. To solve this issue you need more lighting.

A2: There might be wireless transmission interference. Make sure there are no other wireless devices on the network that will affect the wireless transmission.

Q: The images is of poor quality, how can I improve the image quality?

A1: Make sure that your computers display properties are set to at least 15-bit color. Using 16 or 256 colors on your computer will produce dithering artifacts in the image, making the image look as if it has bad quality.

A2: The configuration on the Internet Camera image display is incorrect. Through the Web Configuration Image section of the web management you need to adjust the image related parameter for improve images such as brightness, contrast, hue and light frequency. Please refer to the Web Configuration section for detail information.

Q: There are no images available through the web browser?

A1: The ActiveX might be disabled. If you are viewing the images from Internet Explorer make sure ActiveX has been enabled in the Internet Options menu. Alternatively, you can use the Java Applet for viewing the required images.

A2: If you are using Windows XP, please make sure that you have downloaded Java and installed it properly.

A3: Make sure that your web browser supports Java. If you are using Internet Explorer or Netscape Navigator with a version number of lower than 4, then you will need to upgrade your web browser software in order to view the streaming video transmitted by the Internet Camera.

How to PING Your IP Address

The PING (Packet Internet Groper) command can determine whether a specific IP address is accessible by sending a packet to the specific address and waiting for a reply. It can also provide a very useful tool to confirm if the IP address conflicts with Internet Camera over the network.

Follow the step-by-step procedure below to utilize the PING command but first you must disconnect Internet Camera from the network.

Start a DOS window.

Type ping x.x.x.x, where x.x.x.x is the IP address of the Internet Camera.

The replies, as illustrated below, will provide an explanation to the problems.

I/O Connector

I/O Connector Definition for the Internet Camera

An 8-pole connector is provided for auxiliary I/O connections to the Internet Camera.


The I/O connector provides the physical interface for 2 digital outputs and 2 digital inputs that are used for connecting a diversity of external alarm devices to the Internet Camera such as IR-Sensor and alarm relay.

The digital input is used for connecting external alarm devices and once triggered images will be taken and e-mailed.

The supported transistor output can give a maximum of DC 5V to the externally connected alarm devices and once triggered the current will activate the devices.

In 11 In 12	In 11 & In 12 is a pair for digital input. It works at voltage 5V.
In 21 In 22	In 21 & In 22 is a pair for digital input. It works at voltage 5V.
Out 1 - Out 1 +	Out 1+ & Out 1- is a pair for digital output. The output voltage is 5V and the maximum current is 100mA.
Out 2 - Out 2 +	Out 2+ & Out 2 - is a pair for digital output. The output voltage is 5V and the maximum current is 100mA.

I/O Schematic Diagram

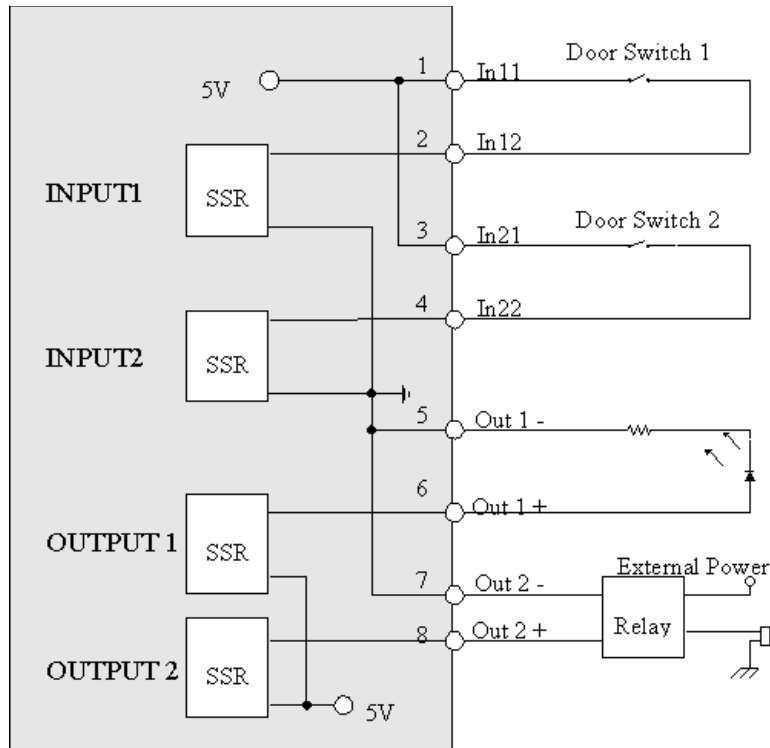

age 5V.

age 5V.

Warning

1. When connecting a device to the Input connector, the device must be a passive component without voltage and electrical current.
2. When connecting other devices through the Output connector, please make sure the maximum current of DC 5V, 100mA is strictly observed.
3. Any failure of the above two points might cause serious damage to the camera.

Note:

Through the Web Configuration in the Trigger section, you must first enable the trigger function. Please refer to the Web Configuration section for detailed information.

Time Zone Table

GMT stands for Greenwich Mean Time, which is the global time that all time zones are measured from.

(GMT-12:00) International Date Line West
(GMT-11:00) Midway Island, Samoa
(GMT-10:00) Hawaii
(GMT-09:00) Alaska
(GMT-08:00) Pacific Time (US & Canada); Tijuana
(GMT-07:00) Arizona
(GMT-07:00) Chihuahua, La Paz, Mazatlan
(GMT-07:00) Mountain Time (US & Canada)
(GMT-06:00) Central America
(GMT-06:00) Central Time (US & Canada)
(GMT-06:00) Guadalajara, Mexico City, Monterrey
(GMT-06:00) Saskatchewan
(GMT-05:00) Bogota, Lima, Quito
(GMT-05:00) Eastern Time (US & Canada)
(GMT-05:00) Indiana (East)
(GMT-04:00) Atlantic Time (Canada)
(GMT-04:00) Caracas, La Paz
(GMT-04:00) Santiago
(GMT-03:30) Newfoundland
(GMT-03:00) Brasilia
(GMT-03:00) Buenos Aires, Georgetown
(GMT-03:00) Greenland
(GMT-02:00) Mid-Atlantic
(GMT-01:00) Azores
(GMT-01:00) Cape Verde Is.
(GMT) Casablanca, Monrovia
(GMT) Greenwich Mean Time : Dublin, Edinburgh, Lisbon, London
(GMT+01:00) Amsterdam, Berlin, Bern, Rome, Stockholm, Vienna
(GMT+01:00) Belgrade, Bratislava, Budapest, Ljubljana, Prague
(GMT+01:00) Brussels, Copenhagen, Madrid, Paris
(GMT+01:00) Sarajevo, Skopje, Warsaw, Zagreb
(GMT+01:00) West Central Africa
(GMT+02:00) Athens, Istanbul, Minsk
(GMT+02:00) Bucharest
(GMT+02:00) Cairo
(GMT+02:00) Harare, Pretoria
(GMT+02:00) Helsinki, Kyiv, Riga, Sofia, Tallinn, Vilnius
(GMT+02:00) Jerusalem
(GMT+03:00) Baghdad
(GMT+03:00) Kuwait, Riyadh
(GMT+03:00) Moscow, St. Petersburg, Volgograd
(GMT+03:00) Nairobi

(GMT+03:30) Tehran
(GMT+04:00) Abu Dhabi, Muscat
(GMT+04:00) Baku, Tbilisi, Yerevan
(GMT+04:30) Kabul
(GMT+05:00) Ekaterinburg
(GMT+05:00) Islamabad, Karachi, Tashkent
(GMT+05:30) Chennai, Kolkata, Mumbai, New Delhi
(GMT+05:45) Kathmandu
(GMT+06:00) Almaty, Novosibirsk
(GMT+06:00) Astana, Dhaka
(GMT+06:00) Sri Jayawardenepura
(GMT+06:30) Rangoon
(GMT+07:00) Bangkok, Hanoi, Jakarta
(GMT+07:00) Krasnoyarsk
(GMT+08:00) Beijing, Chongqing, Hong Kong, Urumqi
(GMT+08:00) Irkutsk, Ulaan Bataar
(GMT+08:00) Kuala Lumpur, Singapore
(GMT+08:00) Perth
(GMT+08:00) Taipei
(GMT+09:00) Osaka, Sapporo, Tokyo
(GMT+09:00) Seoul
(GMT+09:00) Yakutsk
(GMT+09:30) Adelaide
(GMT+09:30) Darwin
(GMT+10:00) Brisbane
(GMT+10:00) Canberra, Melbourne, Sydney
(GMT+10:00) Guam, Port Moresby
(GMT+10:00) Hobart
(GMT+10:00) Vladivostok
(GMT+11:00) Magadan, Solomon Is., New Caledonia
(GMT+12:00) Auckland, Wellington
(GMT+12:00) Fiji, Kamchatka, Marshall Is.
(GMT+13:00) Nuku'alofa

Xplug Control Installation Installation to a Web Server

Important Information

It is highly recommended to install the Xplug Control application to the Web Server for IE 5.0. It must be installed to a Public Domain with a Fixed IP address.

1. Installation:

Copy the "xplug.ocx" file to any Web Server table. Note the web address of the file location so that you can use it in the next step.

2. Configuration:

From the Web Configuration menu select "System" and under the "Loading ActiveX From" input web server location (http://www.web server location.com/).

Once the settings are completed you should now be able to access the Internet Camera from the web browser by selecting ActiveX mode.

Note:

Set your browser security level to "Low" so that your browser will allow ActiveX control of the camera.

Installation to a Local PC


Insert the CD-ROM into the CD-ROM drive to initiate the auto-run program. Once completed a menu screen will appear as follows:




To install Xplug Control click on the “**Xplug Control**” button to activate the installation procedure for the plug-in program.
Once executed a prompt will appear requesting the input of the desired language selection. Make the desired selection and click on “**OK**” to continue.




The Welcome screen will appear. Click **Next** to proceed with the installation.

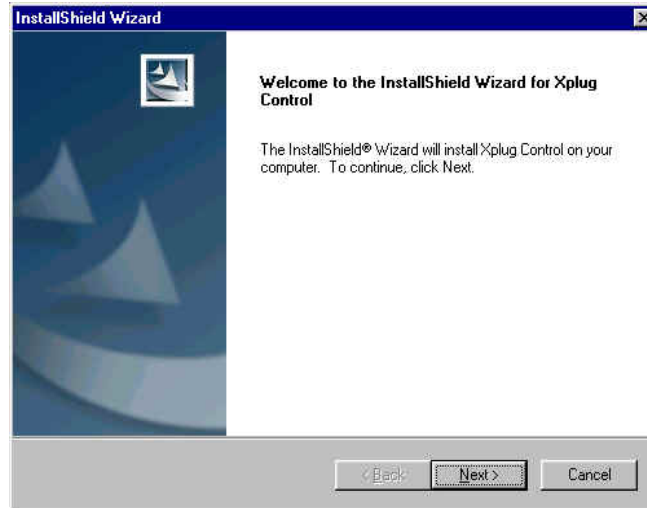


The License Agreement prompt will appear as below. Read the details carefully and click **Yes** to continue with the installation procedure.

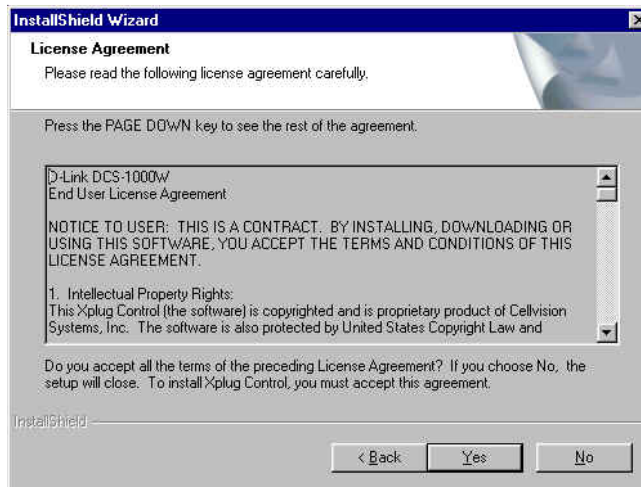

Click **Finish** to complete Setup of the Xplug Control Utility program for the Internet Camera.

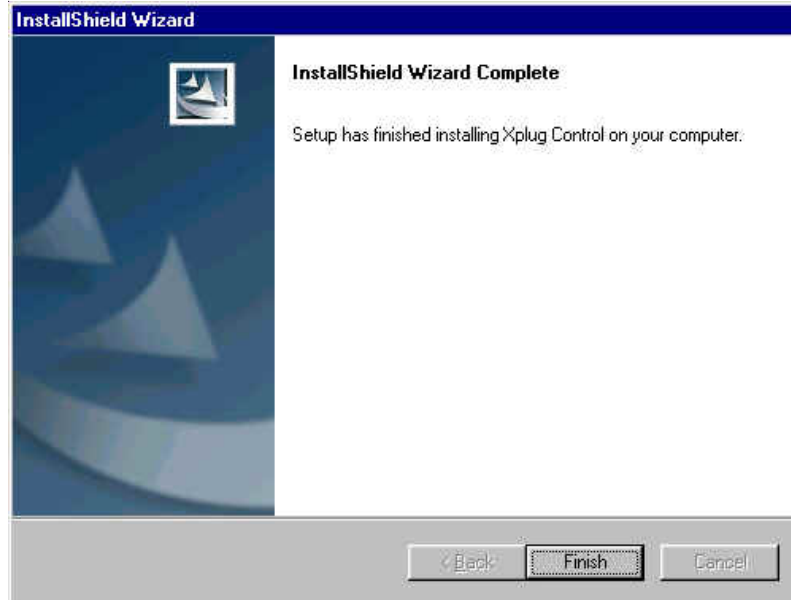


Adjusting the Cameras Focus

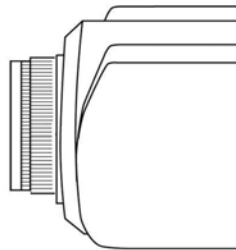

The Internet Camera features an exchangeable C/CS-type lens that can be used for different applications as necessary. It supports rotational focus control so the lens can be adjusted to focus under normal and stable conditions to maximize the image quality of the Internet Camera.

To adjust the focus of the lens you will need to turn the lens slowly either clockwise or counter-clockwise until the desired image appears. DO NOT over-turn the lens in either direction as it will be out of focus. Unless you want to substitute the lens DO NOT unscrew more than 1.0mm apart from the Fixed Lens Assembly.

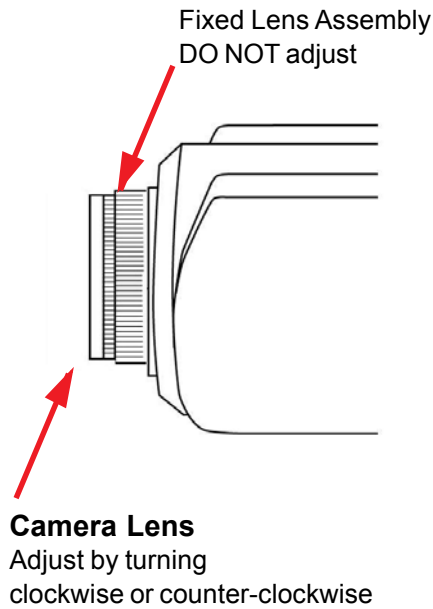

Note:

You can further adjust the Internet Camera's image quality through the Web Configuration under *System Administration - Image*. Please refer to Web Configuration section for further details.



Warning

Direct exposure to sunlight may cause permanent damage to the CMOS sensor. Therefore do not expose the Internet Camera's lens directly to sunlight. When operation is required in glaring light environment, it is recommended to use an iris lens.


The Internet Camera is designed for indoor usage and if your application requires prolonged exposure to sunlight, a sun visor is recommended to protect the Internet Camera.

Replacing the Lens

Since the Internet Camera is designed with a CS- mount, the lens equipped with the Internet Camera can be replaced with any standard C or CS lens commonly used within the surveillance industry.

Follow the instructions below to replace the supplied lens with any C or CS type lens.

1. Unscrew the Internet Camera lens
2. When using a C-lens, attach the new lens to a CS-C adapter
3. Screw the new lens onto the Internet Camera. If appropriate, adjust the iris according to the prevailing light conditions.
4. Refer to *Adjusting the Internet Camera Focus* on the previous page.
5. Refresh the web browser and monitor the results from the Internet Camera.

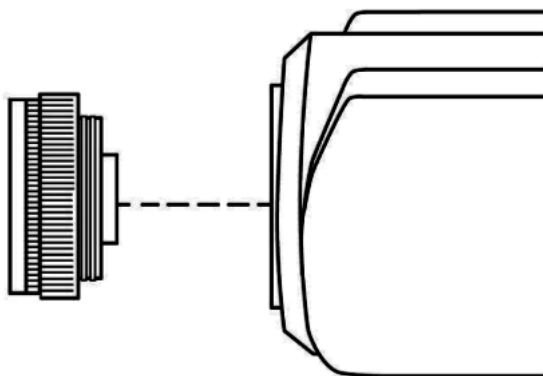

Technical Specifications

Video specification

Resolution:	640 x 480 pixel
Sensor:	1/3" color CMOS sensor
Gain control:	Automatic
Exposure:	Automatic
White Balance:	Automatic
Shutter:	Electronics 1/60 ~ 1/15000 sec
Minimum Illumination:	<u>2.5lux@f1.4</u> , 3000K color
Focal Length:	6.0 mm
Aperture:	F=1.8
Focus Extent:	20 cm - "
Lens mounting:	Fixed board lens, CS-mount type

Image (Video Setting)

Image compression:	JPEG
Frame rate:	<u>30fps@QCIF</u> , <u>20fps@CIF</u> , 3fps@VGA
Compression Rate selection:	5 level (Very Low, Low, Medium, High, Very High)
Frame rate setting:	1, 5, 7, 15, 20, auto (depends on the video format)
Video resolution:	160x120, 320x240, 640x480
Brightness control:	Range 1- 128
Contrast control:	Range 1- 128
Hue control:	Range 1- 128

System Hardware

LAN Connector:	One RJ-45 port to connect to 10/100Mbps Ethernet, auto-sensed
Wireless LAN:	Built-in 802.11b wireless LAN module (Wi-Fi compliant)
Generic I/O Port:	Four I/O ports, two for input and two for output Total 8-pin: Pin 1 Input Port (I+) Pin 5 Output Port (I+) Pin 2 Input Port (I-) Pin 6 Output Port (I-) Pin 3 Input Port (II+) Pin 7 Output Port (II+) Pin 4 Input Port (II-) Pin 8 Output Port (II-)

Note:

The output voltage is DC 5V and maximum current is 100mA.

LED Indicator:	Power LED (Blue) LAN/WLAN Activity LED (Orange) 3 Mode (Normal / Off / Dummy)
Power Supply:	DC 5V/2.4A, switching type
Power Communication:	6.5 Watt (1300mA x 5V)
Slide Switch:	LAN/LAN&WLAN/WLAN
Antenna Connector:	2 connectors

Communication Support

Communication:	10/100Mbps Ethernet only 10/100Mbps Ethernet and 802.11b wireless LAN. 802.11b wireless LAN only
Encryption:	64 bit, 128 bit or OFF
Communication protocol:	HTTP, FTP, TCP/IP, UDP, ARP, ICMP, BOOTP, RARP, DHCP, PPPoE

Web Configuration Requirements:

- Internet Explorer 5.0 or above or Netscape 6.0 or above
- CPU: Pentium II, 266 MHz or above
- Memory Size: 32 MB (64 MB recommended)
- VGA card resolution: 800x600 or above
- ActiveX Control requires IE4.0 or above (windows)
- Java Applet requires IE4.0 or above (Windows/Mac) or Netscape 4.0 or above (Windows/Mac/Linux)

PC Requirements for IPView:

- Windows XP, Windows 2000, Windows Me, Windows 98SE
- Pentium III, 450 MHz CPU or above
- Memory Size of 128 MB (256 MB recommended)
- VGA card resolution of 800x600 or above

Operating environment

Operating temperature:	5° ~ 50°
Storage temperature:	-25° ~ 50°
Humidity:	5% ~ 95% non-condensing

EMI & Safety	FCC, CE, VCCI
-------------------------	---------------

Contacting Technical Support

You can find the most recent software and user documentation on the D-Link website.

D-Link provides free technical support for customers within the United States for the duration of the warranty period on this product.

U.S. customers can contact D-Link technical support through our web site, or by phone.

D-Link Technical Support over the Telephone:

(877) 453-5465

24 hours a day, seven days a week.

D-Link Technical Support over the Internet:

<http://support.dlink.com>

When contacting technical support, please provide the following information:

- *Serial number of the unit*
- *Model number or product name*
- *Software type and version number*

Warranty and Registration

Subject to the terms and conditions set forth herein, D-Link Systems, Inc. ("D-Link") provides this Limited warranty for its product only to the person or entity that originally purchased the product from:

- D-Link or its authorized reseller or distributor and
- Products purchased and delivered within the fifty states of the United States, the District of Columbia, U.S. Possessions or Protectorates, U.S. Military Installations, addresses with an APO or FPO.

Limited Warranty: D-Link warrants that the hardware portion of the D-Link products described below will be free from material defects in workmanship and materials from the date of original retail purchase of the product, for the period set forth below applicable to the product type ("Warranty Period"), except as otherwise stated herein.

1-Year Limited Warranty for the Product(s) is defined as follows:

- Hardware (excluding power supplies and fans) One (1) Year
- Power Supplies and Fans One (1) Year
- Spare parts and spare kits Ninety (90) days

D-Link's sole obligation shall be to repair or replace the defective Hardware during the Warranty Period at no charge to the original owner or to refund at D-Link's sole discretion. Such repair or replacement will be rendered by D-Link at an Authorized D-Link Service Office. The replacement Hardware need not be new or have an identical make, model or part. D-Link may in its sole discretion replace the defective Hardware (or any part thereof) with any reconditioned product that D-Link reasonably determines is substantially equivalent (or superior) in all material respects to the defective Hardware. Repaired or replacement Hardware will be warranted for the remainder of the original Warranty Period from the date of original retail purchase. If a material defect is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to repair or replace the defective Hardware, the price paid by the original purchaser for the defective Hardware will be refunded by D-Link upon return to D-Link of the defective Hardware. All Hardware (or part thereof) that is replaced by D-Link, or for which the purchase price is refunded, shall become the property of D-Link upon replacement or refund.

Limited Software Warranty: D-Link warrants that the software portion of the product ("Software") will substantially conform to D-Link's then current functional specifications for the Software, as set forth in the applicable documentation, from the date of original retail purchase of the Software for a period of ninety (90) days ("Warranty Period"), provided that the Software is properly installed on approved hardware and operated as contemplated in its documentation. D-Link further warrants that, during the Warranty Period, the magnetic media on which D-Link delivers the Software will be free of physical defects. D-Link's sole obligation shall be to replace the non-conforming Software (or defective media) with software that substantially conforms to D-Link's functional specifications for the Software or to refund at D-Link's sole discretion. Except as otherwise agreed by D-Link in writing, the replacement Software is provided only to the original licensee, and is subject to the terms and conditions of the license granted by D-Link for the Software. Software will be warranted for the remainder of the original Warranty Period from the date of original retail purchase. If a material non-conformance is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to replace the non-conforming Software, the price paid by the original licensee for the non-conforming Software will be refunded by D-Link; provided that the non-conforming Software (and all copies thereof) is first returned to D-Link. The license granted respecting any Software for which a refund is given automatically terminates.

Non-Applicability of Warranty: The Limited Warranty provided hereunder for hardware and software of D-Link's products, will not be applied to and does not cover any product purchased through the inventory clearance or liquidation sale or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product and in that case, the product is being sold "As-Is" without any warranty whatsoever including, without limitation, the Limited Warranty as described herein, notwithstanding anything stated herein to the contrary.

Submitting A Claim: Any claim under this limited warranty must be submitted in writing before the end of the Warranty Period to an Authorized D-Link Service Office.

- The customer must submit as part of the claim (a written description of the Hardware defect or Software nonconformance) in sufficient detail to allow D-Link to confirm the same.
- The original product owner must obtain a Return Material Authorization ("RMA") number from the Authorized D-Link Service Office and, if requested, provide written proof of purchase of the product (such as a copy of the dated purchase invoice for the product) before the warranty service is provided.

- After an RMA number is issued, the defective product must be packaged securely in the original or other suitable shipping package to ensure that it will not be damaged in transit, and the RMA number must be prominently marked on the outside of the package. Do not include any manuals or accessories in the shipping package. D-Link will only replace the defective portion of the Product and will not ship back any accessories.
- The customer is responsible for all shipping charges to D-Link. No Cash on Delivery ("COD") is allowed. Products sent COD will either be rejected by D-Link or become the property of D-Link. Products should be fully insured by the customer and shipped to **D-Link Systems, Inc., 53 Discovery Drive, Irvine, CA 92618**. D-Link will not be held responsible for any packages that are lost in transit to D-Link. The repaired or replaced packages will be shipped via UPS Ground or any common carrier selected by D-Link, with shipping charges prepaid. Expedited shipping is available if shipping charges are prepaid by the customer.

D-Link may reject or return any product that is not packaged and shipped in strict compliance with the foregoing requirements, or for which an RMA number is not visible from the outside of the package. The product owner agrees to pay D-Link's reasonable handling and return shipping charges for any product that is not packaged and shipped in accordance with the foregoing requirements, or that is determined by D-Link not to be defective or non-conforming.

What Is Not Covered: This limited warranty provided by D-Link does not cover: Products, if in D-Link's judgment, have been subjected to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, repair or service in any way that is not contemplated in the documentation for the product, or if the model or serial number has been altered, tampered with, defaced or removed; Initial installation, installation and removal of the product for repair, and shipping costs; Operational adjustments covered in the operating manual for the product, and normal maintenance; Damage that occurs in shipment, due to act of God, failures due to power surge, and cosmetic damage; Any hardware, software, firmware or other products or services provided by anyone other than D-Link; Products that have been purchased from inventory clearance or liquidation sales or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product. Repair by anyone other than D-Link or an Authorized D-Link Service Office will void this Warranty.

Disclaimer of Other Warranties: EXCEPT FOR THE LIMITED WARRANTY SPECIFIED HEREIN, THE PRODUCT IS PROVIDED "AS-IS" WITHOUT ANY WARRANTY OF ANY KIND WHATSOEVER INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. IF ANY IMPLIED WARRANTY CANNOT BE DISCLAIMED IN ANY TERRITORY WHERE A PRODUCT IS SOLD, THE DURATION OF SUCH IMPLIED WARRANTY SHALL BE LIMITED TO NINETY (90) DAYS. EXCEPT AS EXPRESSLY COVERED UNDER THE LIMITED WARRANTY PROVIDED HEREIN, THE ENTIRE RISK AS TO THE QUALITY, SELECTION AND PERFORMANCE OF THE PRODUCT IS WITH THE PURCHASER OF THE PRODUCT.

Limitation of Liability: TO THE MAXIMUM EXTENT PERMITTED BY LAW, D-LINK IS NOT LIABLE UNDER ANY CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHER LEGAL OR EQUITABLE THEORY FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE OR DAMAGES OF ANY CHARACTER, WHETHER DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF GOODWILL, LOSS OF REVENUE OR PROFIT, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, FAILURE OF OTHER EQUIPMENT OR COMPUTER PROGRAMS TO WHICH D-LINK'S PRODUCT IS CONNECTED WITH, LOSS OF INFORMATION OR DATA CONTAINED IN, STORED ON, OR INTEGRATED WITH ANY PRODUCT RETURNED TO D-LINK FOR WARRANTY SERVICE) RESULTING FROM THE USE OF THE PRODUCT, RELATING TO WARRANTY SERVICE, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY, EVEN IF D-LINK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE SOLE REMEDY FOR A BREACH OF THE FOREGOING LIMITED WARRANTY IS REPAIR, REPLACEMENT OR REFUND OF THE DEFECTIVE OR NON-CONFORMING PRODUCT. THE MAXIMUM LIABILITY OF D-LINK UNDER THIS WARRANTY IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT COVERED BY THE WARRANTY. THE FOREGOING EXPRESS WRITTEN WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ANY OTHER WARRANTIES OR REMEDIES, EXPRESS, IMPLIED OR STATUTORY

Governing Law: This Limited Warranty shall be governed by the laws of the State of California. Some states do not allow exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the foregoing limitations and exclusions may not apply. This limited warranty provides specific legal rights and the product owner may also have other rights which vary from state to state.

Trademarks: D-Link is a registered trademark of D-Link Systems, Inc. Other trademarks or registered trademarks are the property of their respective manufacturers or owners.

Copyright Statement: No part of this publication or documentation accompanying this Product may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from D-Link Corporation/D-Link Systems, Inc., as stipulated by the United States Copyright Act of 1976. Contents are subject to change without prior notice. Copyright© 2002 by D-Link Corporation/D-Link Systems, Inc. All rights reserved.

CE Mark Warning: This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

FCC Statement: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Register online your D-Link product at <http://support.dlink.com/register/>

Index

A

Add a Camera 43
Adjust the Property Setting 50
Adjusting the Cameras Focus 89
Assign Automatically Using 18

B

Bracket Cavity 7
Broad Range of Applications 5

C

Change Password 40
Change the IP Address 41
Columns 63
Connecting the DCS-1000 to the Camera Stand 9
Connection to External Devices 5
Connections 6
Context Sensitive Menu 69

D

DC Power Connector 6
Delete a Camera 46
DNS 52
DNS IP Address: 18

E

Enable Function 65

F

Factory Reset 30
Features & Benefits 4
Format the Camera view 47
Frequently Asked Questions 76

H

How to Add a Camera 43
How to Adjust the Property Setting 50

How to Change the Password 40
How to Change the IP Address 41
How to Delete a Camera 46
How to format the Camera view 47
How to PING Your IP Address 80
How to take a Snap-Shot with the Camera 48

I

I/O Connector 7, 72, 81
Installation to a Local PC 86
IP Assignment 51
IPView Icon Description 68

L

LED Control: 18
LEDS 8
List View 64

M

Menu Bar 62
Menu Bar – View 63
Menu Bar - Camera 65
Menu Bar - File 62
Menu Bar - Help 67
Menu Bar - Tools 65

N

Network Cable Connector 6

O

Open a second port: 20

P

Power LED 8

R

Recording 58
Remote Monitoring Utility 5
Replacing the Lens 90
Reset Button 6
Rotate Video 48

S

Specifications 91
Start Recording 49
Stop Recording 49
System Settings 16
System Requirements 3

T

Time Zone Table 83
Trouble Shooting 71
Troubleshooting (FAQ) 76

U

Upgrade Firmware 57

V

View Image – ActiveX Mode 31
View Image – Java Mode 32
Viewing Format 63

W

Web Configuration 5, 15

X

Xplug Control Installation 85