


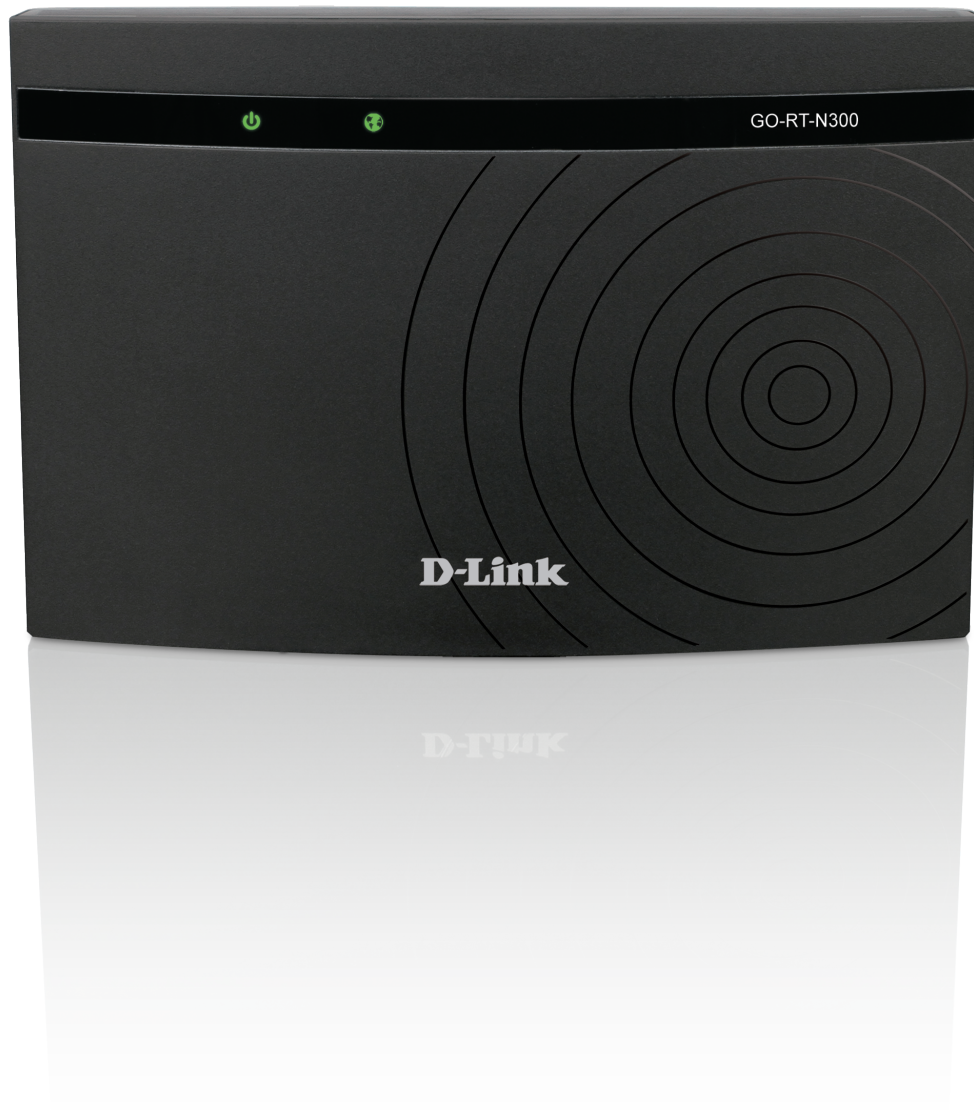

User Manual

Wireless N 300 Easy Router

GO-RT-N300

Preface

D-Link reserves the right to revise this publication and to make changes in the content hereof without obligation to notify any person or organization of such revisions or changes.

Manual Revisions

Revision	Date	Description
1.0	May 17, 2013	GO-RT-N300 Revision A1

Trademarks

D-Link and the D-Link logo are trademarks or registered trademarks of D-Link Corporation or its subsidiaries in the United States or other countries. All other company or product names mentioned herein are trademarks or registered trademarks of their respective companies.

Copyright © 2013 by D-Link Systems, Inc.

All rights reserved. This publication may not be reproduced, in whole or in part, without prior expressed written permission from D-Link Systems, Inc.

Table of Contents

Preface	i	Setup	21
Manual Revisions	i	Internet Setup	21
Trademarks	i	Wireless	24
Product Overview	1	Wireless Basics	24
Package Contents	1	Wireless Security	25
System Requirements	2	Wi-Fi Protected (WPS) Setup	27
Features	3	Advanced Wireless	28
Hardware Overview	4	Wireless Repeater	31
Connections	4	Advanced	33
LEDs	5	Access Control List	33
Installation	6	Port Triggering	34
Before You Begin	6	DMZ	35
Wireless Installation Considerations	7	URL Block	36
Connect to Cable/DSL/Satellite Modem	8	Dynamic DNS	37
Connect to Another Router	9	Traffic Control	38
Getting Started	11	UPnP	40
Configuration	12	Virtual Server	41
Web-based Configuration Utility	12	Maintenance	43
Setup	13	Reboot	43
Wizard	13	Firmware Upgrade	44
Local Network	17	Backup/Restore	45
LAN Interface Setup	18	Admin	46
DHCP Server Settings	19	Time and Date	47
DHCP Static IP Configuration	20	Status	48
		Device Info	48
		Active Client Table	49

Statistics	50
Help	51
Wireless Security	52
What is WPA?	52
Connect to a Wireless Network.....	53
Windows® 8.....	53
WPA/WPA2	53
Using Windows® 7	55
Configure WPS	58
Using Windows Vista®	62
Configure Wireless Security	63
Using Windows® XP	65
Configure WPA-PSK.....	66
Troubleshooting	68
Wireless Basics	72
What is Wireless?	73
Tips.....	75
Wireless Modes.....	76
Networking Basics	77
Check your IP address.....	77
Statically Assign an IP address	78
Technical Specifications	79

Package Contents

GO-RT-N300 Wireless N 300 Easy Router	
Power Adapter	
Ethernet Cable	

Note: Using a power supply with a different voltage rating than the one included with the GO-RT-N300 will cause damage and void the warranty for this product.

System Requirements

Network Requirements	• An Ethernet-based Cable or DSL modem • IEEE 802.11n or 802.11g wireless clients • 10/100 Ethernet
Web-based Configuration Utility Requirements	Computer with the following: • Windows®, Macintosh, or Linux-based operating system • An installed Ethernet adapter Browser Requirements: • Internet Explorer 7 or higher • Firefox 12.0 or higher • Safari 4.0 or higher • Chrome 20.0 or higher Windows® Users: Make sure you have the latest version of Java installed. Visit www.java.com to download the latest version.


Features

- **Faster Wireless Networking** - The GO-RT-N300 provides wireless connection of up to 300Mbps* for other 802.11n wireless clients. This capability allows users to participate in real-time activities online, such as video streaming, online gaming, and real-time audio.
- **Compatible with 802.11b and 802.11g Devices** - The GO-RT-N300 is fully compatible with the IEEE 802.11b and IEEE 802.11g standard, so it can connect with existing 802.11b and IEEE 802.11g PCI, USB and Cardbus adapters.
- **Advanced Firewall Features** - The Web-based user interface displays a number of advanced network management features including:
 - **Content Filtering** - Easily applied content filtering based on URL.
 - **Secure Multiple/Concurrent Sessions** - The GO-RT-N300 can pass through VPN sessions. It supports multiple and concurrent PPTP sessions, so users behind the GO-RT-N300 can securely access corporate networks.
- **User-friendly Setup Wizard** - Through its easy-to-use Web-based user interface, the GO-RT-N300 lets you control what information is accessible to those on the wireless network, whether from the Internet or from your company's server. Configure your router to your specific settings within minutes.

* Maximum wireless signal rate derived from IEEE Standard 802.11g and Draft 802.11n specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental conditions will adversely affect wireless signal range.

Hardware Overview

Connections

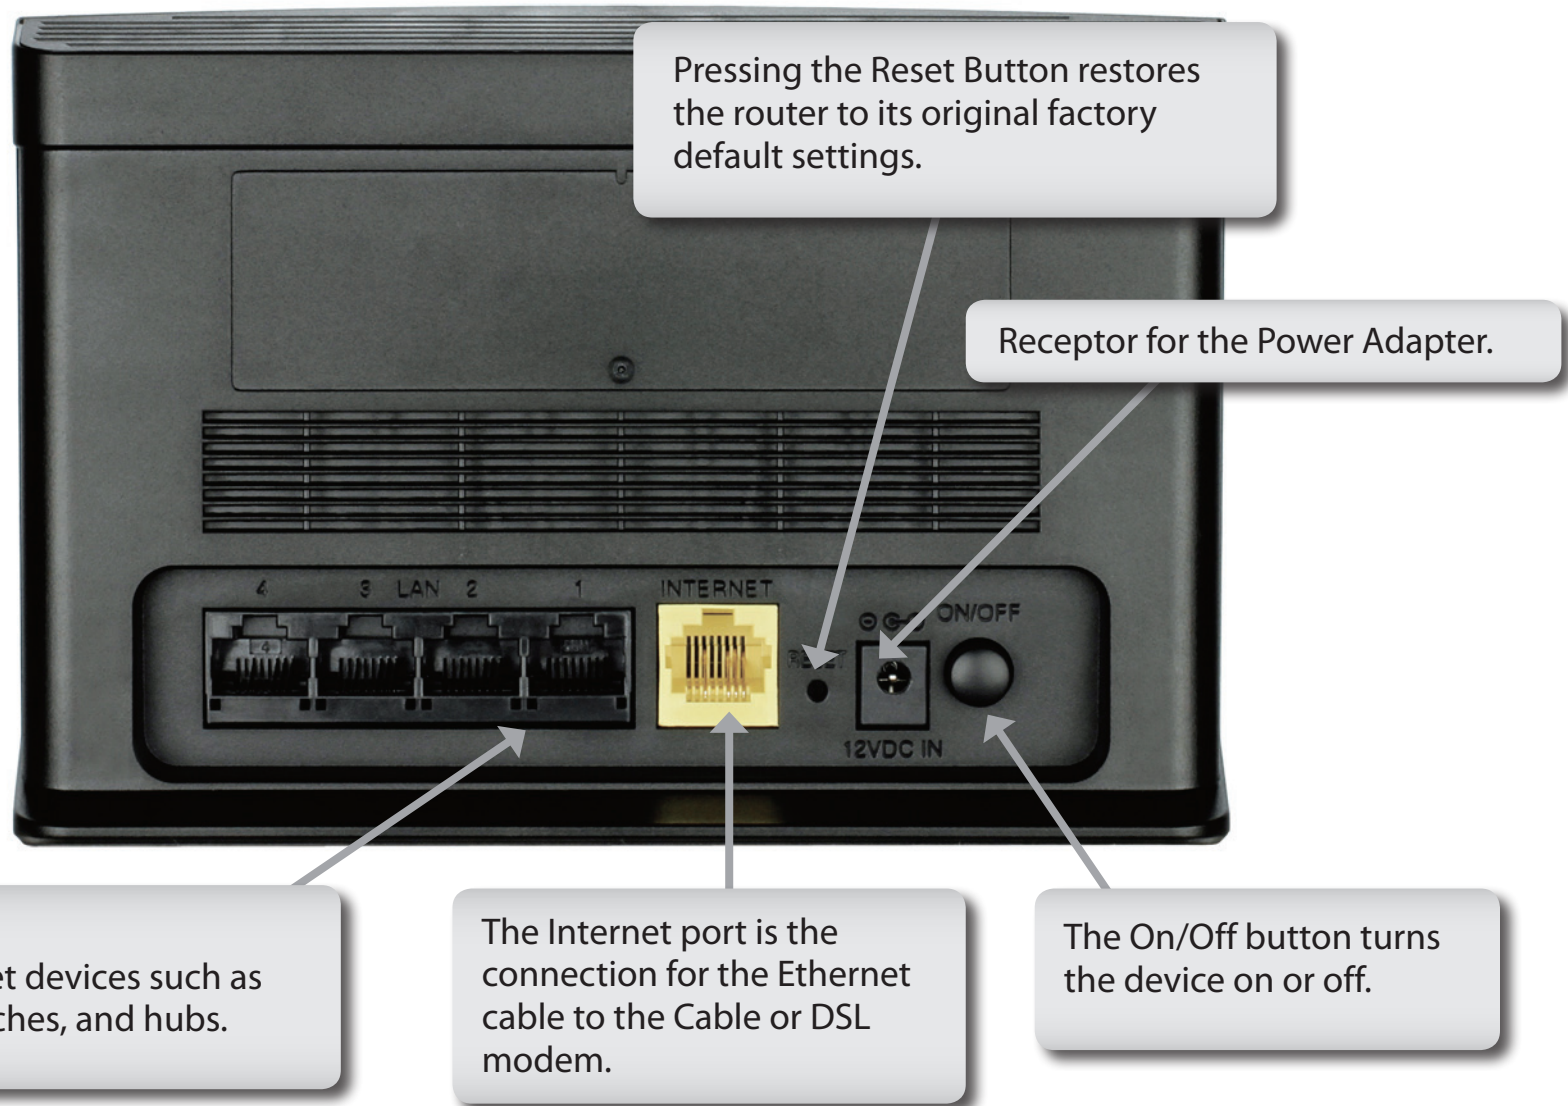

Hardware Overview

LEDs

INTERNET

A solid light indicates connection on the WAN port.

Power LED

A solid light indicates a proper connection to the power supply.



Installation

This section will walk you through the installation process. Placement of the router is very important. Do not place the router in an enclosed area such as a closet, cabinet, or in the attic or garage.

Before You Begin

- Please configure the router with the computer that was last connected directly to your modem.
- You can only use the Ethernet port on your modem. If you were using the USB connection before using the router, then you must turn off your modem, disconnect the USB cable and connect an Ethernet cable to the Internet port on the router, and then turn the modem back on. In some cases, you may need to call your ISP to change connection types (USB to Ethernet).
- If you have DSL and are connecting via PPPoE, make sure you disable or uninstall any PPPoE software such as WinPoet, Broadjump, or Enternet 300 from your computer or you will not be able to connect to the Internet.
- When running the Setup Wizard, make sure the computer is connected to the Internet and online or the wizard will not work. If you have disconnected any hardware, re-connect your computer back to the modem and make sure you are online.

Wireless Installation Considerations

The D-Link wireless router lets you access your network using a wireless connection from virtually anywhere within the operating range of your wireless network. Keep in mind, however, that the number, thickness and location of walls, ceilings, or other objects that the wireless signals must pass through, may limit the range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing wireless range is to follow these basic guidelines:

1. Keep the number of walls and ceilings between the D-Link router and other network devices to a minimum - each wall or ceiling can reduce your adapter's range from 3-90 feet (1-30 meters). Position your devices so that the number of walls or ceilings is minimized.
2. Be aware of the direct line between network devices. A wall that is 1.5 feet thick (.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle it looks over 42 feet (14 meters) thick! Position devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
3. Building Materials make a difference. A solid metal door or aluminum studs may have a negative effect on range. Try to position access points, wireless routers, and computers so that the signal passes through drywall or open doorways. Materials and objects such as glass, steel, metal, walls with insulation, water (fish tanks), mirrors, file cabinets, brick, and concrete will degrade your wireless signal.
4. Keep your product away (at least 3-6 feet or 1-2 meters) from electrical devices or appliances that generate RF noise.
5. If you are using 2.4 GHz cordless phones or X-10 (wireless products such as ceiling fans, lights, and home security systems), your wireless connection may degrade dramatically or drop completely. Make sure your 2.4 GHz phone base is as far away from your wireless devices as possible. The base transmits a signal even if the phone is not in use.

Connect to Cable/DSL/Satellite Modem

If you are connecting the router to a cable/DSL/satellite modem, please follow the steps below:

1. Place the router in an open and central location. Do not plug the power adapter into the router.
2. Unplug the modem's power adapter. Shut down your computer.
3. Unplug the Ethernet cable (that connects your computer to your modem) from your computer and place it into the Internet port on the router.
4. Plug an Ethernet cable into one of the four LAN ports on the router. Plug the other end into the Ethernet port on your computer.
5. Plug in your modem. Wait for the modem to boot (about 30 seconds).
6. Plug the power adapter to the router and connect to an outlet or power strip.
7. Use the power switch to power on the router. Wait about 30 seconds for the router to boot.
8. Turn on your computer.
9. Refer to "Getting Started" on page 11 to configure your router.

Connect to Another Router

If you are connecting the D-Link router to another router to use as a wireless access point and/or switch, you will have to do the following before connecting the router to your network:

- Disable UPnP™
- Disable DHCP
- Change the LAN IP address to an available address on your network. The LAN ports on the router cannot accept a DHCP address from your other router.

To connect to another router, please follow the steps below:

1. Plug the power into the router and use the power switch to power up the router. Connect one of your computers to the router (LAN port) using an Ethernet cable. Make sure your IP address on the computer is 192.168.0.xxx (where xxx is between 2 and 254). Please see the **Networking Basics** section for more information. If you need to change the settings, write down your existing settings before making any changes. In most cases, your computer should be set to receive an IP address automatically in which case you will not have to do anything to your computer.
2. Open a web browser and enter **http://192.168.0.1** and press **Enter**. When the login window appears, set the user name to **Admin** and leave the password box empty. Click **Log In** to continue.
3. Click on **Advanced** and then click **UPnP**. Uncheck the **Enable** checkbox. Click **Apply Changes** to continue.
4. Click **Setup** and then click **Local Network**. Under **DHCP Server Settings**, select **None** in the **DHCP Mode** pulldown menu. Click **Apply Changes** to continue.
5. Remaining in **Local Network**, go to **LAN Interface Setup** and enter an available IP address and the subnet mask of your network. Click **Apply Changes** to save your settings. Use this new IP address to access the configuration utility of the router in the future. Close the browser and change your computer's IP settings back to the original values as in Step 1.

6. Disconnect the Ethernet cable from the router and reconnect your computer to your network.
7. Connect an Ethernet cable in one of the **LAN** ports of the router and connect it to your other router. Do not plug anything into the Internet (WAN) port of the D-Link router.
8. You may now use the other 3 LAN ports to connect other Ethernet devices and computers. To configure your wireless network, open a web browser and enter the IP address you assigned to the router. Refer to the **Configuration** and **Wireless Security** sections for more information on setting up your wireless network.

Getting Started



The GO-RT-N300 will run a Setup Wizard when you first use it. Follow the simple steps below to run the Setup Wizard to guide you quickly through the installation process.

Select your WAN network type, then enter your wireless SSID and key.

Open a web browser (such as Internet Explorer) and enter the IP address of the router (**http://192.168.0.1**) in the address bar. The setup wizard will start automatically

The network map at the top of the page shows your current network connections. A green tick represents a successful connection between two devices. The IP address of each device will also be displayed. You can change the language of the configuration utility by selecting your desired language from the drop-down menu in the top right-hand corner of the screen.

Click the **Save and Connect** button when you are finished.

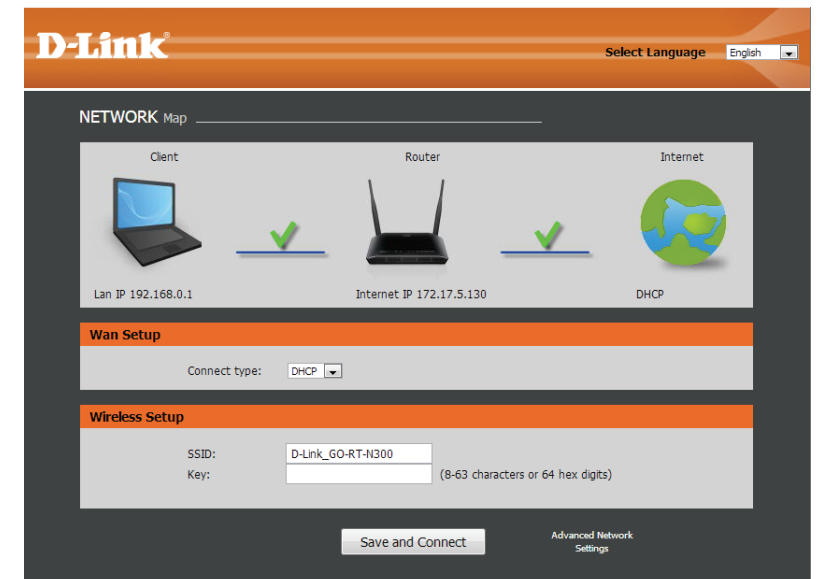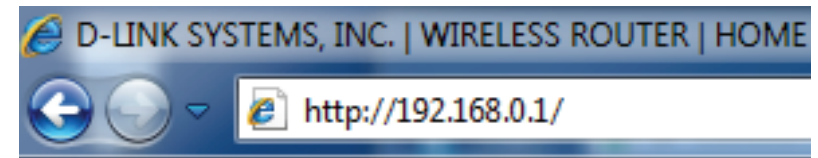


Note: It is recommended to write down the SSID and security key, followed by the login password.

Configuration

This section will show you how to configure your new D-Link wireless router using the web-based configuration utility.

Web-based Configuration Utility

To access the configuration utility, open a web-browser such as Internet Explorer and enter the IP address of the router (192.168.0.1).

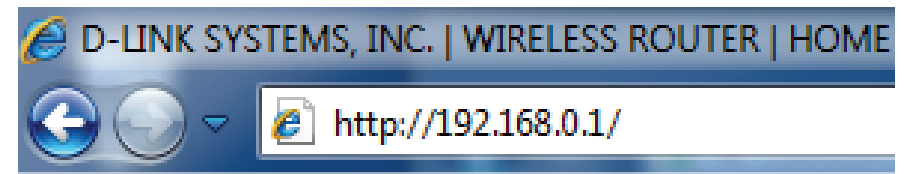


Enter **Admin** in the User Name field. Leave the password blank as the default password.

If you get a **Page Cannot be Displayed** error, please refer to the **Troubleshooting** section for assistance.


A screenshot of the login page for the D-Link router. The page has an orange header with the word "Login" in white. Below the header, there is a light gray background. In the center, there are two input fields: "Username:" followed by a text box containing "Admin", and "Password:" followed by an empty text box. Below these fields is a "Login" button.

Setup Wizard

You can configure your WAN network connection using a wizard or manually. Click **Next** to use the Setup Wizard, or click **Manual** to configure the WAN connection manually, which will take you to the **Setup > Internet Setup** page. Setup Wizard will be explained in the next pages and Internet Setup will be explained in the **Internet Setup** section.

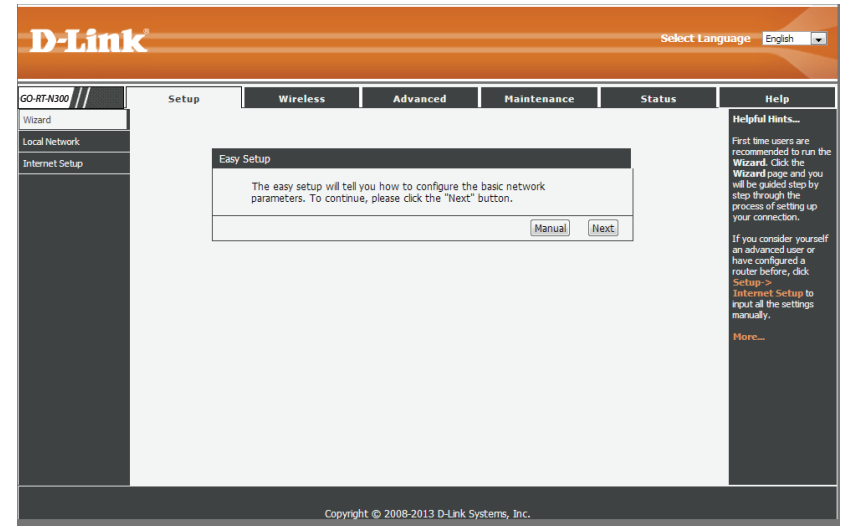

Select the connection type for your WAN and click **Next** to continue.

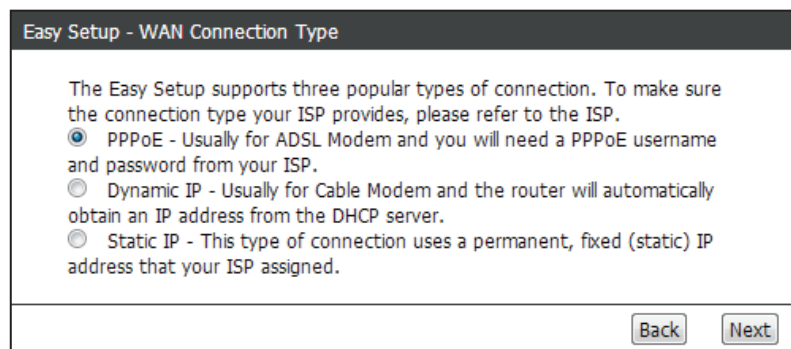


The Easy Setup supports three popular types of connection. To make sure the connection type your ISP provides, please refer to the ISP.

- ☒ PPPoE - Usually for ADSL Modem and you will need a PPPoE username and password from your ISP.
- ☐ Dynamic IP - Usually for Cable Modem and the router will automatically obtain an IP address from the DHCP server.
- ☐ Static IP - This type of connection uses a permanent, fixed (static) IP address that your ISP assigned.

Back Next

If you selected PPPoE, enter your PPPoE username and password twice and click **Next** to continue. Click the **Account Validate** button to validate the account.

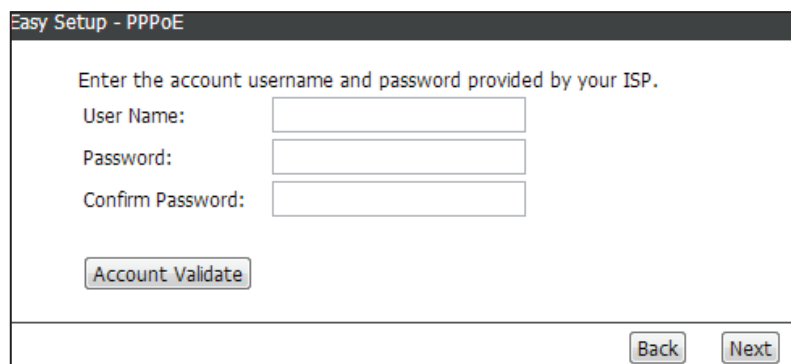

Enter the account username and password provided by your ISP.

User Name:

Password:

Confirm Password:

Account Validate

Back Next

If you selected Static IP, enter your IP address, Subnet Mask, Default Gateway, Primary DNS, and Secondary DNS, and click **Next** to continue.

Easy Setup - Static IP

Enter the IP parameters provided by your ISP.

IP Address:

Subnet Mask:

Default Gateway:

Primary DNS: (Optional)

Secondary DNS: (Optional)

You can also configure the wireless network and security settings. If you prefer not to, click **Disable the wireless radio**. Click **Next** to continue.

SSID: Enter the SSID name.

Channel: Use the dropdown menu to select the wireless channel.

Mode: Use the dropdown menu to specify the wireless mode

Channel Width: Use the dropdown menu to select the channel bandwidth. If you selected the 802.11n, 802.11 b/g, or 802.11 b/g/n wireless modes, the available options are 20 MHz and 20/40MHz. For the others, 20MHz is the only option.

Disable Security: You can also choose to not use security by selecting this, but this is not recommended.

WPA/WPA2-Personal: If you select this, enter a passkey in the box below the field.

Easy Setup - Wireless

You can configure the wireless parameters and security settings of router on this step.

Disable the wireless radio. ☐

SSID:

Channel:

Mode:

Channel Width:

Wireless Security:


It is recommended strongly that you choose one of following options to enable security, and select WPA-PSK/WPA2-PSK AES encryption.

☒ Disable Security

☐ WPA-PSK/WPA2-PSK AES

WPA/WPA2 - Personal: (You can enter ASCII characters between 8 and 63 or Hexadecimal characters between 8 and 64.)

Click **Finish** to complete the setup process. When the router has finished saving, the **Status > Device Info** window will open.

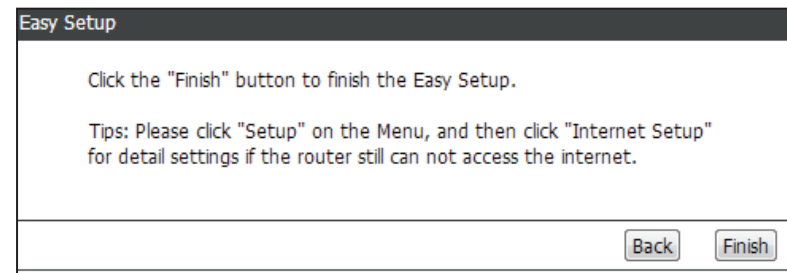

Local Network

This section will allow you to change the local network settings of the router and to configure the DHCP settings.

LAN Interface: Use this section to configure the Router's local network settings.

DHCP Server Settings: Use this section to configure the GO-RT-N300's built-in DHCP server settings.

DHCP Static IP Configuration: Use this section to add a new DHCP Static IP configuration.

DHCP Static IP Table: Displays information about the devices that have a static DHCP assigned from the GO-RT-N300. The information includes the *IP Address* and *MAC Address*. You can delete or edit an existing Static IP configuration in the table.

The screenshot shows the web interface of the GO-RT-N300 router. The top navigation bar includes links for Setup, Wireless, Advanced, Maintenance, Status, and Help. The left sidebar shows a menu with Wizard, Local Network (selected), and Internet Setup. The main content area is titled 'Local Network' and contains three sections:

- LAN Interface Setup:** This section allows configuring the LAN interface. It includes fields for IP Address (192.168.0.1) and Subnet Mask (255.255.255.0). Below these fields is an 'Apply Changes' button.
- DHCP Server Settings:** This section allows configuring the DHCP server. It includes a dropdown for DHCP Mode (set to DHCP Server), a range for IP Pool Range (192.168.0.2 to 192.168.0.254), a field for Max Lease Time (120 minutes), a field for Domain Name (domain.name), and fields for DNS Server 1 (192.168.0.1) and DNS Server 2 (Optional). Below these fields are 'Apply Changes' and 'Undo' buttons.
- DHCP Static IP Configuration:** This section allows adding new static IP configurations. It includes fields for IP Address (0.0.0.0) and Mac Address (000000000000, with an example 00E086710502). Below these fields are 'Add', 'Update', 'Delete Selected', and 'Reset' buttons.

On the right side of the interface, there is a 'Helpful Hints...' section with text explaining the IP address settings and the DHCP server mode.

Local Network

LAN Interface Setup

IP Address: Enter the IP address of the router. The default IP address is 192.168.0.1.

If you change the IP address, once you click **Apply**, you will need to enter the new IP address in your browser to get back into the configuration utility.

LAN Interface Setup

IP Address:	192.168.0.1
Subnet Mask:	255.255.255.0

Apply Changes

Default Subnet Mask: Enter the Subnet Mask. The default subnet mask is 255.255.255.0.

Click the **Apply Changes** button to save any changes made.

Local Network


DHCP Server Settings

DHCP stands for Dynamic Host Control Protocol. The GO-RT-N300 has a built-in DHCP server. The DHCP Server will automatically assign an IP address to the computers on the LAN/private network. Be sure to set your computers to be DHCP clients by setting their TCP/IP settings to "Obtain an IP Address Automatically." When you turn your computers on, they will automatically load the proper TCP/IP settings provided by the GO-RT-N300. The DHCP Server will automatically allocate an unused IP address from the IP address pool to the requesting computer. You must specify the starting and ending address of the IP address pool.

DHCP Mode: Choose the **DHCP Server** option in the pulldown menu to enable the DHCP server on your router. Choose **None** to disable this function.

IP Pool Range: Enter the starting and ending IP addresses for the DHCP server's IP assignment.

Note: If you statically (manually) assign IP addresses to your computers or devices, make sure the IP addresses are outside of this range or you may have an IP conflict.

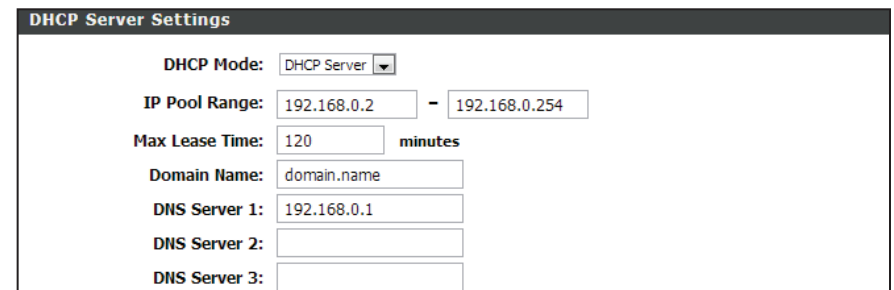

The screenshot shows the 'DHCP Server Settings' interface. It includes a dropdown menu for 'DHCP Mode' set to 'DHCP Server'. Below it, the 'IP Pool Range' is set to '192.168.0.2' to '192.168.0.254'. The 'Max Lease Time' is set to '120' minutes. The 'Domain Name' is set to 'domain.name'. There are three fields for 'DNS Server' (1, 2, and 3), with 'DNS Server 1' set to '192.168.0.1' and the others empty.

Max Lease Time: The maximum length of time for the IP address lease. Enter the Lease time in minutes.

Domain Name: Enter the domain name.

DNS Server 1: Enter the IP address of the first DNS Server.

DNS Server 2: Enter the IP address of the second DNS Server, if there is one.

DNS Server 3: Enter the IP address of the third DNS Server, if there is one.

When you have finished configuring the new DHCP Server Settings, click the **Apply Changes** button.

Local Network

DHCP Static IP Configuration

If you want a computer or device to always have the same IP address assigned, you can create a DHCP reservation. The router will assign the IP address only to that computer or device.

Note: This IP address must be within the DHCP IP Address Range.

IP Address: Enter the IP address you want to assign to the computer or device. This IP Address must be within the DHCP IP Address Range.

MAC Address: Enter the MAC address of the computer or device.

DHCP Static IP Configuration

IP Address: 0.0.0.0

Mac Address: 000000000000 (ex. 00E086710502)

Add

Update

Delete Selected

Reset

When you have finished configuring the new DHCP Reservation, click the **Add** button to activate your reservation. It will then be displayed in the DHCP Static IP Table below.

AddUpdateDelete SelectedReset

DHCP Static IP Table		
Select	IP Address	MAC Address
☒	192.168.0.14	00:00:40:30:05:70

The DHCP Static IP Table displays the IP reservations that have been created. To make any changes, select a reservation in the table by clicking the circle next to it and click **Update**. To delete a reservation, select a reservation and click **Delete Selected**.

Setup

Internet Setup

This section allows you to manually configure your Router's Internet WAN settings.

WAN Access Type: Select the WAN interface type.

If you choose DHCP Client, please configure the following fields:

Host Name: Enter the host name of the router.

MTU Size: Enter the MTU size.

Attain DNS Automatically: Click this if the DNS is to be obtained automatically.

Set DNS Manually: Click this to specify a DNS Server. You can enter up to three DNS servers.

MAC Clone Select the MAC address to be used for the connection. Select **Default MAC** to use the router's MAC address. Select **MAC from PC** to copy your PC's MAC address, or select **MAC Manual** to manually enter a MAC address in the field provided.

The screenshot shows the 'WAN Interface Setup' page in the D-Link GO-RT-N300 web interface. The page has a navigation bar with tabs: Setup, Wireless, Advanced, Maintenance, Status, and Help. The 'Setup' tab is selected. On the left, there is a sidebar with links: Wizard, Local Network, and Internet Setup. The main content area is titled 'WAN Interface Setup' and contains the following fields:

- WAN Access Type:** A dropdown menu set to 'DHCP Client'.
- Host Name:** A text field containing 'hostname'.
- MTU Size:** A text field containing '1500'.
- Attain DNS Automatically:** A radio button that is selected, with a note: '(Need to repair the connection of your PC if DNS configuration changed.)'.
- Set DNS Manually:** An unselected radio button.
- DNS Server 1:** A text field containing '0.0.0.0'.
- DNS Server 2:** A text field containing '0.0.0.0'.
- DNS Server 3:** A text field containing '0.0.0.0'.
- MAC Clone:** A section with three radio buttons: 'Default MAC' (selected), 'MAC from PC', and 'MAC manual'.
- MAC Address:** A text field containing 'C8:D3:A3:D9:B1:3E'.

At the bottom right of the main content area, there are two buttons: 'Apply Changes' and 'Reset'. On the far right, there is a 'Helpful Hints...' section with text about configuring the router to access the Internet and a 'More...' link.

When you have finished configuring the WAN settings, click the **Apply Changes** button.

If you choose Static IP, please configure the following fields;

WAN Access Type: Select **Static IP** from the drop-down menu.

IP Address: Enter the static IP address which was provided to you by your Internet Service Provider (ISP).

Subnet Mask: Enter the subnet provided by your ISP.

Default Gateway: Enter the default gateway provided by your ISP.

MTU Size: Enter the Maximum Transmission Unit size. The default value is 1500.

DNS Server 1: Enter the primary DNS server address provided by your ISP.

DNS Server 2: Enter the secondary DNS server address provided by your ISP.

MAC Clone: Select the MAC address to be used for the connection. Select **Default MAC** to use the router's MAC address. Select **MAC from PC** to copy your PC's MAC address, or select **MAC Manual** to manually enter a MAC address in the field provided.

Click **Apply Changes** to save the current configuration, or click **Reset** to discard.

The screenshot shows the 'WAN Interface' configuration page. It has two main sections: 'WAN Interface' and 'MAC Clone'. In the 'WAN Interface' section, 'WAN Access Type' is set to 'Static IP'. Below it are input fields for 'IP Address', 'Subnet Mask', 'Default Gateway', 'MTU Size' (set to 1500), 'DNS Server 1', and 'DNS Server 2' (marked as optional). The 'MAC Clone' section has three radio button options: 'Default MAC' (selected), 'MAC from PC', and 'MAC manual'. Below these is a text field containing the MAC address 'C8:D3:A3:E6:09:10'. At the bottom right are 'Apply Changes' and 'Reset' buttons.

When you have finished configuring the WAN settings, click the **Apply Changes** button.

If you choose PPPoE, please configure the following fields:

WAN Access Type: Select **PPPoE** from the drop-down menu.

User Name: Enter the user name provided to you by your ISP.

Password: Enter the password provided to you by your ISP.

Idle Time: Enter the idle time (in minutes) after which the router will disconnect due to inactivity. To disable this feature, select Continuous as the connection type below.

MTU Size: Enter the Maximum Transmission Unit size. The default value is 1492.

Static IP Address: If your ISP or network administrator requires you to have a static IP address for your connection, enter it here.

Connection Type: Select **Continuous**, **Connect on Demand**, or **Manual** as the connection type from the drop-down menu. If you select Manual, the connect and disconnect buttons will be available.

The screenshot shows the 'WAN Interface' configuration page. The 'WAN Access Type' is set to 'PPPoE'. The 'User Name' is 'user' and the 'Password' is masked with dots. The 'Service Name' is empty, with a note that it should be consistent with the PPPoE setting. The 'Idle Time' is set to 5 minutes. The 'MTU Size' is 1492. The 'Static IP Address' is empty. The 'Connection Type' is 'Connect on Demand', and there are 'connect' and 'disconnect' buttons. The 'Attain DNS Automatically' option is selected, with a note that it needs to repair the connection if DNS configuration changes. The 'Set DNS Manually' option is unselected. The 'DNS Server 1' and 'DNS Server 2' are both set to 0.0.0.0, with a note that DNS Server 2 is optional.

When you have finished configuring the WAN settings, click the **Apply Changes** button.

Wireless

Wireless Basics

This page allows you to configure the wireless LAN settings. You can also configure the wireless encryption and wireless network parameters.

Enable SSID Broadcast: Enable SSID broadcast if you want the router to transmit its SSID publicly so other wireless devices can discover it.

Enable Wireless Isolation: Enable wireless isolation to prevent connected wireless devices from connecting to other wireless devices that are also connected to the router.

Name (SSID): Enter the SSID name of the router.

Mode: Use the dropdown menu to specify the wireless mode.

Channel: Use the dropdown menu to select the wireless channel.

Band Width: Use the dropdown menu to select the channel bandwidth. If you selected the 802.11n, 802.11 b/g, or 802.11 b/g/n wireless modes, the available options are 20 MHz and 20/40MHz. For the others, 20MHz is the only option.

Max Transmission Rate: Select the maximum transmission rate for the wireless network.

Security Options: Select a wireless security encryption option. You can also choose to not use one by selecting **None**, but this is not recommended.

GO-RT-N300 // Setup Wireless Advanced Maintenance Status Help

Wireless Basics

This page is used to configure the parameters for wireless LAN clients which may connect to your Access Point. Here you may change wireless encryption settings as well as wireless network parameters.

Wireless Network

Enable SSID Broadcast: ☒
 Enable Wireless Isolation: ☐
 Name(SSID) : D-Link_GO-RT-N300
 Mode : 802.11b/g/n
 Channel: Auto Current Channel: 1
 Band Width : Auto 20/40M
 Max Transmission Rate : Auto

Security Options

Security Options : None

Apply Cancel

Helpful Hints...

NOTE: To ensure proper agency compliance and compatibility between similar products in your area, the operating channel and region must be set correctly.

Placement of the Router to Optimize Wireless Connectivity

The operating distance or range of your wireless connection can vary significantly based on the physical placement of the router. For best results, place your router:

- Near the center of the area in which your PCs will operate.
- In an elevated location such as a high shelf.
- Away from potential sources of interference, such as PCs,

Wireless Security

Wireless security helps to prevent unauthorized users from accessing your wireless network, or seeing data being passed between the router and wireless clients. The GO-RT-N300 supports two popular wireless security protocols, you should select a protocol based on the wireless clients which will be accessing your network.

Wired Equivalent Privacy (WEP) - This is an older form of wireless security and should only be used if your wireless clients do not support the newer WPA or WPA2 protocols.

Security Options: Select **WEP** from the drop-down menu.

Authentication Type: Select either **Automatic** or **Shared Key** as the authentication type.

Encryption Strength: Select the encryption strength from the drop-down menu.
64-bit - A 64-bit key comprises a string of 10 hexadecimal characters, or 5 ASCII characters.
128-bit - A 128-bit key comprises a string of 26 hexadecimal characters, or 13 ASCII characters.

Key 1-4: You can predetermine up to 4 WEP keys. Select the WEP key you wish to use by clicking on the radio buttons next to the keys. Select whether you wish to use **HEX** or **ASCII** characters in your key using the drop-down menu. Enter the desired key in the field provided.

Click **Apply** to save the current settings.


The screenshot displays the 'Security Options' configuration window. At the top, 'Security Options' is set to 'WEP'. Below this, the 'Security Encryption(WEP)' section shows 'Authentication Type' set to 'Automatic' and 'Encryption Strength' set to '64 bits'. The 'Security Encryption(WEP) Key' section contains four key entries. 'Key 1' is selected with a radio button and has the value '0000000000' entered in its text field. 'Key 2', 'Key 3', and 'Key 4' are not selected and have empty text fields. At the bottom right, there are 'Apply' and 'Cancel' buttons.

Wi-Fi Protected Access (WPA/WPA2) - This is a newer and more secure protocol for wireless security. It uses a cipher combined with a pre-shared key (password) to encrypt data being sent over the wireless network. It is recommended that you use this security method if it is supported by your wireless clients.

Security Options: Select **WPA-PSK/WPA2-PSK AES** from the drop-down menu.

Pre-Shared Key: Enter a pre-shared key (password) to secure your wireless network. Wireless clients will require this password in order to connect to your network. It is recommended that you make a record of this password for future reference.

Click **Apply** to save the current settings.

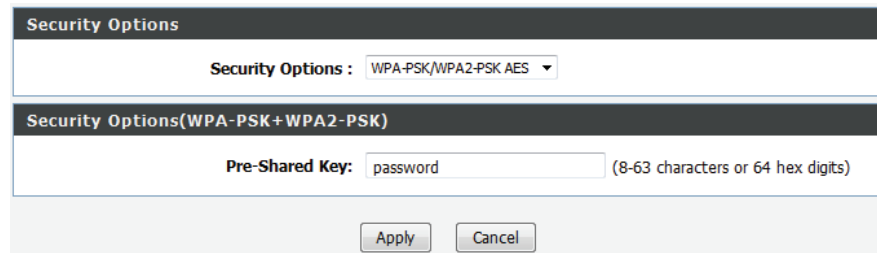


The screenshot shows a configuration window titled "Security Options". It contains a dropdown menu labeled "Security Options :" with "WPA-PSK/WPA2-PSK AES" selected. Below this is a section titled "Security Options(WPA-PSK+WPA2-PSK)" which includes a text input field labeled "Pre-Shared Key:" containing the word "password". To the right of the input field is a note: "(8-63 characters or 64 hex digits)". At the bottom right of the window are two buttons: "Apply" and "Cancel".

Wi-Fi Protected (WPS) Setup

Wi-Fi Protected Setup (WPS) System is a simplified method for securing your wireless network during the “Initial setup” as well as the “Add New Device” processes. The Wi-Fi Alliance (WFA) has certified it across different products as well as manufacturers. The process is just as easy, as pressing a button for the Push-Button Method or correctly entering the 8-digit code for the Pin-Code Method. The time reduction in setup and ease of use are quite beneficial, while the highest wireless security setting of WPA2 is automatically used.


If you wish to use the Push-Button Connection (PBC) method, simply press the WPS button on the side of the router. The power LED will begin to flash. Within 120 seconds, press the WPS button on the device that you wish to connect. The power LED will turn solid green if the connection is successful.

To connect using the PIN method, click **Next** to begin the WPS setup process.

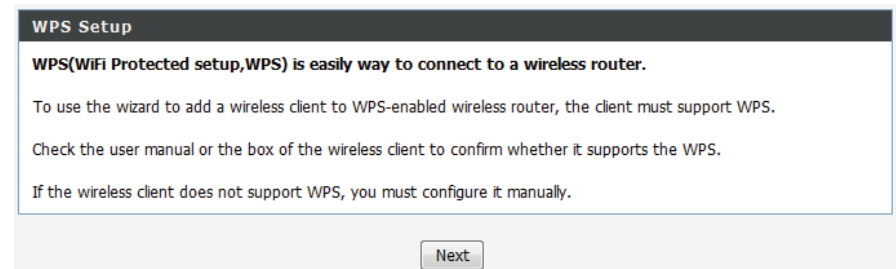

The screenshot shows the 'WPS Setup' screen. At the top, it says 'WPS Setup'. Below that, it states 'WPS(WiFi Protected setup,WPS) is easily way to connect to a wireless router.' followed by instructions: 'To use the wizard to add a wireless client to WPS-enabled wireless router, the client must support WPS. Check the user manual or the box of the wireless client to confirm whether it supports the WPS. If the wireless client does not support WPS, you must configure it manually.' At the bottom right, there is a 'Next' button.

Enter the PIN for the wireless NIC and click **Start PIN**. If successful, you will then be taken to another screen and a message will tell you to run WPS in the client device within 2 minutes.

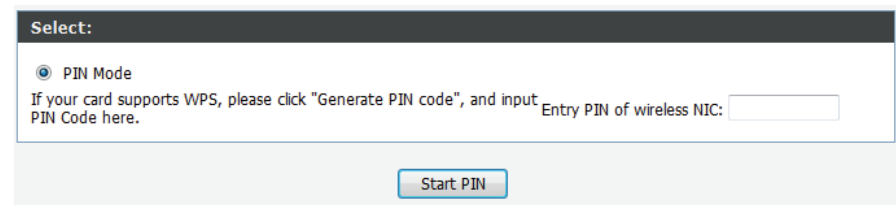

The screenshot shows the 'Select:' screen. It has a radio button selected for 'PIN Mode'. Below this, it says 'If your card supports WPS, please click "Generate PIN code", and input PIN Code here.' followed by a text input field labeled 'Entry PIN of wireless NIC:'. At the bottom right, there is a 'Start PIN' button.

Advanced Wireless

Enable Wireless: Enable wireless on your network.

Fragment Threshold (256-2346): The fragmentation threshold, which is specified in bytes, determines whether packets will be fragmented. Packets exceeding the 2346 byte setting will be fragmented before transmission. 2346 is the default setting.

RTS Threshold (1-2347): This value should remain at its default setting of 2346. If inconsistent data flow is a problem, only a minor modification should be made.

Preamble Type: Use the dropdown menu to specify whether the Router should use the Short Preamble or Long Preamble type. The preamble type defines the length of the CRC (Cyclic Redundancy Check) block for communication between the Router and roaming wireless adapters.

Radio Power: Use the transmit power of the antennas in percentage.

HT20/40 Coexistence: Enable this feature to force the use of the 40 MHz band even in heavily congested areas. Enabling this feature may reduce transmission speeds when there are a number of other wireless N devices operating within the same vicinity. When disabled, the GO-RT-N300 will drop back to the slower 20 MHz when heavy congestion is detected on the 40 MHz band.

Click the **Apply Changes** button to save any changes made.

Advanced Wireless Settings

Enable Wireless : ☒

Fragment Threshold(256-2346) :

RTS Threshold(1-2347) :

Preamble Type :

Radio Power (Percent) :

HT20/40 Coexistence : ☒ Enabled ☐ Disabled

WPS Setup

PIN of the router : 14394515

Enable WPS : ☒

Disable PIN : ☐

Keep current configuration : ☒

Access Control List

WPS Setup

PIN of the Router: Displays the current PIN for the router's WPS connection. Wireless clients connecting to the router using the PIN method should enter this PIN in order to connect.

Enable WPS: Check the box to enable devices to connect to the router using WPS.

Disable PIN: Check the box to disable the PIN connection method. If this option is disabled, clients can only use the PBC method to connect.

Keep Current Configuration: Check this box to lock the current configuration. If this option is disabled, wireless clients will not be able to automatically adjust the router's WPS settings when connecting.

ACL Setup: Click this button to be taken to the Access Control setup tab, where you can configure filters to control which wireless clients access your network, and which network resources they can access. For more information on configuring access control, please refer to "Access Control List" on page <?>.

Click **Apply Changes** to save the current configuration.

The screenshot displays the WPS Setup configuration page. It features a dark header for 'WPS Setup' and a light gray header for 'Access Control List'. The WPS Setup section contains four settings: 'PIN of the router' (14394515), 'Enable WPS' (checked), 'Disable PIN' (unchecked), and 'Keep current configuration' (checked). The Access Control List section has an 'ACL Setup' button. At the bottom of the page is an 'Apply Changes' button.

Access Control List

Click the **ACL Setup** button to edit the ACL (Access Control List). This takes you to the screen below.

Enable Wireless Access Control Mode: Click to enable Wireless Access Control Mode. In this mode, only listed wireless devices will be allowed to connect to the wireless network.

Click the **Apply** button when you are done.

MAC Address: Enter the MAC Address of a device you wish to allow access for to the WLAN.

Click the **Add** button when you are done. This will add the device's MAC Address to the table above.
Click the **Delete** button and the button in the Select field to delete the device.

Wireless Access Control Mode

☐ Enable Wireless Access Control Mode

MAC Address

Select

Apply

Delete Selected

Delete All

MAC Address:

(ex. 00e086710502)

Add



Cancel

Wireless Repeater

This page allows you to configure wireless repeater settings for the GO-RT-N300.

Repeater Enabled: Enable wireless on your network.

SSID of AP: Click the **Site Survey** button to enable the router to search for nearby wireless networks. This will take about 30 seconds.

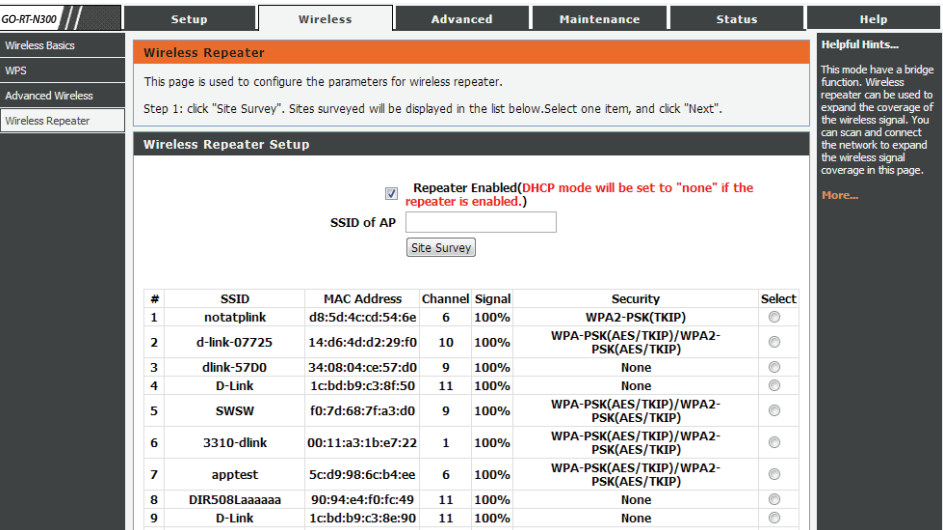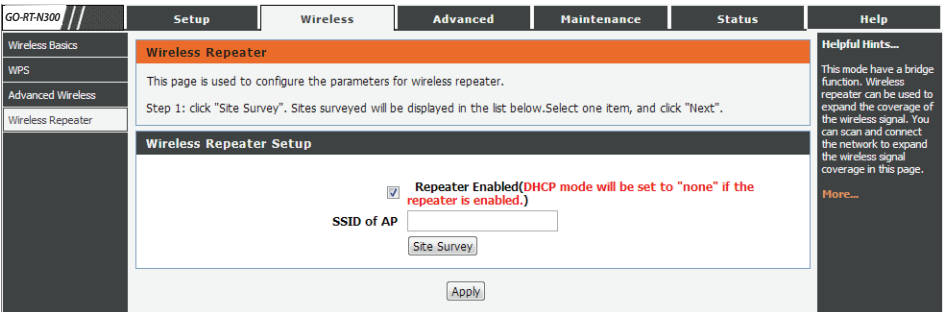

A list of wireless networks that have been found will then appear. Select a network and click the **Next** button to move to the next step.

You can then set up wireless security for the network.

If you select WEP as the security option, the following settings below will appear.

Authentication Type: Select the authentication type.

Encryption Strength: Select the encryption strength.

Security Encryption (WEP) Key: Select up to four WEP keys.

The screenshot shows the 'Wireless Security Settings' page for a GO-RT-N300 router. The 'Wireless' tab is selected. The 'Encryption' dropdown is set to 'WEP'. Under 'Security Encryption(WEP)', the 'Authentication Type' is 'Automatic' and the 'Encryption Strength' is '64 bits'. The 'Wireless WEP Key Setup' section shows four keys, each with a radio button and a text input field. An 'Apply' button is at the bottom right. A red warning message states: 'Attention: if you select WEP, you must set wireless WEP secret key.'

If you have selected any WPA option, the following setting will appear.

Pre-shared Key: Enter a pre-shared key.

Click the **Apply** button to save any changes made. You will be taken to the next page.

You can then set up wireless security for the network.

IP Address: Enter the IP address.

Subnet Mask: Enter the subnet mask.

Click the **Finish** button to save the configuration.

The screenshot shows the 'Wireless Security Settings' page for a GO-RT-N300 router. The 'Wireless' tab is selected. The 'Encryption' dropdown is set to 'WPA-PSK[TKIP]'. Under 'Security Options(WPA-PSK)', the 'Pre-Shared Key' field is empty, with a note '(8-63 characters or 64 hex digits)' to its right. An 'Apply' button is at the bottom right. A red warning message states: 'Attention: if you select WEP, you must set wireless WEP secret key.'

Advanced

Access Control List

This page allows you to set up an Access Control List to restrict the types of data packets that can enter the network from the Internet.

WAN Setting: Use the drop-down menu to select either WAN or IP address.

IP Address: This option will only be seen if you have selected IP address above. Enter the IP address range for this rule.

Services Allowed: Select the type of Internet service of which packets will be allowed into the network:

Web - Allows web services from the specified IP address into the network. You will also be required to enter a port number for the IP address range.

Ping - Allows your network to receive 'ping' requests from the specified IP address range.

The Current ACL Table will show a summary of current access control rules.

Click Delete to remove a rule from the list.

Click the **Add** button to save and add these settings to the Current ACL table.

WAN ACL Configuration

Entries in this ACL table are used to permit certain types of data packets from Internet network to the Gateway. Using of such access control can be helpful in securing or restricting the Gateway management.

ACL Settings

WAN Setting:

IP Address

IP Address:

-

(The IP 0.0.0.0 represent any IP)

Services Allowed:

☐ web

☐ ping

Add

Reset

Current ACL Table

Select	IP Address/Interface	Service	Port	Action
1	192.168.0.6-192.168.0.6	web	80	Delete

Port Triggering

This page allows you to enable port triggering to specify inbound traffic to be sent to specific ports while other ports are in use for outbound traffic.

NAT Port Trigger: Enable or disable the Nat Port Trigger.

Click the **Apply Changes** button to save any changes made.

Usual Application Name: Select an application from the pulldown list.

User-defined Application Name: Enter the name of an application.

Start Match Port: Enter a start match port.

End Match Port: Enter an end match port.

Trigger Protocol: Select a protocol from the pulldown menu.

Start Relate Port: Enter a start relate port.

End Relate Port: Enter an end relate port.

Open Protocol: Select a protocol from the pulldown menu.

Nat Type: Select whether it will be outgoing or incoming.

Click the **Apply Changes** button to save any changes made.

The application will then be added to the Current Porttrigger Table. Click the **Delete** button in the Action field for an application type if you wish to delete it.

Port Triggering

Entries in this table are used to restrict certain types of data packets from your local network to Internet through the Gateway. Use of such filters can be helpful in securing or restricting your local network.

Port Triggering Status

Nat Port Trigger: ☐ Enable ☒ Disable

Application Type

☒ Usual Application Name: Select One

☐ User-defined Application Name:

Start Match Port	End Match Port	Trigger Protocol	Start Relate Port	End Relate Port	Open Protocol	Nat Type
		UDP			UDP	outgoing
		UDP			UDP	outgoing
		UDP			UDP	outgoing
		UDP			UDP	outgoing
		UDP			UDP	outgoing
		UDP			UDP	outgoing
		UDP			UDP	outgoing
		UDP			UDP	outgoing

Current Port Triggering Table

ServerName	Trigger Protocol	Direction	Match Port	Open Protocol	Relate Port	Action
------------	------------------	-----------	------------	---------------	-------------	--------

Helpful Hints...

The router monitors outgoing traffic. When the router detects a specific outgoing traffic, it will remember the IP address of the computer that sent data and the input port of the "trigger". The trigger input port on the flow of information is then sent to trigger the computer. Applications from Internet can access to the local computer through Port Mapping/Port Triggering, so lan hosts can provide service such as ftp, http, games and so on. Once the port trigger is enabled, the requests from the Internet will be sent to the appropriate server in LAN.

[More...](#)


DMZ

Sometimes you may want a computer exposed to the outside world for certain types of applications. If you choose to expose a computer, you can enable the Demilitarized Zone (DMZ). This option will expose the chosen computer completely to the outside world.

Enable DMZ: Check the box to enable the DMZ function.

DMZ Host IP Address: Enter the IP address of the machine that you wish to place in the DMZ. If the machine receives an IP address from the DHCP server, you should create a static DHCP reservation to ensure that the machine always receives the same address from the DHCP server.

Click **Apply Changes** to save the current configuration.

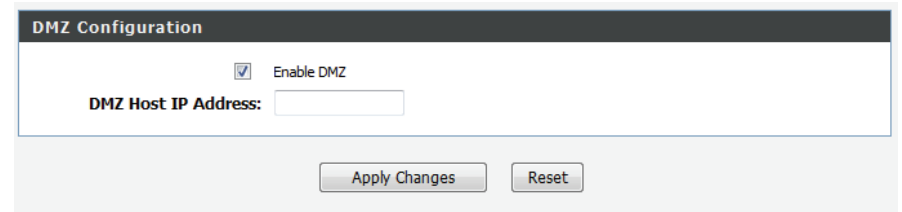


The image shows a web-based configuration interface titled "DMZ Configuration". It features a checkbox labeled "Enable DMZ" which is checked. Below this is a text input field labeled "DMZ Host IP Address:". At the bottom of the interface are two buttons: "Apply Changes" and "Reset".

URL Block

This page allows you to block specific websites or keywords in order to prevent network clients from accessing them.

URL Blocking Capability: Enable or disable URL Blocking.

Click the **Apply Changes** button to save any changes made.

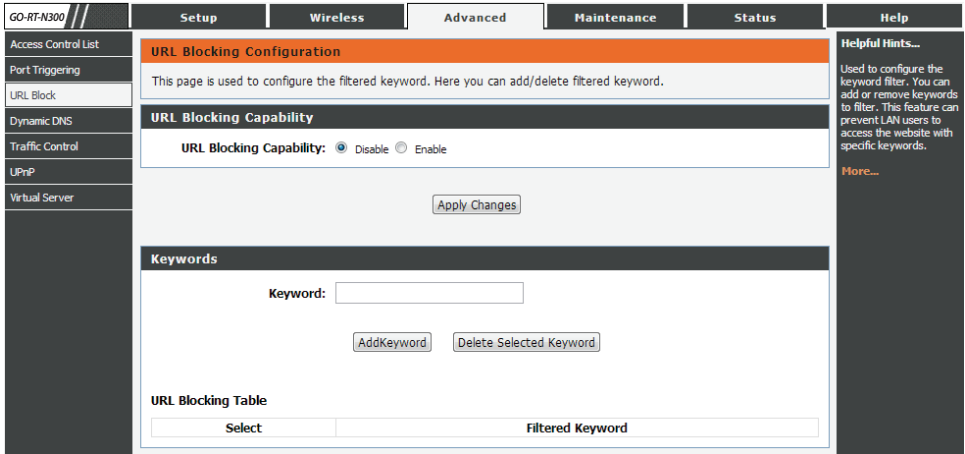

Keyword: Type a keyword or a URL site that you want to prevent network users from accessing.

Click the **Add Keyword** button to save any changes made. The keyword will then be added to the URL Blocking Table below. To delete a keyword, select the keyword in the table and click the **Delete Selected Keyword** button.

Dynamic DNS

The DDNS (Dynamic Domain Name System) feature allows you to host a server (Web, FTP, Game Server) using a domain name that you have purchased (www.whateveryournameis.com) with your dynamically assigned IP address. Most broadband Internet Service Providers assign dynamic (changing) IP addresses. Using a DDNS service provider, your friends can enter your domain name to connect to your server no matter what your IP address is.

Enable: Check the box to enable DDNS.

DDNS Provider: Choose your DDNS provider from the dropdown menu.

Host Name: Enter the Host Name that you registered with your DDNS service provider.

Username: Enter the Username for your DDNS account.

Password: Enter the Password for your DDNS account.

The screenshot shows the 'Dynamic DNS Configuration' page in the D-Link GO-RT-N300 web interface. The page has a sidebar on the left with a menu containing 'Access Control List', 'Port Triggering', 'URL Block', 'Dynamic DNS', 'Traffic Control', 'UPnP', and 'Virtual Server'. The main content area is titled 'Dynamic DNS Configuration' and includes a sub-header 'DDNS Configuration'. Below this, there is an 'Enable' checkbox, a 'DDNS provider' dropdown menu (currently set to 'dlinkddns.com(Free)'), and a 'Hostname' text input field. Under 'Account Settings', there are 'Username' and 'Password' text input fields. At the bottom of the configuration section are 'Add' and 'Remove' buttons. Below the configuration section is a 'Dynamic DDNS Table' with columns for 'Select', 'State', 'Service', 'Hostname', and 'Username'. A 'Helpful Hints...' sidebar on the right provides additional information about DDNS services.

Click the **Add** button to save any changes made. The DDNS Configuration will then be added to the Dynamic DDNS Table below. To delete an existing DDNS Configuration, select a configuration in the table and click the **Remove** button.

Traffic Control

This page allows you to configure traffic bandwidth and rules for network traffic.

Total Bandwidth Enter the total bandwidth.
(0, Unlimited):

Auto Traffic Shaping: Click to enable auto traffic shaping.

GO-RT-N300

Access Control List

Port Triggering

URL Block

Dynamic DNS

Traffic Control

UPnP

Virtual Server

Setup

Wireless

Advanced

Maintenance

Status

Help

Traffic Control

This page is used to configure traffic bandwidth and rules.

Total Bandwidth(0, Unlimited):

UP Stream kbps

0

Down Stream kbps

0

Auto Traffic Shaping

Apply

QoS Rules

Protocol	Source Port	Dest Port	Source IP	Dest IP	Garanted Bandwidth(Kbps)		Max Bandwidth(Kbps)		Delete
					Up Floor	Down Floor	Up Ceiling	Down Ceiling	

Add

Delete

Helpful Hints...

You can configure traffic shaping on this page.

More...

QoS Rules

Click the **Add** button once to view the QoS Rules settings.

Protocol: Select the data protocol which you want to set a QoS rule for.

Source IP: Enter the source IP.

Dest IP: Enter the destination IP.

Source Port: Enter the source port number if applicable. This box will be greyed out for certain protocols.

Up Floor: Enter the minimum upload speed.

Down Floor: Enter the minimum download speed.

Source Netmask: Enter the source netmask.

Dest Netmask: Enter the destination netmask.

Dest Port: Enter the destination port.

Up Ceiling: Enter the maximum upload speed.


Down Ceiling: Enter maximum download speed.

Click the **Add** button to save any changes made. The QoS Rule will then be added to the QoS Rules Table. To delete an existing QoS Rule, select it in the QoS rules Table and click the **Delete** button.

UPnP

This page allows you to enable the Universal Plug and Play (UPnP) feature.

UPnP: Click **Enable** to use the UPnP feature. UPnP provides compatibility with networking equipment, software and peripherals.

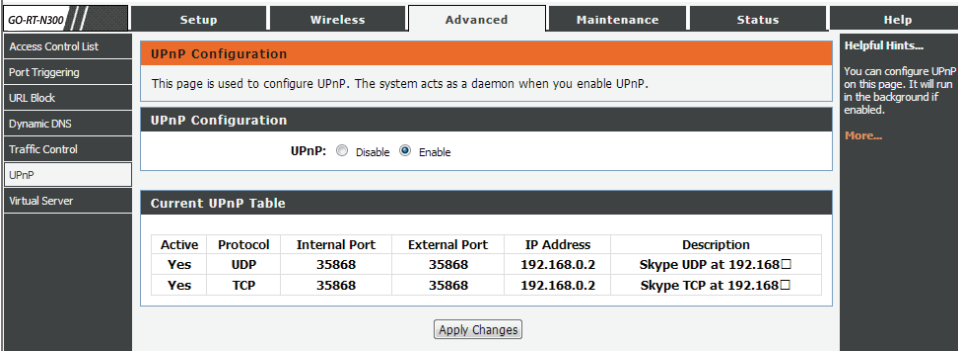

Click the **Apply Changes** button to save any changes made.

Virtual Server

The GO-RT-N300 can be configured as a virtual server so that remote users accessing Web or FTP services via the public IP address can be automatically redirected to local servers in the LAN (Local Area Network).

The GO-RT-N300 firewall feature filters out unrecognized packets to protect your LAN network so all computers networked with the GO-RT-N300 are invisible to the outside world. If you wish, you can make some of the LAN computers accessible from the Internet by enabling Virtual Server. Depending on the requested service, the GO-RT-N300 redirects the external service request to the appropriate server within the LAN network.

The GO-RT-N300 is also capable of port-redirection, meaning that incoming traffic to a particular port may be redirected to a different port on the server computer.

For a list of ports for common applications, please visit http://support.dlink.com/faq/view.asp?prod_id=1191.

The Virtual Server page allows you to open a single port. If you would like to open a range of ports, refer to the next page.

Usual Service Select an application from the drop-down menu or
Name: type a name in the next field.

User-defined Enter a service name.
Service Name:

Protocol: Select **TCP** or **UDP** from the **Protocol** drop-down menu.

WAN Port: Enter the WAN port number.

LAN Open Port: Enter the LAN Open port number.

LAN IP Address: Enter the IP address of the computer on your local network that you want to allow the incoming service to.

The screenshot shows the 'Virtual Server' configuration page in the GO-RT-N300 router's web interface. The page is divided into several sections:


- Navigation Bar:** Includes tabs for Setup, Wireless, Advanced, Maintenance, Status, and Help.
- Left Sidebar:** Lists various configuration options: Access Control List, Port Triggering, URL Block, Dynamic DNS, Traffic Control, UPnP, and Virtual Server (which is currently selected).
- Main Content Area:**
 - Virtual Server Header:** A title bar with an orange background.
 - Introductory Text:** A message stating, 'The page allows you to config virtual server, so others can access the server through the Gateway.'
 - Service Type Section:** Contains two radio buttons: 'Usual Service Name' (selected) and 'User-defined Service Name'. Below these are fields for 'Protocol' (set to TCP), 'WAN Port' (113), 'LAN Open Port' (113), and 'LAN Ip Address'.
 - Apply Changes Button:** A button located below the service type fields.
 - Current Virtual Server Forwarding Table:** A table with columns: ServerName, Protocol, Local IP Address, Local Port, WAN Port, State, and Action.
- Right Sidebar:** Contains 'Helpful Hints...' and a 'More...' link.

Click the **Apply Changes** button to save any changes made. The virtual server will then be added to the Current Virtual Server Forwarding Table below. To delete or disable a virtual server, click the **Delete** or **Disable** buttons in the Action field of the virtual server in the table.

Maintenance

Reboot

This page allows you to reboot your system with the current setting or reset it to the factory default setting.

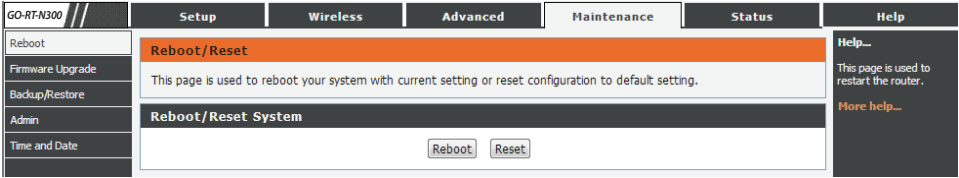

Click the **Reboot** button to reboot the system. To reset the system to the factory default setting, click the **Reset** button.

Firmware Upgrade

This page allows you to upgrade the firmware of the Router. If you plan to install new firmware, make sure the firmware you want to use is on the local hard drive of the computer. Please check the D-Link support site for firmware updates at <http://support.dlink.com>. You can download firmware upgrades to your hard drive from the D-Link support site.


Choose File: After you have downloaded the new firmware, click **Browse** to locate the firmware update on your hard drive.

The screenshot shows the 'Upgrade Firmware' page of the D-Link GO-RT-N300 web interface. The left sidebar contains a menu with 'Reboot', 'Firmware Upgrade', 'Backup/Restore', 'Admin', and 'Time and Date'. The main content area has a top navigation bar with 'Setup', 'Wireless', 'Advanced', 'Maintenance', 'Status', and 'Help'. The 'Upgrade Firmware' section is highlighted in orange. It contains a warning message: 'This page allows you upgrade the Wireless Router firmware to new version. Please note, do not power off the device during the upload because it may crash the system. Note: System will reboot after file is uploaded.' Below this is a 'Select File' section with a 'Choose File' button and the text 'No file chosen'. There is also a checkbox labeled 'Automatically reset default after firmware upgraded'. At the bottom right of the main content area are 'Upload' and 'Reset' buttons. On the far right, a 'Helpful Hints...' sidebar contains an 'Attention!' note: 'After clicking Upload, please do not interrupt when the software is sending to the router and router is restarting.' and a 'More...' link.

Click the **Upload** button to upload a file to the router after you have selected it, or click the **Reset** button to cancel the selection.

Backup/Restore

This page allows you to save the router’s current configuration file onto your computer’s hard drive or load a saved file from your hard drive.

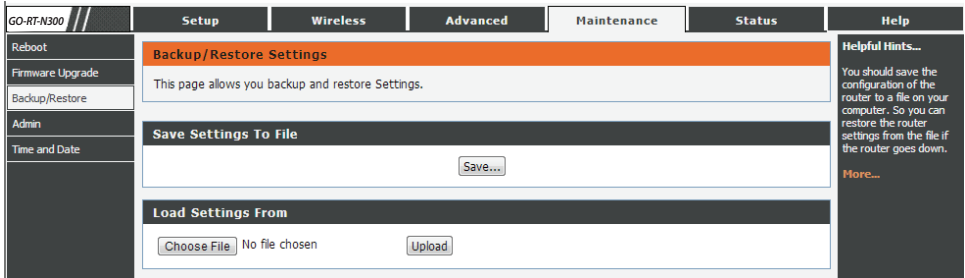

Click the **Save** button to download the current configuration settings as a file onto your hard drive.
To load a previously saved settings file, click the **Choose File** button to locate the file on your hard drive, then click the **Upload** button.

Admin

This page allows you to add a user account to the router's Web server. You can also delete or modify existing accounts.

User Name: Enter a username.

Privilege: The user has Root privilege.

Old Password: Enter the current password of the account.

New Password: Enter the new password for the account.

Confirm Password: Retype the new password.

User Account Configuration

This page is used to add user account to access the web server of Wireless Router. Empty user name or password is not allowed.

Configuration

User Name:

Privilege:

Old Password:

New Password:

Confirm Password:

User Account Table

Select	User Name	Privilege
☐	Admin	root

Helpful Hints...

Attention! The password is not your ISP account password, but is the admin password to log into the router setup interface. The password must be written down and saved in a safe place. You have to reset the router if you forget the password and re-configure from scratch.

[More...](#)

Click the **Add** button to save any changes made. The user account will also be added to the User Account Table below. To modify an existing user account, click the **Select** tab next to the user account in the table, edit the user settings you wish to change, and then click the **Modify** button.

To delete an existing account, click the **Select** tab next to the user account in the table and then click the **Delete** button.

Time and Date

This page allows you to edit the system time and Network Time Protocol (NTP). You can configure, update, and maintain the correct time on the system clock, and configure Daylight Saving.

System Time: Enter the correct year, month, day, and time.

Daylight Saving Offset: Enter the correct year, month, day, and time.

Select the daylight saving offset from the drop-down menu to have the router adjust the time to reflect the starting or finishing of daylight saving in your region. This adjustment should be made manually each time daylight saving time begins or ends.

Click the **Apply Changes** button to save the current configuration.

Network Time Protocol (NTP) automatically synchronizes your router's time and date settings with an Internet-based time server.

State: Select Enable to enable the NTP server.

Server: Enter the name of the NTP server.

Server2: Enter the name of the second NTP server.

Interval: Enter the time period that you want the NTP server to synchronize time with the devices on the network. The default value is one hour.

Time Zone: Select the time zone you are in from the pulldown menu.

GMT Time: This shows the current GMT (Greenwich Mean Time) time.

Click the **Apply Changes** button to save any changes made. To start the NTP, click the **Get GMT Time** button to obtain the GMT time.

Status

Device Info

This page displays the current status and basic settings of the router.

System: Displays the router's time and firmware version.

LAN Configuration: Displays the MAC address and the private (local) IP settings for the router.

WLAN Configuration: Displays the wireless MAC address and your wireless settings such as SSID and Channel.

WAN Configuration: Displays the MAC address and the public IP settings for the router.

Click the **Refresh** button to view the most current information.

Product Page: GO-RT-N300 Hardware version: A1 Firmware version: 1.00

D-Link Select Language English

GO-RT-N300 // Setup Wireless Advanced Maintenance Status Help

Device Info Active Client Table Statistics

Wireless Router Status

This page shows the current status and some basic settings of the device.

System

Product Name	GO-RT-N300
Uptime	0 00:10:05
Date/Time	Thu Jan 1 00:10:05 1970

LAN Configuration

IP Address	192.168.0.1
Subnet Mask	255.255.255.0
DHCP Server	Enable
MAC Address	C8:D3:A3:E6:0A:81

WLAN Configuration

Wireless Mode	Enabled
SSID	AP
Encryption	D-Link_GO-RT-N300
Channel	WPA/WPA2 Mixed
Broadcast SSID	2
WPS	Enabled
Repeater Status	Disconnected

WAN Configuration

Interface	Protocol	IP Address	Gateway	DNS	Status
WAN	DHCP	172.17.5.130	172.17.5.254	192.168.168.249 192.168.168.201 192.168.168.250	Link Up(DHCP Client)

Refresh

Copyright © 2008-2013 D-Link Systems, Inc.


Helpful Hints...
This page displays a summary overview of your router status, including device, firmware version, summary of your Internet configuration including ethernet status.
[More...](#)

Active Client Table

This page displays lists of all wired and wireless clients. The IP address and MAC address of each client is displayed in the tables.

Active Wired Client Table: This table displays all active wired clients.

Active Wireless Client Table: This table displays all active wireless clients.

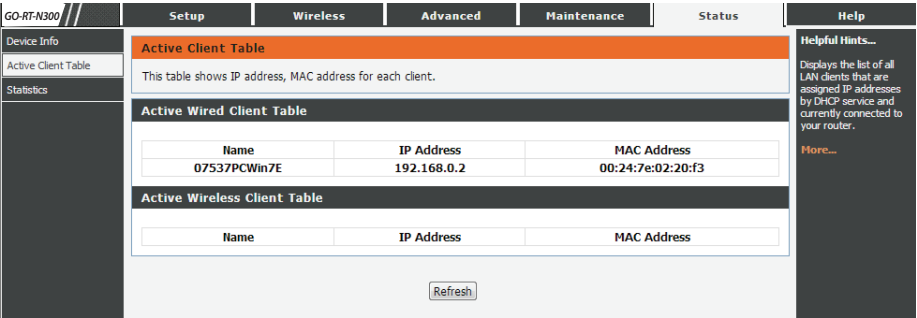

Click the **Save Settings** button to save any changes made.

Statistics

This page displays the statistics for packets that have been transmitted and received on the network on the router’s WAN and LAN ports, and wireless bands.

GO-RT-N300

Device Info

Active Client Table

Statistics

Setup

Wireless

Advanced

Maintenance

Status

Help

Statistics

This page shows the packet statistics for transmission and reception regarding to network interface.

Interface	Rx pkt	Rx err	Rx drop	Tx pkt	Tx err	Tx drop
LAN1						
LAN2						
LAN3	44194	0	0	42260	0	0
LAN4						
WAN	43581	0	0	39582	0	0
WLAN	16896	0	0	268	0	352

Refresh

Helpful Hints...

This is a summary of the number of packets that have passed on each interface since the router was last initialized.

More...

Click the **Refresh** button to refresh the router’s traffic statistics.

Help

This section provides an explanation of each configuration or setting for the GO-RT-N300. Click on the links to be taken to the help text for that particular section of router's setup.

GO-RT-N300

Menu

Setup

Wireless

Advanced

Maintenance

Status

Setup

Wireless

Advanced

Maintenance

Status

Help

Help Menu

- Setup
- Wireless
- Advanced
- Maintenance
- Status

Setup Help

- Wizard
- Local Network
- Internet Setup

Wireless Help

- Wireless Basics
- WlWps
- Advanced Wireless
- Wireless Repeater

Advanced Help

- Access Control List
- Port Triggering
- DMZ
- URL Block
- DDNS
- Traffic Control
- UPnP
- Virtual Server

Wireless Security

This section will show you the different levels of security you can use to protect your data from intruders. The GO-RT-N300 offers the following types of security:

- WPA2 (Wi-Fi Protected Access 2)
- WPA (Wi-Fi Protected Access)
- WPA2-PSK (Pre-Shared Key)
- WPA-PSK (Pre-Shared Key)

What is WPA?

WPA (Wi-Fi Protected Access), is a Wi-Fi standard that was designed to improve the security features of WEP (Wired Equivalent Privacy).

The 2 major improvements over WEP:

- Improved data encryption through the Temporal Key Integrity Protocol (TKIP). TKIP scrambles the keys using a hashing algorithm and, by adding an integrity-checking feature, ensures that the keys haven't been tampered with. WPA2 is based on 802.11i and uses Advanced Encryption Standard (AES) instead of TKIP.
- User authentication, which is generally missing in WEP, through the extensible authentication protocol (EAP). WEP regulates access to a wireless network based on a computer's hardware-specific MAC address, which is relatively simple to be sniffed out and stolen. EAP is built on a more secure public-key encryption system to ensure that only authorized network users can access the network.

WPA-PSK/WPA2-PSK uses a passphrase or key to authenticate your wireless connection. The key is an alpha-numeric password between 8 and 63 characters long. The password can include symbols (!?*&_) and spaces. This key must be the exact same key entered on your wireless router or access point.

WPA/WPA2 incorporates user authentication through the Extensible Authentication Protocol (EAP). EAP is built on a more secure public key encryption system to ensure that only authorized network users can access the network.

Connect to a Wireless Network

Windows® 8

WPA/WPA2


It is recommended to enable wireless security (WPA/WPA2) on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the security key (Wi-Fi password) being used.

To join an existing network, locate the wireless network icon in the taskbar, next to the time display.




Wireless Icon

Clicking on this icon will display a list of wireless networks which are within connecting proximity of your computer. Select the desired network by clicking on the network name.

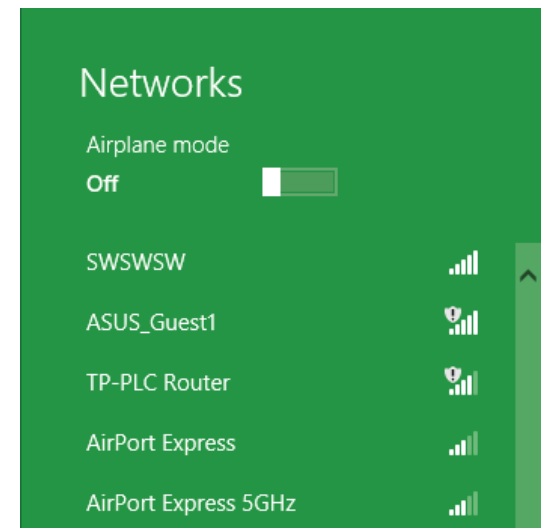


You will then be prompted to enter the network security key (Wi-Fi password) for the wireless network. Enter the password into the box and click **Next**.

If you wish to use Wi-Fi Protected Setup (WPS) to connect to the router, you can also press the WPS button on your router at this point to enable the WPS function.

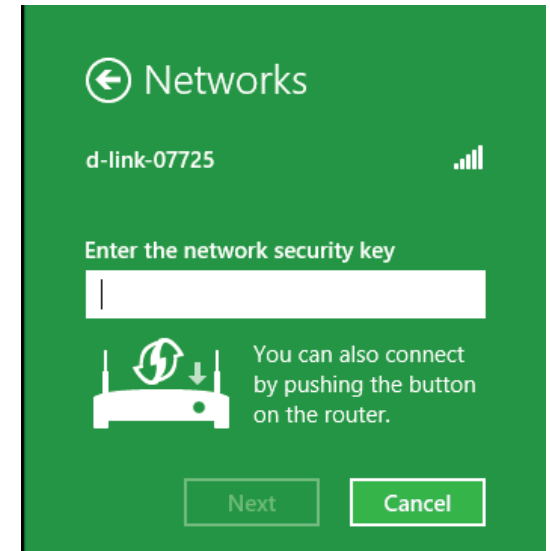


When you have established a successful connection to a wireless network, the word **Connected** will appear next to the name of the network to which you are connected.

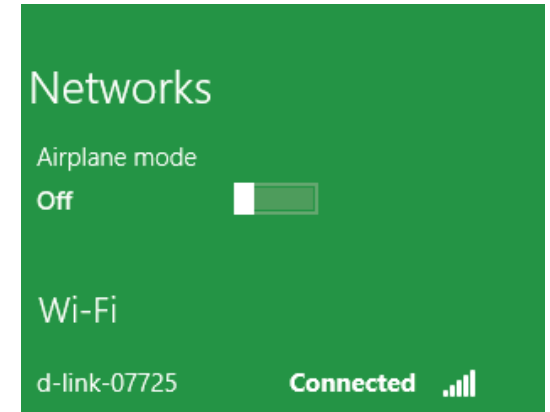

Using Windows® 7


It is recommended to enable wireless security (WPA/WPA2) on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the security key or passphrase being used.

1. Click on the wireless icon in your system tray (lower-right corner).

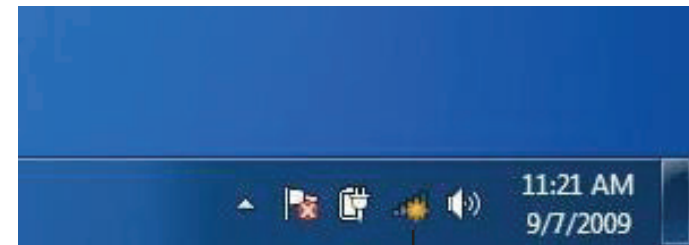

Wireless Icon

2. The utility will display any available wireless networks in your area.

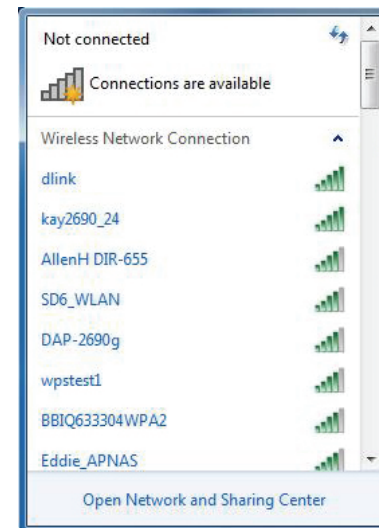


3. Highlight the wireless network (SSID) you would like to connect to and click the **Connect** button.

If you get a good signal but cannot access the Internet, check your TCP/IP settings for your wireless adapter. Refer to the Networking Basics section in this manual for more information.




4. The following window appears while your computer tries to connect to the router.

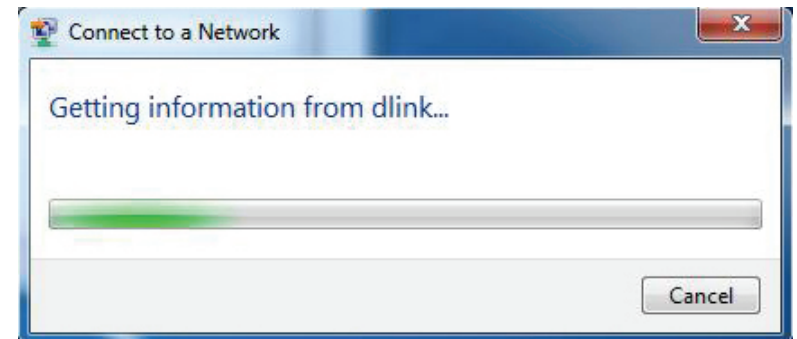

5. Enter the same security key or passphrase that is on your router and click **Connect**. You can also connect by pushing the WPS button on the router.


It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the security settings are correct. The key or passphrase must be exactly the same as on the wireless router.

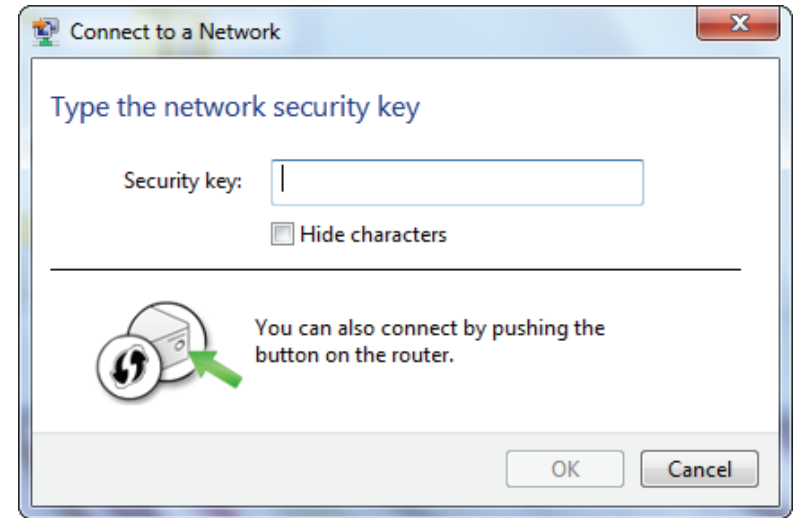


Configure WPS

The WPS feature of the router can be configured using Windows® 7. Carry out the following steps to use Windows® 7 to configure the WPS feature of the router:


1. Click the **Start** button and select **Computer** from the Start menu.

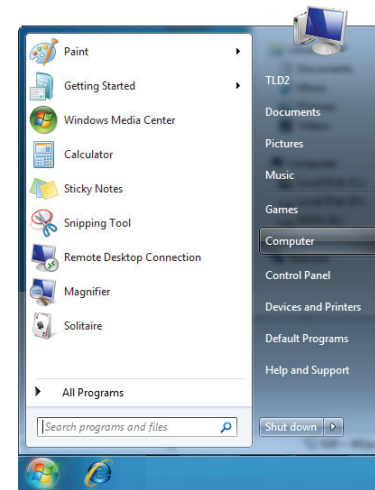


2. Click the **Network** option.

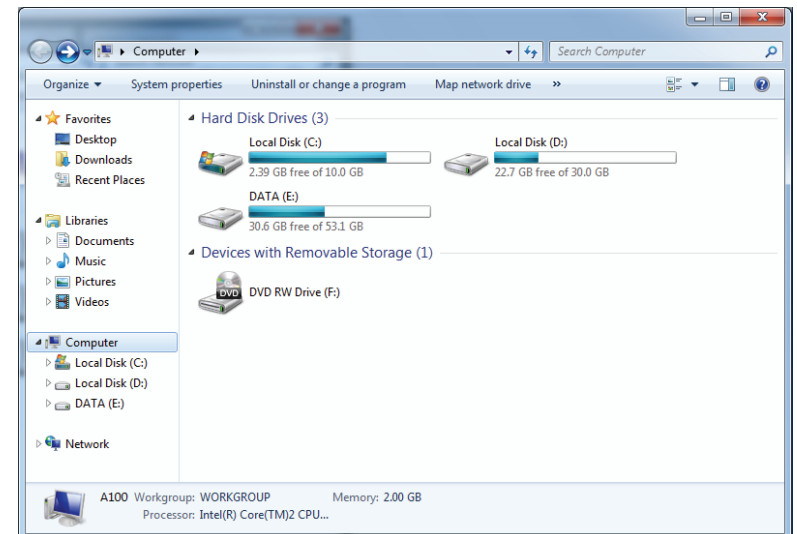


3. Double-click the GO-RT-N300.

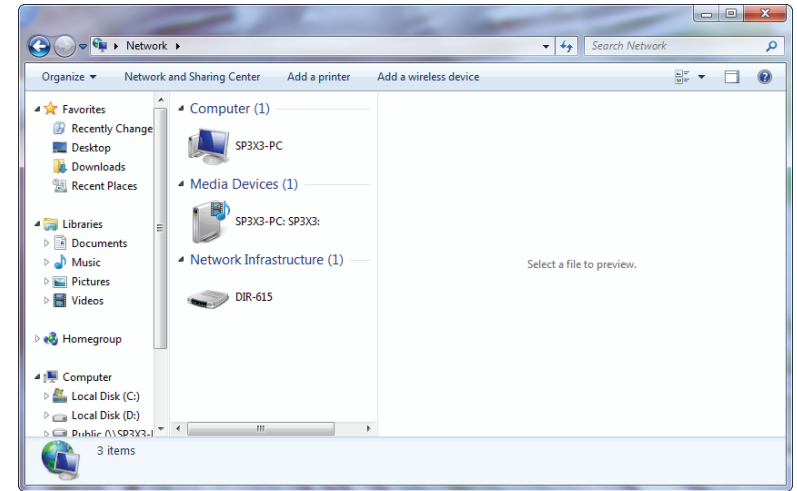

4. Input the WPS PIN number (on the Router label) or in the **Setup** > **Wireless Setup** menu in the Router's Web UI and click **Next**.

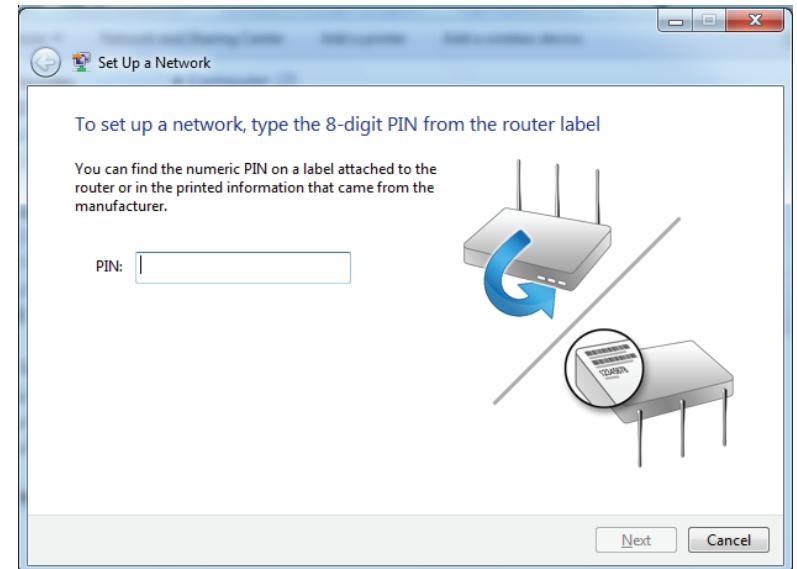


5. Type a name to identify the network.

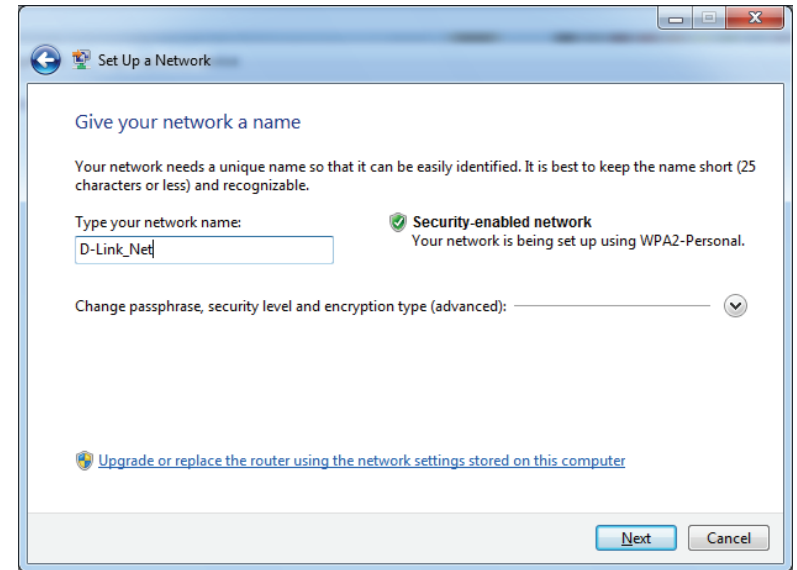


6. To configure advanced settings, click the  icon.

Click **Next** to continue.

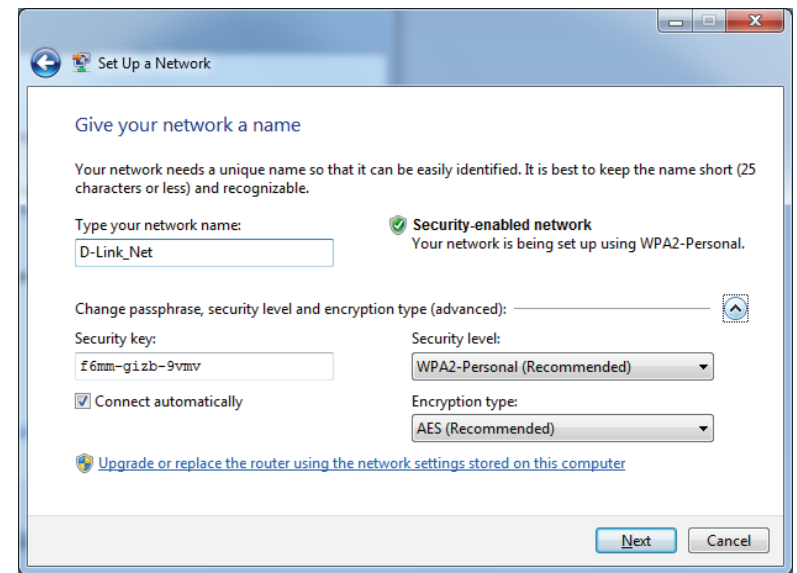

7. The following window appears while the Router is being configured.


Wait for the configuration to complete.

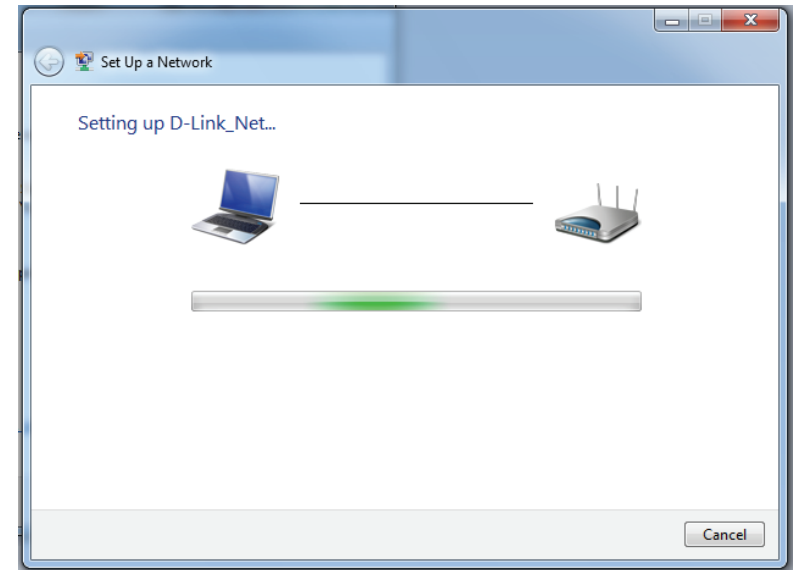

8. The following window informs you that WPS on the GO-RT-N300 has been setup successfully.

Make a note of the security key as you may need to provide this security key if adding an older wireless device to the network in the future.

9. Click **Close** to complete WPS setup.

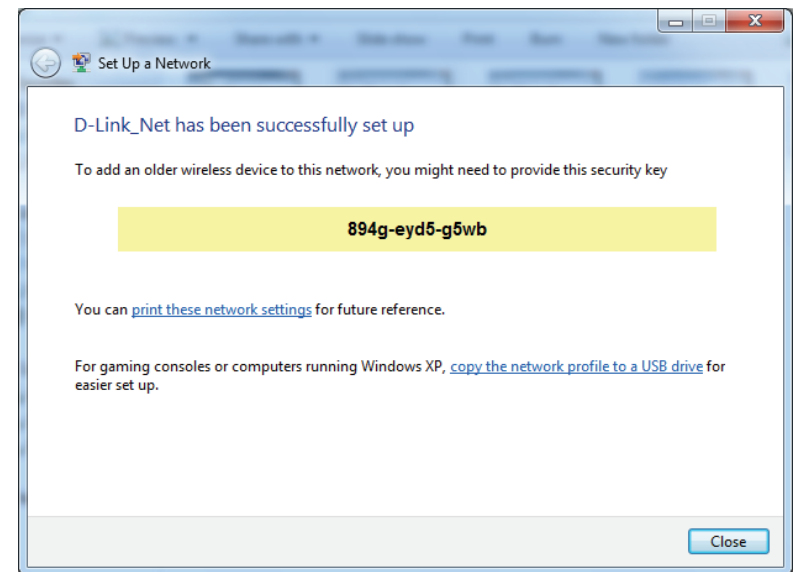

Using Windows Vista®

Windows Vista® users may use the built-in wireless utility. If you are using another company's utility or Windows® 2000, please refer to the user manual of your wireless adapter for help with connecting to a wireless network. Most utilities will have a "site survey" option similar to the Windows Vista® utility as seen below.



If you receive the **Wireless Networks Detected** bubble, click on the center of the bubble to access the utility.

or

Right-click on the wireless computer icon in your system tray (lower-right corner next to the time). Select **Connect to a network**.

The utility will display any available wireless networks in your area. Click on a network (displayed using the SSID) and click the **Connect** button.



If you get a good signal but cannot access the Internet, check you TCP/IP settings for your wireless adapter. Refer to the **Networking Basics** section in this manual for more information.

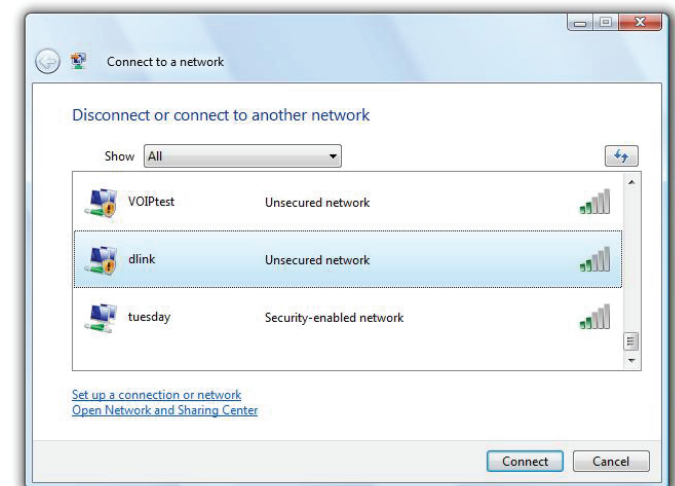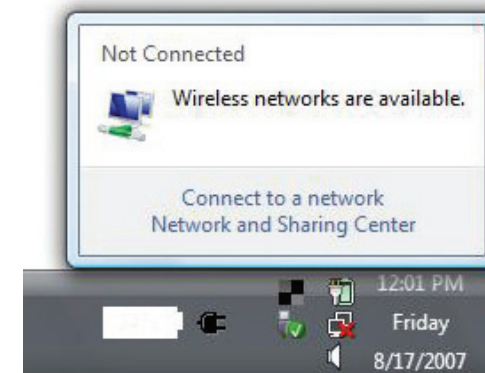

Configure Wireless Security

It is recommended to enable wireless security (WPA/WPA2) on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the security key or passphrase being used.

1. Open the Windows Vista® Wireless Utility by right-clicking on the wireless computer icon in your system tray (lower right corner of screen). Select **Connect to a network**.
2. Highlight the wireless network (SSID) you would like to connect to and click **Connect**.

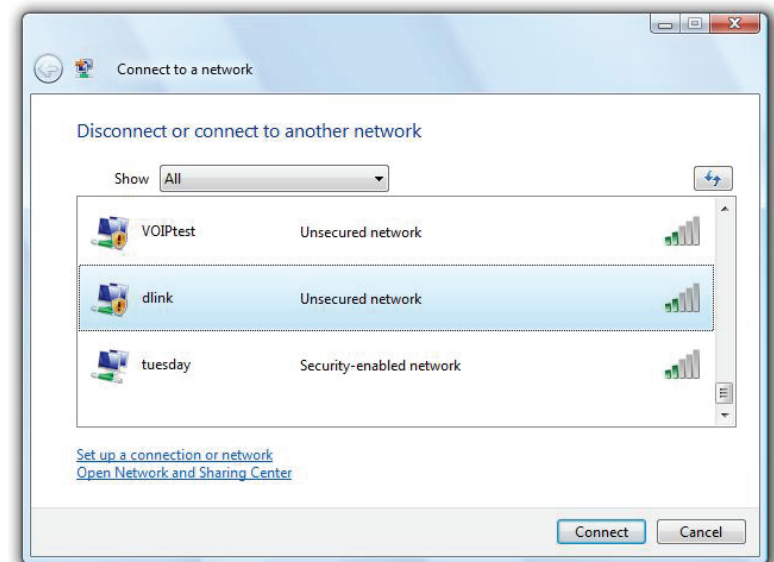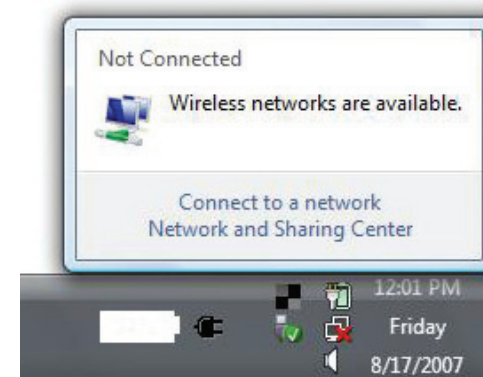

3. Enter the same security key or passphrase that is on your router and click **Connect**.

It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the security settings are correct. The key or passphrase must be exactly the same as on the wireless router.



Using Windows® XP

Windows® XP users may use the built-in wireless utility (Zero Configuration Utility). The following instructions are for Service Pack 2 users. If you are using another company's utility or Windows® 2000, please refer to the user manual of your wireless adapter for help with connecting to a wireless network. Most utilities will have a "site survey" option similar to the Windows® XP utility as seen below.




If you receive the **Wireless Networks Detected** bubble, click on the center of the bubble to access the utility.

or

Right-click on the wireless computer icon in your system tray (lower-right corner next to the time). Select **View Available Wireless Networks**.

The utility will display any available wireless networks in your area. Click on a network (displayed using the SSID) and click the **Connect** button.



If you get a good signal but cannot access the Internet, check you TCP/IP settings for your wireless adapter. Refer to the **Networking Basics** section in this manual for more information.

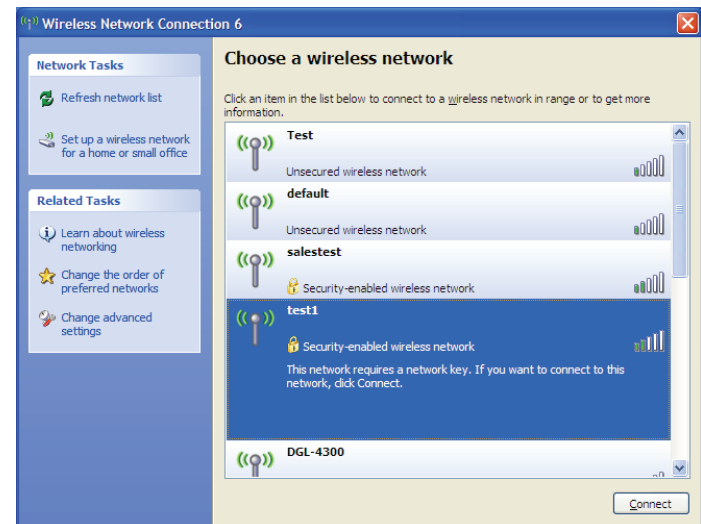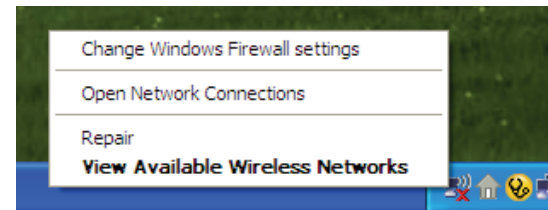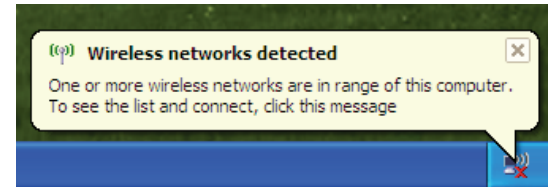

Configure WPA-PSK


It is recommended to enable WPA on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the WPA key being used.

1. Open the Windows® XP Wireless Utility by right-clicking on the wireless computer icon in your system tray (lower-right corner of screen). Select **View Available Wireless Networks**.
2. Highlight the wireless network (SSID) you would like to connect to and click **Connect**.

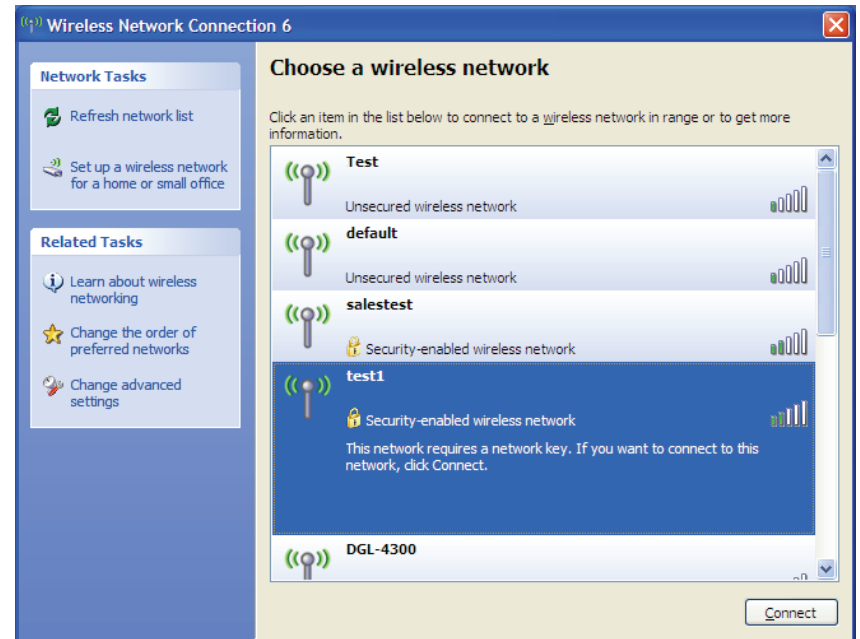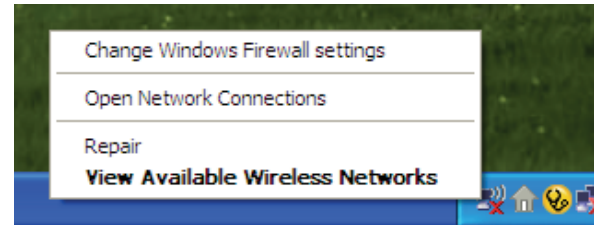

3. The **Wireless Network Connection** box will appear. Enter the WPA-PSK passphrase and click **Connect**.

It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the WPA-PSK settings are correct. The WPA-PSK passphrase must be exactly the same as on the wireless router.

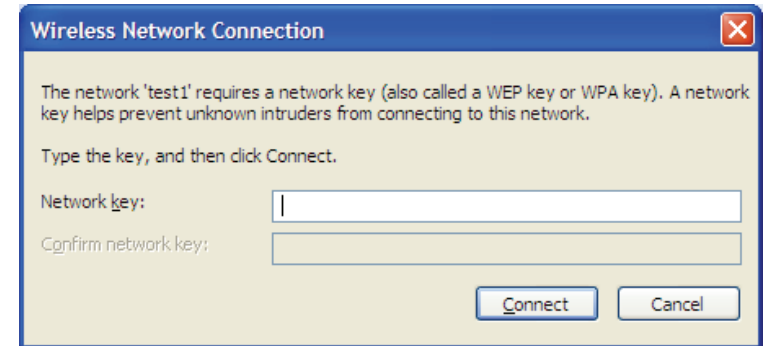

Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the GO-RT-N300. Read the following descriptions if you are having problems. The examples below are illustrated in Windows® XP. If you have a different operating system, the screenshots on your computer will look similar to the following examples.

1. Why can't I access the web-based configuration utility?

When entering the IP address of the D-Link router (192.168.0.1 for example), you are not connecting to a website nor do you have to be connected to the Internet. The device has the utility built-in to a ROM chip in the device itself. Your computer must be on the same IP subnet to connect to the web-based utility.

- Make sure you have an updated Java-enabled web browser. We recommend the following:
 - Microsoft Internet Explorer® 6.0 and higher
 - Mozilla Firefox 3.0 and higher
 - Google™ Chrome 2.0 and higher
 - Apple Safari 3.0 and higher
- Verify physical connectivity by checking for solid link lights on the device. If you do not get a solid link light, try using a different cable or connect to a different port on the device if possible. If the computer is turned off, the link light may not be on.
- Disable any Internet security software running on the computer. Software firewalls such as Zone Alarm, Black Ice, Sygate, Norton Personal Firewall, and Windows® XP firewall may block access to the configuration pages. Check the help files included with your firewall software for more information on disabling or configuring it.

- Configure your Internet settings:

- Go to **Start > Settings > Control Panel**. Double-click the **Internet Options** icon. From the **Security** tab, click the button to restore the settings to their defaults.
 - Click the **Connection** tab and set the dial-up option to Never Dial a Connection. Click the LAN Settings button. Make sure nothing is checked. Click **OK**.
 - Go to the **Advanced** tab and click the button to restore these settings to their defaults. Click **OK** three times.
 - Close your web browser (if open) and open it.
- Access the web management. Open your web browser and enter the IP address of your D-Link router in the address bar. This should open the login page for your web management.
 - If you still cannot access the configuration, unplug the power to the router for 10 seconds and plug back in. Wait about 30 seconds and try accessing the configuration. If you have multiple computers, try connecting using a different computer.

2. What can I do if I forgot my password?

If you forgot your password, you must reset your router. Unfortunately this process will change all your settings back to the factory defaults.

To reset the router, locate the reset button (hole) on the rear panel of the unit. With the router powered on, use a paperclip to hold the button down for 10 seconds. Release the button and the router will go through its reboot process. Wait about 30 seconds to access the router. The default IP address is 192.168.0.1. When logging in, the username is **admin** and leave the password box empty.

3. Why can't I connect to certain sites or send and receive emails when connecting through my router?

If you are having a problem sending or receiving email, or connecting to secure sites such as eBay, banking sites, and Hotmail, we suggest lowering the MTU in increments of ten (Ex. 1492, 1482, 1472, etc).

Note: AOL DSL+ users must use MTU of 1400.

To find the proper MTU Size, you'll have to do a special ping of the destination you're trying to go to. A destination could be another computer, or a URL.

- Click on **Start** and then click **Run**.
- Windows® 95, 98, and Me users type in **command** (Windows® NT, 2000, and XP users type in **cmd**) and press **Enter** (or click **OK**).
- Once the window opens, you'll need to do a special ping. Use the following syntax:

ping [url] [-f] [-l] [MTU value]

Example: **ping yahoo.com -f -l 1472**

```
C:\>ping yahoo.com -f -l 1482
Pinging yahoo.com [66.94.234.13] with 1482 bytes of data:
Packet needs to be fragmented but DF set.
Packet needs to be fragmented but DF set.
Packet needs to be fragmented but DF set.
Packet needs to be fragmented but DF set.

Ping statistics for 66.94.234.13:
    Packets: Sent = 4, Received = 0, Lost = 4 (100% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms

C:\>ping yahoo.com -f -l 1472
Pinging yahoo.com [66.94.234.13] with 1472 bytes of data:
Reply from 66.94.234.13: bytes=1472 time=93ms TTL=52
Reply from 66.94.234.13: bytes=1472 time=109ms TTL=52
Reply from 66.94.234.13: bytes=1472 time=125ms TTL=52
Reply from 66.94.234.13: bytes=1472 time=203ms TTL=52

Ping statistics for 66.94.234.13:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 93ms, Maximum = 203ms, Average = 132ms

C:\>
```

You should start at 1472 and work your way down by 10 each time. Once you get a reply, go up by 2 until you get a fragmented packet. Take that value and add 28 to the value to account for the various TCP/IP headers. For example, let's say that 1452 was the proper value, the actual MTU size would be 1480, which is the optimum for the network we're working with ($1452+28=1480$).

Once you find your MTU, you can now configure your router with the proper MTU size.

To change the MTU rate on your router follow the steps below:

- Open your browser, enter the IP address of your router (192.168.0.1) and click **OK**.
- Enter your username (admin) and password (blank by default). Click **OK** to enter the web configuration page for the device.
- Click on **Setup** and then click **Manual Configure**.
- To change the MTU enter the number in the MTU field and click **Save Settings** to save your settings.
- Test your email. If changing the MTU does not resolve the problem, continue changing the MTU in increments of ten.

Wireless Basics

D-Link wireless products are based on industry standards to provide easy-to-use and compatible high-speed wireless connectivity within your home, business or public access wireless networks. Strictly adhering to the IEEE standard, the D-Link wireless family of products will allow you to securely access the data you want, when and where you want it. You will be able to enjoy the freedom that wireless networking delivers.

A wireless local area network (WLAN) is a cellular computer network that transmits and receives data with radio signals instead of wires. Wireless LANs are used increasingly in both home and office environments, and public areas such as airports, coffee shops and universities. Innovative ways to utilize WLAN technology are helping people to work and communicate more efficiently. Increased mobility and the absence of cabling and other fixed infrastructure have proven to be beneficial for many users.

Wireless users can use the same applications they use on a wired network. Wireless adapter cards used on laptop and desktop systems support the same protocols as Ethernet adapter cards.

Under many circumstances, it may be desirable for mobile network devices to link to a conventional Ethernet LAN in order to use servers, printers or an Internet connection supplied through the wired LAN. A Wireless Router is a device used to provide this link.

What is Wireless?

Wireless or Wi-Fi technology is another way of connecting your computer to the network without using wires. Wi-Fi uses radio frequency to connect wirelessly, so you have the freedom to connect computers anywhere in your home or office network.

Why D-Link Wireless?

D-Link is the worldwide leader and award winning designer, developer, and manufacturer of networking products. D-Link delivers the performance you need at a price you can afford. D-Link has all the products you need to build your network.

How does wireless work?

Wireless works similar to how cordless phones work, through radio signals to transmit data from one point A to point B. But wireless technology has restrictions as to how you can access the network. You must be within the wireless network range area to be able to connect your computer. There are two different types of wireless networks Wireless Local Area Network (WLAN), and Wireless Personal Area Network (WPAN).

Wireless Local Area Network (WLAN)

In a wireless local area network, a device called an Access Point (AP) connects computers to the network. The access point has a small antenna attached to it, which allows it to transmit data back and forth over radio signals. With an indoor access point, the signal can travel up to 300 feet. With an outdoor access point the signal can reach out up to 30 miles to serve places like manufacturing plants, industrial locations, college and high school campuses, airports, golf courses, and many other outdoor venues.

Wireless Personal Area Network (WPAN)

Bluetooth is the industry standard wireless technology used for WPAN. Bluetooth devices in WPAN operate in a range up to 30 feet away.

Compared to WLAN the speed and wireless operation range are both less than WLAN, but in return it doesn't use nearly as much power which makes it ideal for personal devices, such as mobile phones, PDAs, headphones, laptops, speakers, and other devices that operate on batteries.

Who uses wireless?

Wireless technology has become so popular in recent years that almost everyone is using it, whether it's for home, office, business, D-Link has a wireless solution for it.

Home

- Gives everyone at home broadband access
- Surf the web, check email, instant message, etc.
- Gets rid of the cables around the house
- Simple and easy to use

Small Office and Home Office

- Stay on top of everything at home as you would at office
- Remotely access your office network from home
- Share Internet connection and printer with multiple computers
- No need to dedicate office space

Where is wireless used?

Wireless technology is expanding everywhere not just at home or office. People like the freedom of mobility and it's becoming so popular that more and more public facilities now provide wireless access to attract people. The wireless connection in public places are usually called "hotspots".

Using a D-Link Cardbus Adapter with your laptop, you can access the hotspot to connect to the Internet from remote locations like: Airports, Hotels, Coffee Shops, Libraries, Restaurants, and Convention Centers.

Wireless network is easy to setup, but if you're installing it for the first time it could be quite a task not knowing where to start. That's why we've put together a few setup steps and tips to help you through the process of setting up a wireless network.

Tips

Here are a few things to keep in mind, when you install a wireless network.

Centralize your router or Access Point

Make sure you place the router/access point in a centralized location within your network for the best performance. Try to place the router/access point as high as possible in the room, so the signal gets dispersed throughout your home. If you have a two-story home, you may need a repeater to boost the signal to extend the range.

Eliminate Interference

Place home appliances such as cordless telephones, microwaves, and televisions as far away as possible from the router/access point. This would significantly reduce any interference that the appliances might cause since they operate on same frequency.

Security

Don't let you next-door neighbors or intruders connect to your wireless network. Secure your wireless network by turning on the WPA or WEP security feature on the router. Refer to product manual for detail information on how to set it up.

Wireless Modes

There are basically two modes of networking:

- **Infrastructure** – All wireless clients will connect to an access point or wireless router.
- **Ad-Hoc** – Directly connecting to another computer, for peer-to-peer communication, using wireless network adapters on each computer, such as two or more GO-RT-N300 wireless network Cardbus adapters.

An Infrastructure network contains an Access Point or wireless router. All the wireless devices, or clients, will connect to the wireless router or access point.

An Ad-Hoc network contains only clients, such as laptops with wireless cardbus adapters. All the adapters must be in Ad-Hoc mode to communicate.

Networking Basics

Check your IP address


After you install your new D-Link adapter, by default, the TCP/IP settings should be set to obtain an IP address from a DHCP server (i.e. wireless router) automatically. To verify your IP address, please follow the steps below.

Click on **Start > Run**. In the run box type **cmd** and click **OK**. (Windows® 7/Vista® users type *cmd* in the **Start Search** box.)

At the prompt, type **ipconfig** and press **Enter**.

This will display the IP address, subnet mask, and the default gateway of your adapter.

If the address is 0.0.0.0, check your adapter installation, security settings, and the settings on your router. Some firewall software programs may block a DHCP request on newly installed adapters.

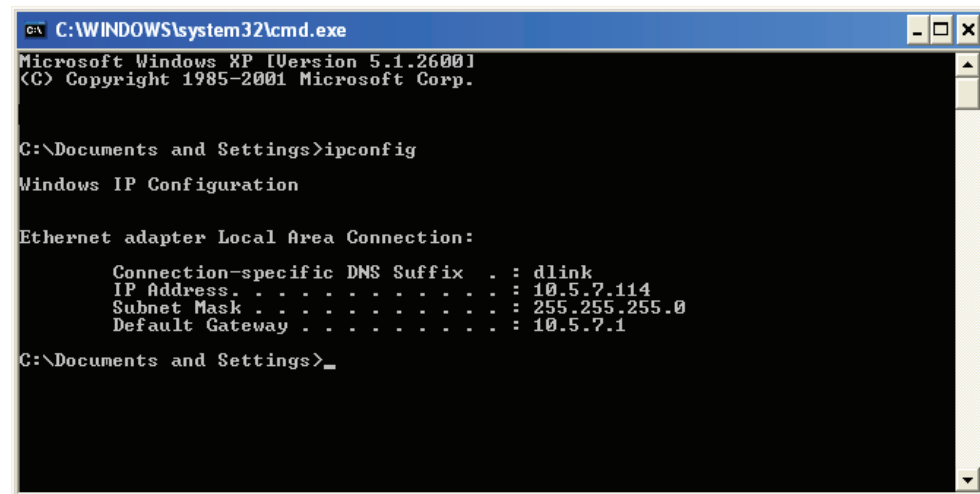

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : dlink
    IP Address . . . . . : 10.5.7.114
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 10.5.7.1

C:\Documents and Settings>
```

Statically Assign an IP address

If you are not using a DHCP capable gateway/router, or you need to assign a static IP address, please follow the steps below:

Step 1

Windows® 7 - Click on **Start > Control Panel > Network and Internet > Network and Sharing Center > Change Adapter Setting.**

Windows Vista® - Click on **Start > Control Panel > Network and Internet > Network and Sharing Center > Manage Network Connections.**

Windows® XP - Click on **Start > Control Panel > Network Connections.**

Windows® 2000 - From the desktop, right-click **My Network Places > Properties.**

Step 2

Right-click on the **Local Area Connection** which represents your network adapter and select **Properties.**

Step 3

Highlight **Internet Protocol (TCP/IP)** and click **Properties.**

Step 4


Click **Use the following IP address** and enter an IP address that is on the same subnet as your network or the LAN IP address on your router.

Example: If the router's LAN IP address is 192.168.0.1, make your IP address 192.168.0.X where X is a number between 2 and 99. Make sure that the number you choose is not in use on the network. Set Default Gateway the same as the LAN IP address of your router (192.168.0.1).

Set Primary DNS the same as the LAN IP address of your router (192.168.0.1). The Secondary DNS is not needed or you may enter a DNS server from your ISP.

Step 5

Click **OK** twice to save your settings.

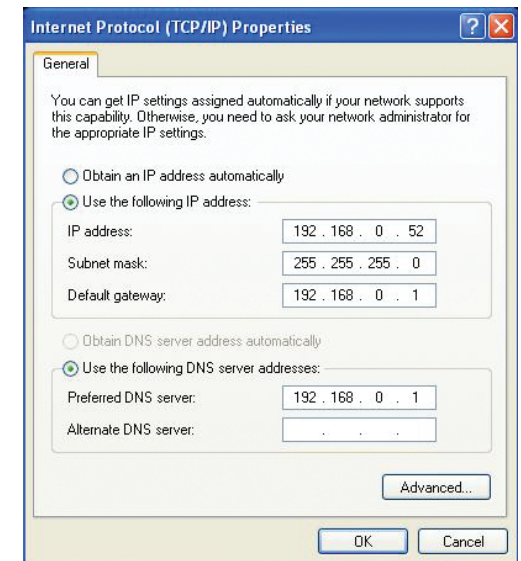

Technical Specifications

Standards

- IEEE 802.11n
- IEEE 802.11g
- IEEE 802.3
- IEEE 802.3u

Security

- WEP™
- WPA™ - Personal/Enterprise
- WPA2™ - Personal/Enterprise

Wireless Signal Rates¹

IEEE 802.11n:

20MHz Channel:

- 150 Mbps (max)

40MHz Channel:

- 300 Mbps (max)

IEEE 802.11g:

- | | | |
|-----------|-----------|-----------|
| • 54 Mbps | • 48 Mbps | • 36 Mbps |
| • 24 Mbps | • 18 Mbps | • 12 Mbps |
| • 11 Mbps | • 9 Mbps | • 6 Mbps |

Wireless Frequency Range² (Europe)

- 2.4 GHz to 2.4835 GHz (802.11g/n)

Operating Temperature

- 0 °C to 40 °C (32 °F to 104 °F)

Storage Temperature

- -20 °C to 65 °C (-4 °F to 149 °F)

Humidity

- 10% minimum (non-condensing)
- 95% maximum (non-condensing)

Safety & Emissions

- CE
- Wi-Fi Certified

Dimensions

- L = 160 mm (6.3 inches)
- W = 120 mm (4.72 inches)
- H = 59 mm (2.32 inches)

¹ Maximum wireless signal rate derived from IEEE Standard 802.11b, 802.11g and 802.11n specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental factors will adversely affect wireless signal range.

² Frequency Range varies depending on country's regulation